



Manual


Elma X One

Elma X One: https://www.elma.sk/product.php?id_product=1018

EAN: 5706445630066



English

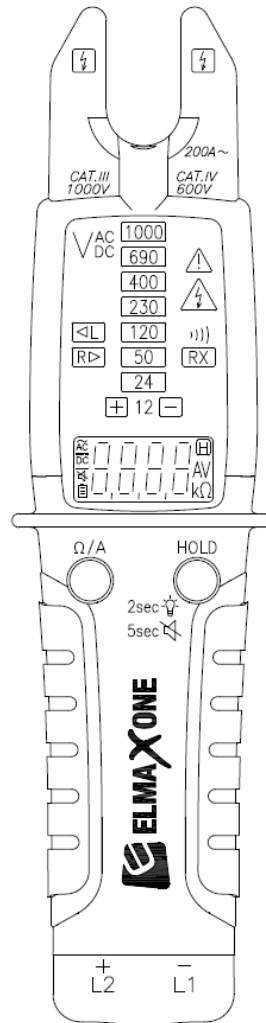

Read First

Safety Information









 


Understand and follow operating instructions carefully.

WARNING

- If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.
- Always use proper terminals, switch position, and range for measurements.
- To reduce the risk of fire or electric shock, do not use this product around explosive gas or in damp locations.
- Verify the Meter operation by measuring a known voltage. If in doubt, have the Meter serviced.
- Do not apply more than the rated voltage, as marked on Meter, between terminals or between any terminal and earth ground.
- Avoid working alone so assistance can be rendered.
- Do not use the Tester if the Tester is not operating properly or if it is wet.
- Individual protective device must be used if hazardous live parts in the installation where the measurement is to be carried out could be accessible.
- Use caution with voltages above 30 VAC rms, 42 VAC peak, or 60 VDC. These voltages pose a shock hazard.
- DO NOT USE the test leads when the internal white insulation layer is exposed.
- DO NOT USE the test leads above maximum ratings of CAT. Environment, voltage and current, that are indicated on the probe and the probe tip guard cap.
- DO NOT USE the test leads without the probe tip guard cap in CAT III and CAT IV environments.
- Probe assemblies to be used for MAINS measurements shall be RATED as appropriate for MEASUREMENT CATEGORY III or IV according to IEC 61010-031 and shall have a voltage RATING of at least the voltage of the circuit to be measured.
- Disconnect circuit power and discharge all high-voltage capacitors before testing resistance, continuity.



Symbols as marked on the Meter and Instruction manual

	Risk of electric shock		Battery
	See instruction manual		AC measurement
	Equipment protected by double or reinforced insulation		Both direct and alternating current
	Do not discard this product or throw away		DC measurement
			Earth
	Conforms to EU directives		Application around and removal from hazardous live conductors is permitted

Maintenance




Do not attempt to repair this Meter. It contains no user serviceable parts. Repair or servicing should only be performed by qualified personnel.

Cleaning

Periodically wipe the case with a dry cloth and detergent. Do not use abrasives or solvents.

Making Basic Measurements

Preparation and Caution Before Measurement


 **Observe the rules** of  Warnings and  Cautions

CAUTION

- When connecting the test leads to the DUT (Device Under Test) connect the common test leads before connecting the live test leads; when removing the test leads, remove the live test leads before removing the common test leads.
- Make sure that the buzzer sound is perceptible before using it under high background noise environment.

Voltage/Continuity/Single Pole Mode

Voltage Measurement

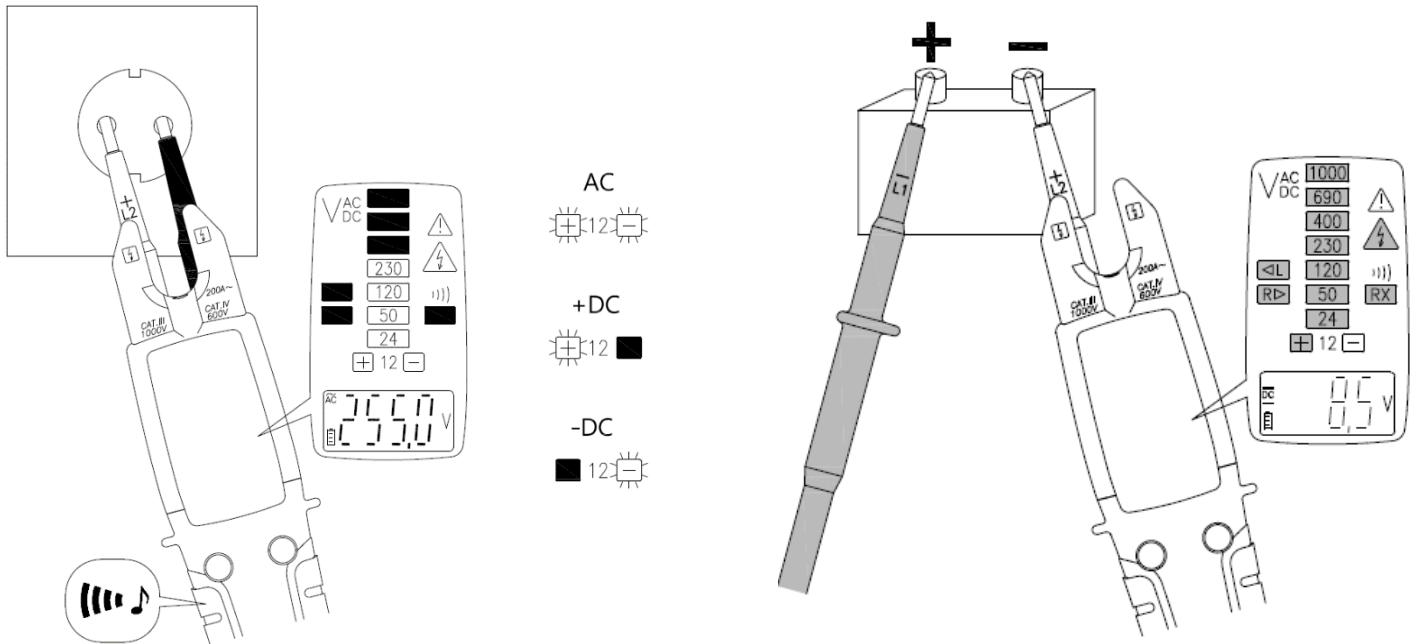


LED  indicates measured voltage is high than ELV limit (50VAC and/or 120VDC).

Warning


- When batteries are not fitted or are exhausted, the tester still work when measuring >45VAC and/or >35VDC.
- Timing Rating (tr): 30 seconds, Recovery Time (rt): 240 seconds, when measuring >300V, recovery time is necessary.
- L/R LED may light up when measuring AC voltage.
- Due to the high internal resistance, capacitive and inductive Voltage (ghost voltage) may be indicated.

Phase Rotation Test

Clockwise Phase Sequence L1-L2-L3(Right)

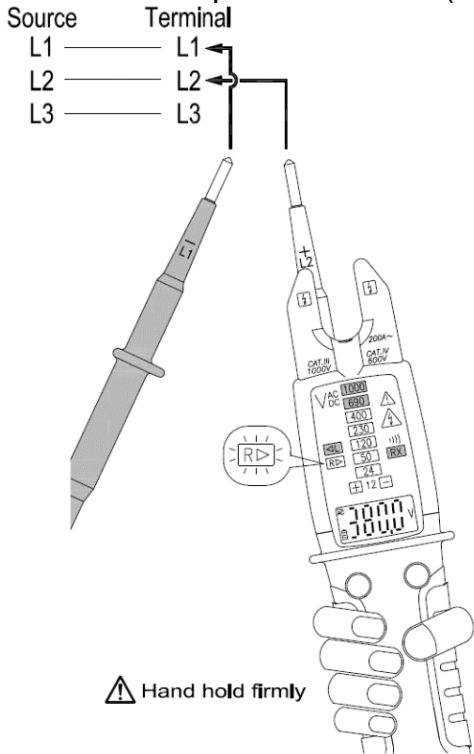

Counter clockwise Phase Sequence L1-L3-L2 (Left)

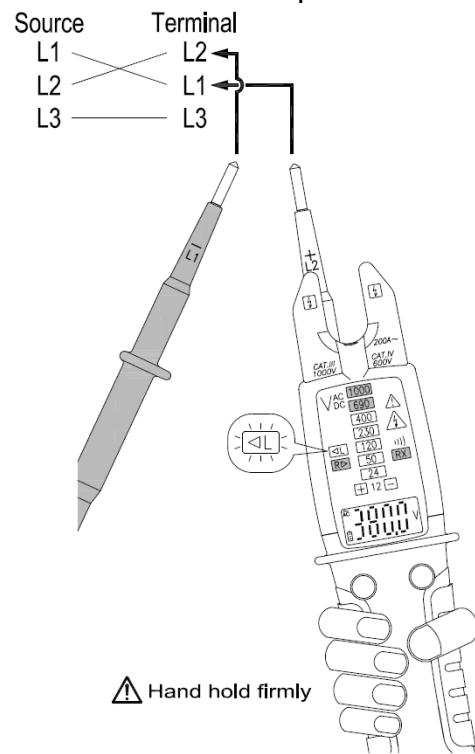


⚠ Warning

Phase Rotation Test works only on 3 phase 4 wire system. The result is unreliable on other systems.

⚠ Note

It is necessary to check the result by test with reverse sequence.


Single Pole Phase Check

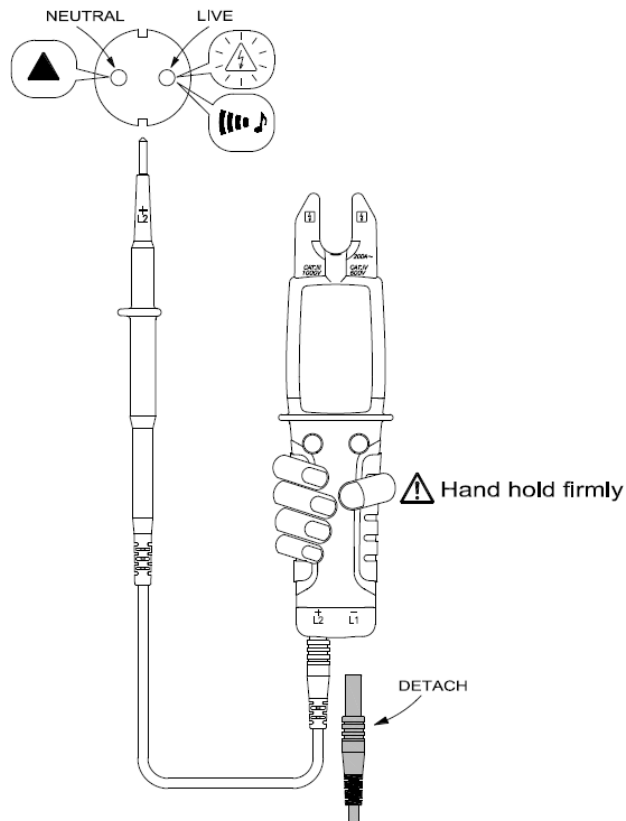


⚠ Warning

- Single Pole Check is available for both test leads. Remove one of test leads before performing check.
- Check with 2 pole tests for safe result.


Continuity Check

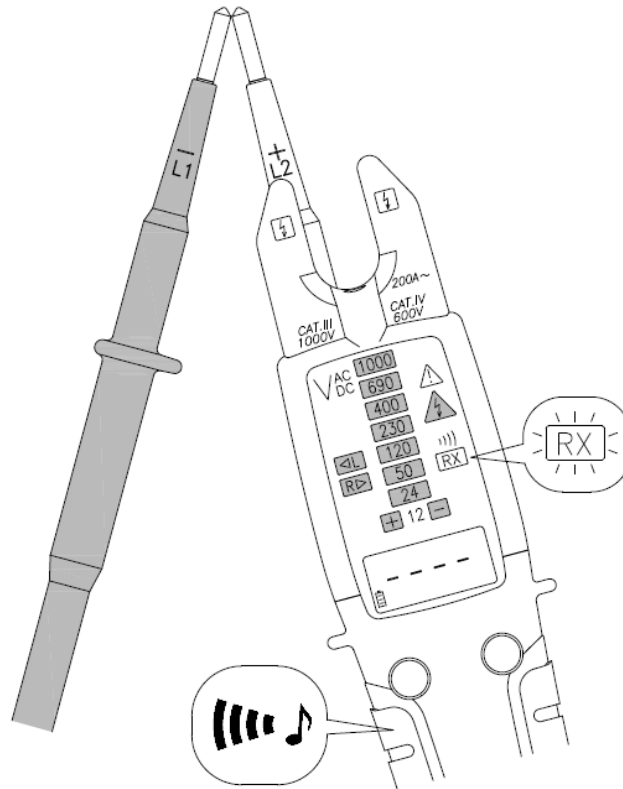

Resistor Mode

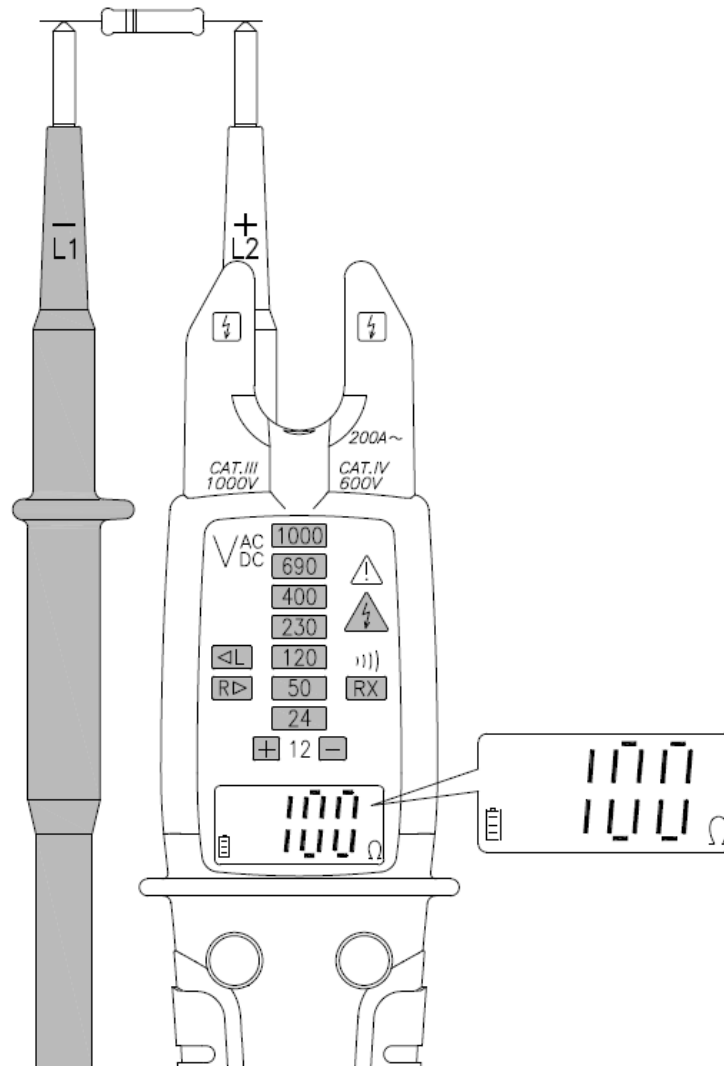

Ampere Mode

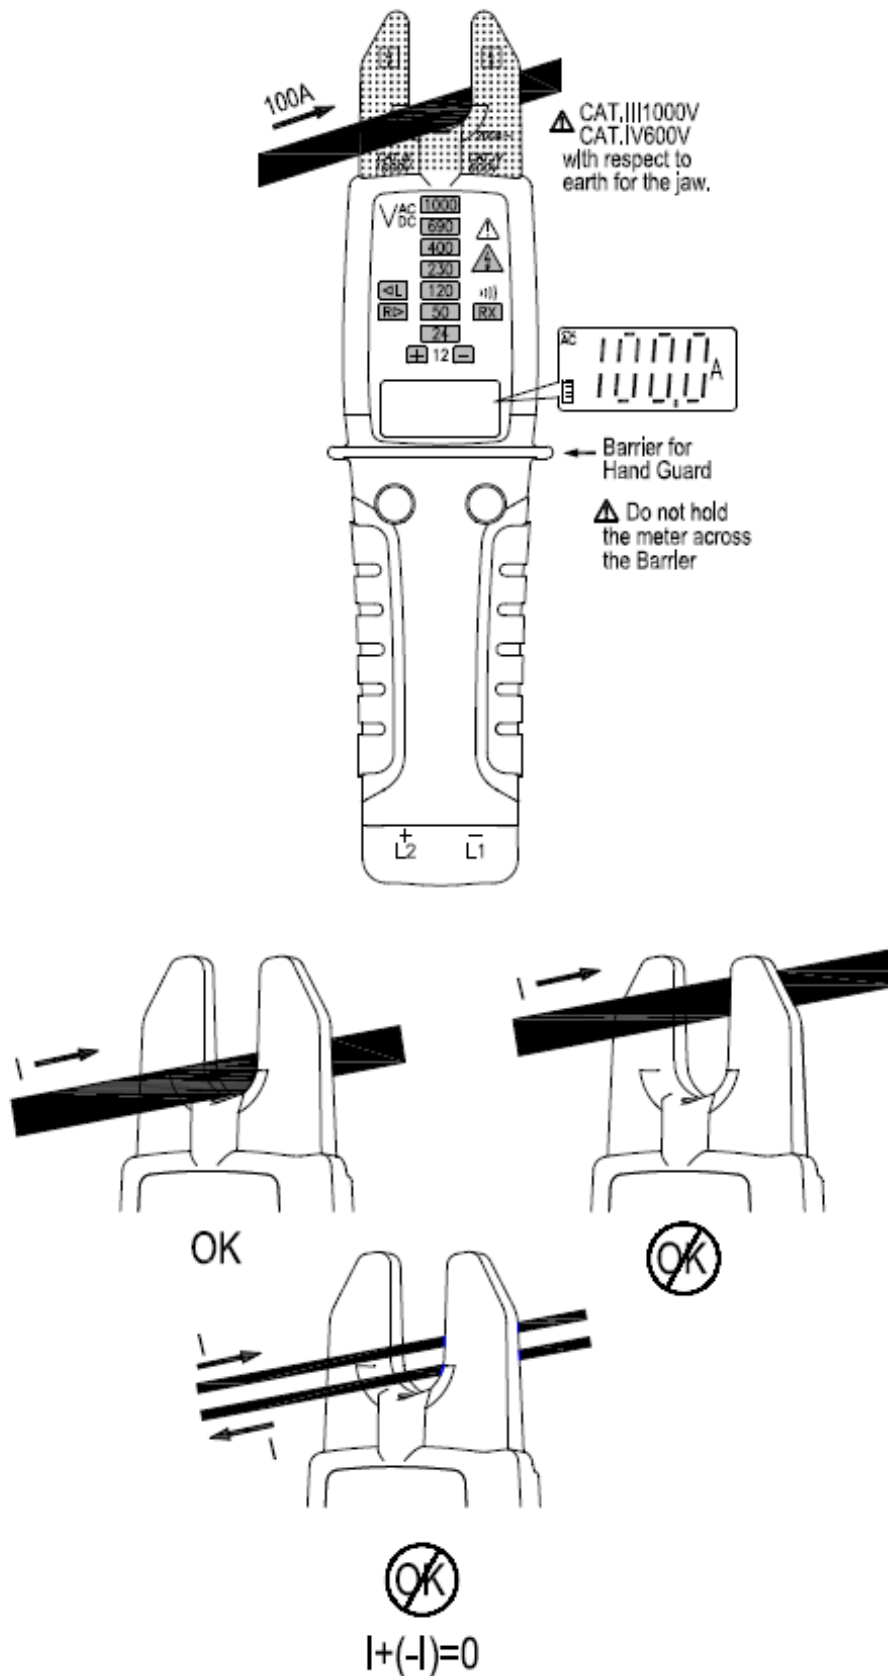


⚠ Warning
The barrier on the body is indicating the limit of safe access of the hand-held part, do not hold over the barrier when in normal use.


⚠ Warning
Do not assemble test lead at the back of the meter while measuring current

Using the Function


HOLD

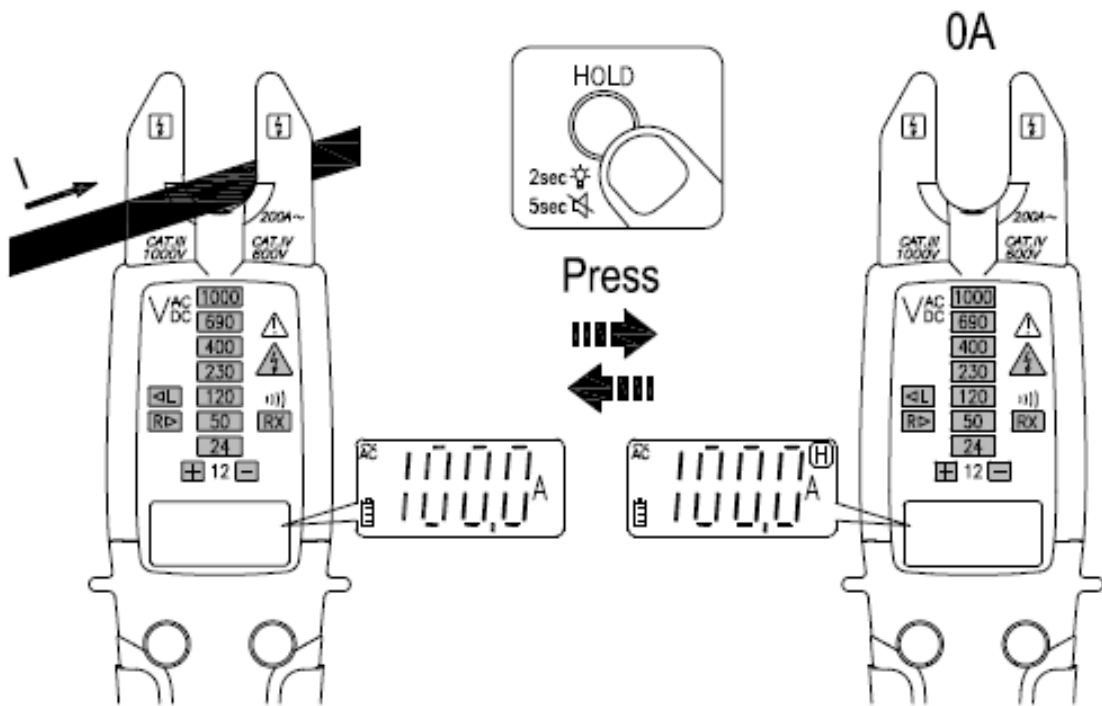


Enable/Disable ELV Warning Voice

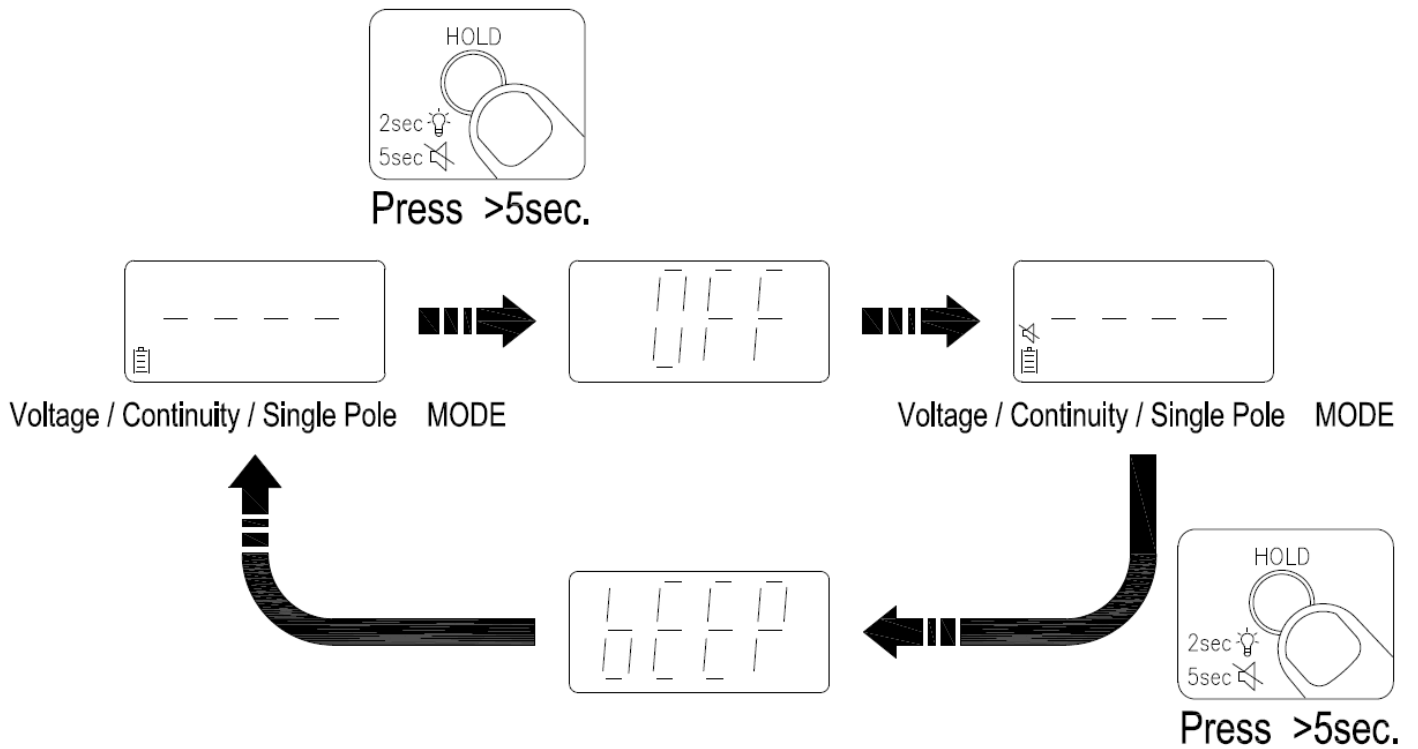

Torch

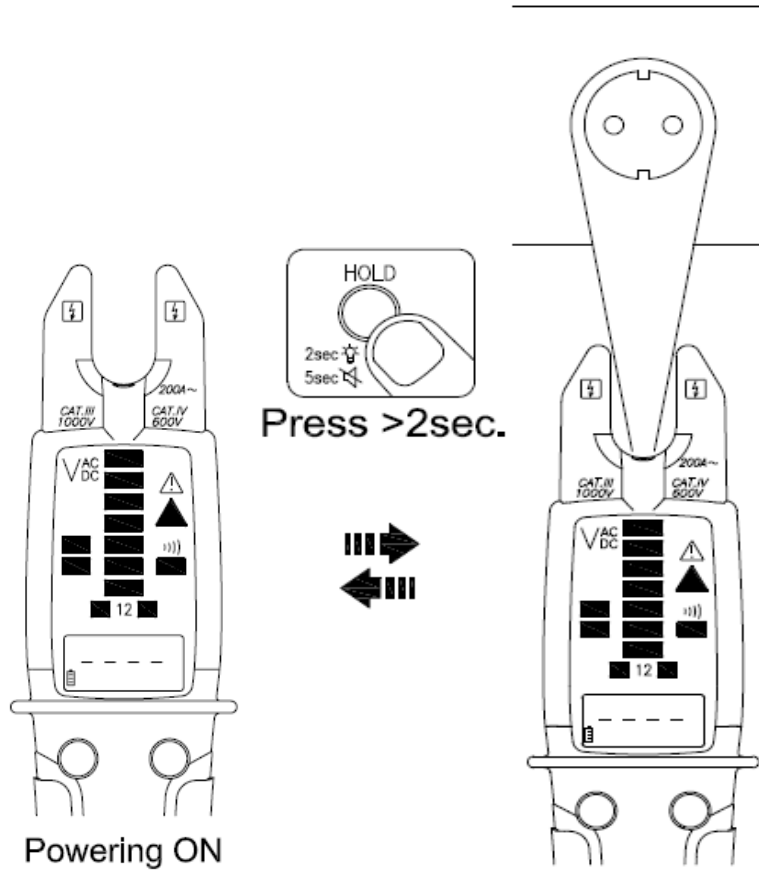


Self-Diagnostic Test

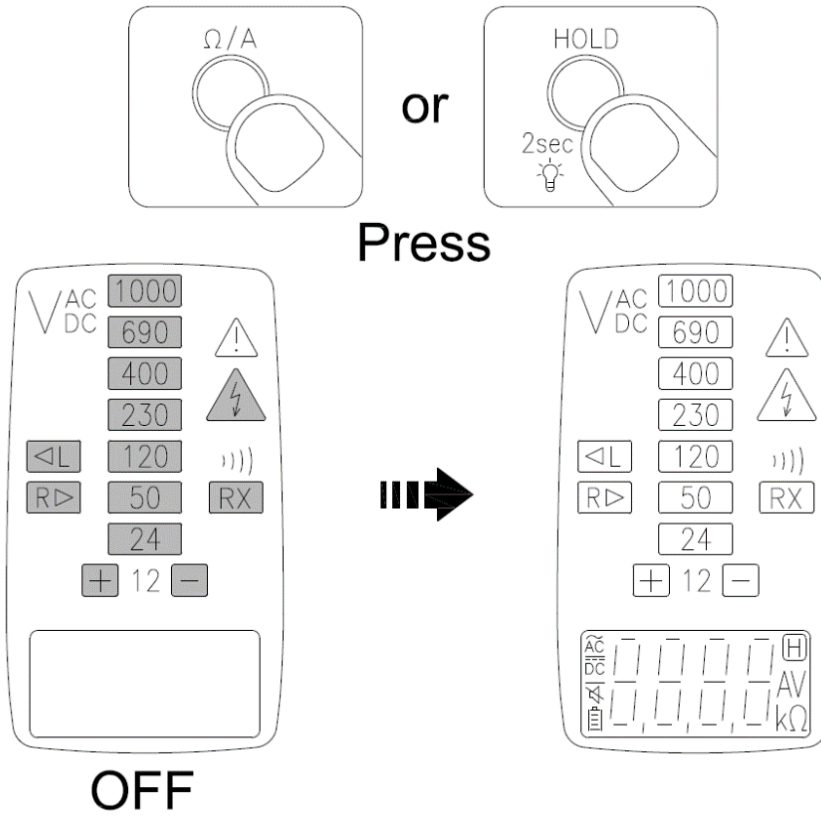


 **Warning**

Do not use the tester when abnormality is found in self-diagnostic test.

Function Button

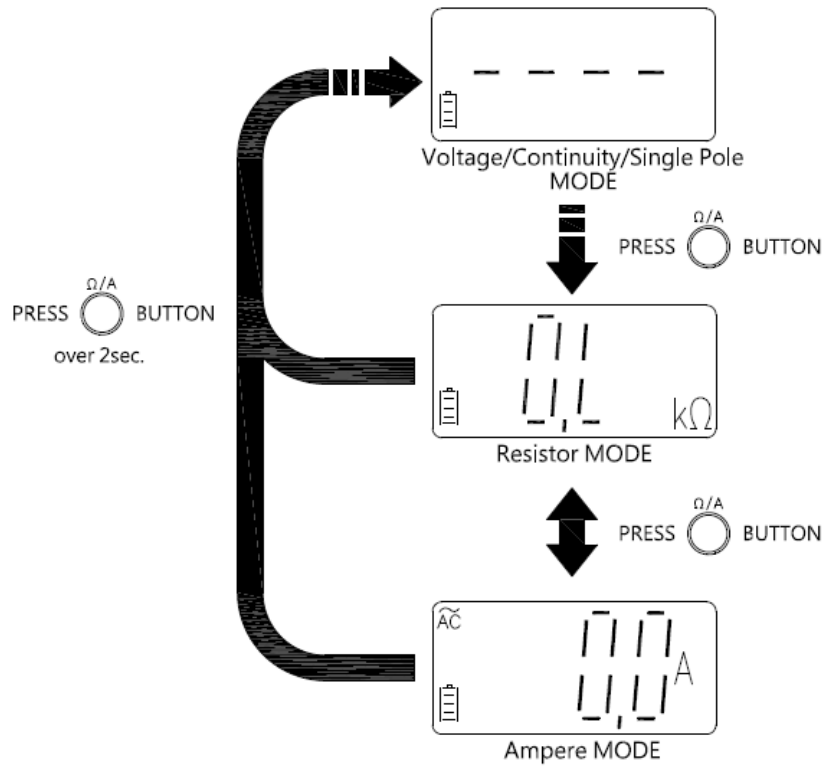


Battery Replacement

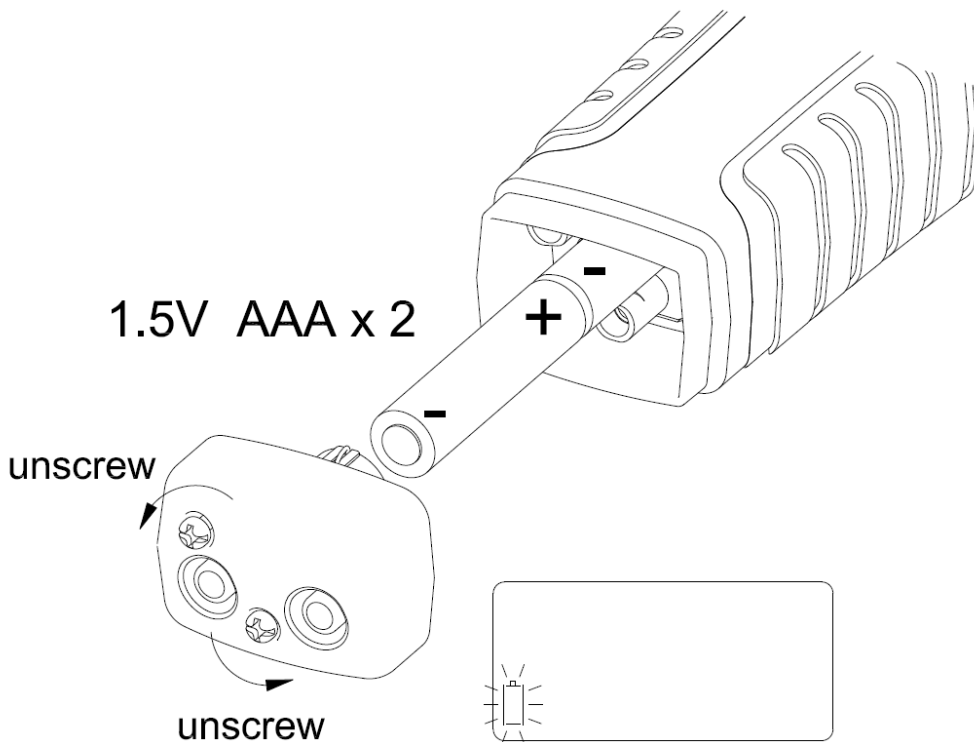

Warning


- To avoid false readings that can lead to electric shock and injury, replace the battery as soon as low battery indicator blinks.
- Remove test lead from Meter before opening the battery door or Meter case

Probe Usage

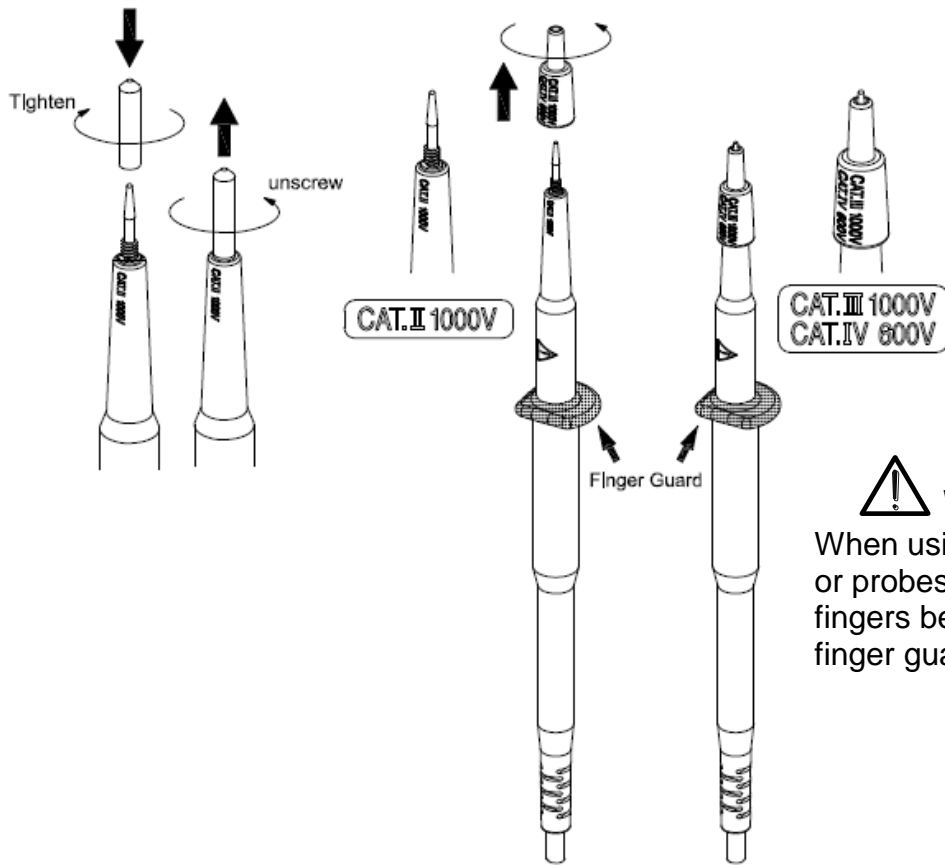

Warning


When using test leads or probes, keep your fingers behind the finger guards.

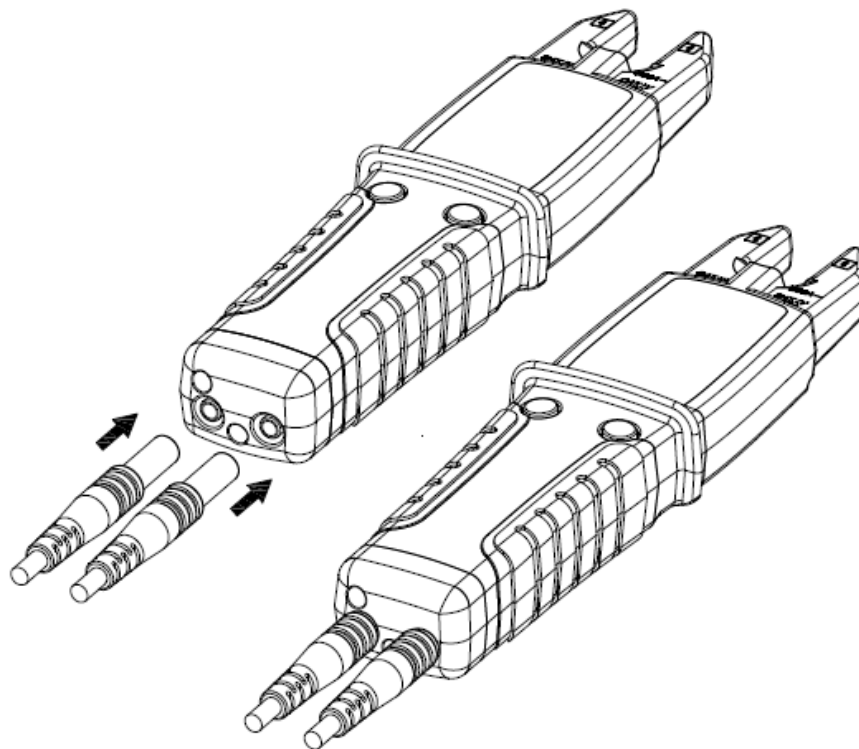

Warning

- For CAT III or CAT IV environments, use the test leads with the probe tip guard cap fixed firmly. Without the probe tip guard cap, the test leads can be used in CAT II environment ONLY.
- Make sure test leads are firmly connected to instrument and other accessories.

Test lead assembly

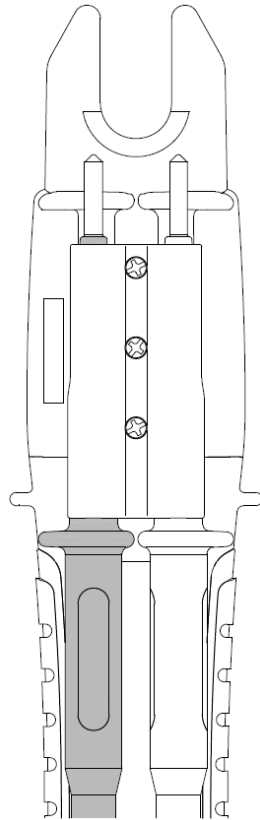


Storage




Warning

Do not assemble test lead at the back of the meter while measuring current

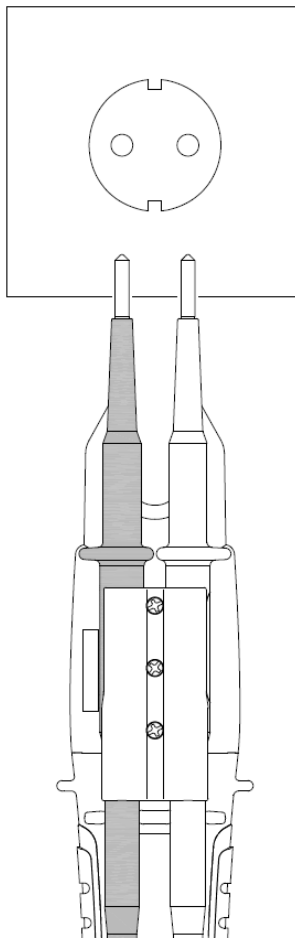

For 19mm power socket

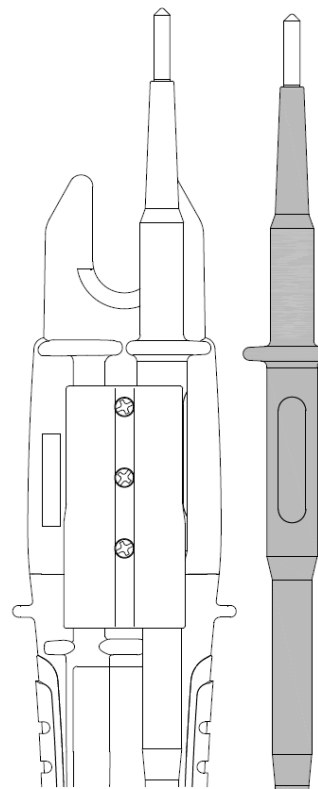

For most application except ampere measurement.

Specifications

1-1 General Specifications

Display Count:	10000 counts.
Overrange Display	"OL" or "- OL"
Refresh Rate:	3 times/second
Dimensions (W x H x D):	57 x 220 x 35 mm
Weight:	200g
Power Requirements	AAA Size Battery x 2 (R03, LR03, 24D, 24A)
Battery Life:	About 2500 operations (based on Alkaline batteries)
Maximum Conductor Size	16mm
Safety Standard Compliance:	EN 61010-1, EN 61010-2-032, EN 61010-2-033, EN 61010-031 for CAT IV 600V, CATIII 1000V EN 62471 EN 61326-1 EN 61243-3

CAT Application field

II	The circuits directly connected to Low-voltage installation
III	The building installation
IV	The source of the Low-voltage installation

1-2 Environmental Conditions

Indoor / Outdoor Use	
Pollution Degree	2
Maximum Operating Altitude	2000m (6562ft)
Operating Temperature & Relative Humidity	-15°C ~ 30°C, ≤80%RH 30°C ~ 40°C, ≤75%RH 40°C ~ 55°C, ≤45%RH
Storage Temperature	-20 to +60°C, 0 to 80% RH (no batteries)
Temperature Coefficient	0,2 x (Specified accuracy) / °C, < 18°C, > 28°C
IP Rating	IP65
Vibration	Random Vibration per MIL-PRF-28800F Class 2
Drop Protection	4 feet drop to hardwood on concrete floor

1-3 Electrical Specifications

Accuracy is given as \pm (% of reading + counts of least significant digit) at $23^{\circ}\text{C} \pm 5^{\circ}\text{C}$, with relative humidity Less than 80% R.H., and is specified for 1 year after calibration.

- **Condition of Auto Power On:**

With batteries fitted:

- > 3,0V or < -8,0V between L2 and L1
- Detect AC signal by Single Pole
- Continuity

Without batteries:

- > | $\pm 35,0\text{V DC}$ | or > 45,0V AC between L2 and L1

• **Auto Power Off:**

The Meter automatically turns off if one of the following conditions are met for about 10 seconds

- The Auto Power On condition is not met.
- Both buttons are not pressed.

The Meter automatically turns off if one of the following conditions are met for about 30 seconds

- The resistance is OL when the Meter is in Resistor mode.
- The current is < 1,0A when the Meter is in Ampere mode

- For > 300V, Time rating (tr): 30 seconds; Recovery time (rt): 240 seconds

• **AC Function**

- ACV and ACA specifications are ac coupled, true RMS.
- For non-sinusoidal waveforms, Additional Accuracy by Crest Factor (C.F.):

Add 1,0% for C.F. 1,0 ~ 2,0

Add 2,5% for C.F. 2,0 ~ 2,5

Add 4,0% for C.F. 2,5 ~ 3,0

- Max. Crest Factor of Input Signal:

3,0 @ 5000 counts

1,5 @ 10000 counts

• **DC Voltage**

	Range	Resolution	Accuracy
With batteries	7,0V to 999,9V	0,1V	±(1,0% + 2D)
Without batteries	35V to 999,9V	0,1V	

Max. Input Current: < 3,5mA @ 1000V

Overload Protection: AC/DC 1000V

• **AC Voltage**

	Range	Resolution	Accuracy
With batteries	6,0V ⁽¹⁾ to 999,9V	0,1V	±(1,5% + 5D)
Without batteries	45V to 999,9V	0,1V	

⁽¹⁾ For > 65Hz, the minimum range is 8,0V.

Frequency Response: 45Hz to 400Hz

Max. Input Current: < 3,5mA @ 1000V

Overload Protection: AC/DC 1000V

• **Resistor**

Range	Resolution	Accuracy
9999Ω	1Ω	±(1,5% + 5D)
50.00kΩ	0,01kΩ	

Output Voltage: about 0,5V

Overload Protection: AC/DC 1000V

• **Continuity**

Continuity: Built-in buzzer sounds when measuring resistance is less than 500Ω. Buzzer doesn't sound when measuring resistance is higher than 4kΩ.

Continuity Indicator: 3kHz Tone Buzzer and RX LED

Response Time of Buzzer: < 100 msec.

Output Voltage: about 0,5V

Overload Protection: AC/DC 1000V

- **AC Ampere**

Range	Resolution	Accuracy
200,0A	0,1A	$\pm(3,0\% + 5D)$

Frequency Response: 45Hz to 65Hz
Overload Protection: AC/DC 200A

- **Rotary Field Indication**

For 3 phase 4 wire system only

Sensitivity: 90V to 1000V (Phase-to-ground)
Frequency Range: 45Hz to 65Hz

“L” LED is on when the signal of L2 probe lead the signal of L1 probe; “R” LED is on when the signal of L1 probe lead the signal L2 probe.

- **Single-Pole Phase Check**

Sensitivity: 90V to 1000V (Phase-to-ground)
Frequency Range: 45Hz to 65Hz
Indicator: 3kHz Tone Buzzer and ELV LED

SAFETY ADVICES

Depending on the internal impedance of this meter there will be a different capability of indicating the presence or absence of operating voltage in case of the presence of interference voltage.

When in contact with the parts to be tested, this meter may discharge temporarily the interference voltage to a level below the ELV, but it will be back to the original value when this meter is removed. When the indication “voltage present” does not appear, it is highly recommended installing earthing equipment before work.

When the indication “voltage present” appears on a part that is expected to be disconnected of the installation, it is highly recommended confirming by another means (e.g. use of an adequate voltage detector, visual check of the disconnecting point of the electric circuit, etc.) that there is no operating voltage on the part to be tested and to conclude that the voltage indicated by this meter is an interference voltage.

SERVICE

Warranty

Elma Instruments provides a one-year guarantee from the time of purchase, the warranty covers function and production defects that may arise. During that period, the supplier will either repair or replace the instrument.

This warranty does not cover fuses, batteries or damage to the instrument due to improper use, or improper handling and attempted unauthorized repair.

Also, the warranty does not cover uncommon use and uncommon handling of the instrument.

The Supplier will not be liable for any personal injury, property or financial loss that may arise from the use of this instrument.



Elma Instruments A/S
Ryttermarken 2
DK-3520 Farum
T: +45 7022 1000
F: +45 7022 1001
info@elma.dk
www.elma.dk

Elma Instruments AS
Garver Ytteborgsvei 83
N-0977 Oslo
T: +47 22 10 42 70
F: +47 22 21 62 00
firma@elma-instruments.no
www.elma-instruments.no

Elma Instruments AB
Pepparvägen 27
S-123 56 Farsta
T: +46 (0)8-447 57 70
F: +46 (0)8-447 57 79
info@elma-instruments.se
www.elma-instruments.se