

2638A

HYDRA Series III Data Acquisition Unit

Users Manual

LIMITED WARRANTY AND LIMITATION OF LIABILITY

Each Fluke product is warranted to be free from defects in material and workmanship under normal use and service. The warranty period is one year and begins on the date of shipment. Parts, product repairs, and services are warranted for 90 days. This warranty extends only to the original buyer or end-user customer of a Fluke authorized reseller, and does not apply to fuses, disposable batteries, or to any product which, in Fluke's opinion, has been misused, altered, neglected, contaminated, or damaged by accident or abnormal conditions of operation or handling. Fluke warrants that software will operate substantially in accordance with its functional specifications for 90 days and that it has been properly recorded on non-defective media. Fluke does not warrant that software will be error free or operate without interruption.

Fluke authorized resellers shall extend this warranty on new and unused products to end-user customers only but have no authority to extend a greater or different warranty on behalf of Fluke. Warranty support is available only if product is purchased through a Fluke authorized sales outlet or Buyer has paid the applicable international price. Fluke reserves the right to invoice Buyer for importation costs of repair/replacement parts when product purchased in one country is submitted for repair in another country.

Fluke's warranty obligation is limited, at Fluke's option, to refund of the purchase price, free of charge repair, or replacement of a defective product which is returned to a Fluke authorized service center within the warranty period.

To obtain warranty service, contact your nearest Fluke authorized service center to obtain return authorization information, then send the product to that service center, with a description of the difficulty, postage and insurance prepaid (FOB Destination). Fluke assumes no risk for damage in transit. Following warranty repair, the product will be returned to Buyer, transportation prepaid (FOB Destination). If Fluke determines that failure was caused by neglect, misuse, contamination, alteration, accident, or abnormal condition of operation or handling, including overvoltage failures caused by use outside the product's specified rating, or normal wear and tear of mechanical components, Fluke will provide an estimate of repair costs and obtain authorization before commencing the work. Following repair, the product will be returned to the Buyer transportation prepaid and the Buyer will be billed for the repair and return transportation charges (FOB Shipping Point).

THIS WARRANTY IS BUYER'S SOLE AND EXCLUSIVE REMEDY AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. FLUKE SHALL NOT BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OR LOSSES, INCLUDING LOSS OF DATA, ARISING FROM ANY CAUSE OR THEORY.

Since some countries or states do not allow limitation of the term of an implied warranty, or exclusion or limitation of incidental or consequential damages, the limitations and exclusions of this warranty may not apply to every buyer. If any provision of this Warranty is held invalid or unenforceable by a court or other decision-maker of competent jurisdiction, such holding will not affect the validity or enforceability of any other provision.

Fluke Corporation P.O. Box 9090 Everett, WA 98206-9090 U.S.A. Fluke Europe B.V. P.O. Box 1186 5602 BD Eindhoven The Netherlands

11/99

Table of Contents

Chapter

1

Title

Page

Product Overview and Specifications	1-1
Introduction	1-1
Product Overview	
Front and Rear-Panel Overview	1-3
Safety Information	
Screen Capture Feature	
About this Manual	1-10
The Product Manual Set	1-10
How to Contact Fluke Calibration	1-11
Calibration and Repair Information	1-11
General Specifications	
Measurement Specifications	
DC Voltage	
DC Voltage Input Characteristics	
DC Voltage Accuracy	
DC Voltage Additional Errors	1-15
AC Voltage	
AC Voltage Input Characteristics	
AC Voltage Accuracy	
Additional Low Frequency Errors	1-16
DC Current	1-16
DC Current Input Characteristics	1-16
DC Current Accuracy	1-17
DC Current Additional Errors	1-17
AC Current	1-17
AC Current Input Characteristics	1-17
AC Current Accuracy	1-18
Additional Low Frequency Errors	1-18
Frequency	1-18
Frequency Accuracy	
Resistance	
Resistance Input Characteristics	1-19
Resistance Accuracy	1-19
Resistance Additional Errors	1-19

2

3

RTD Temperature Accuracy	1
RTD Measurement Characteristics	1
Thermistor	1
Thermistor Temperature Accuracy	1
Thermistor Measurement Characteristics	
Thermocouple	
Thermocouple Temperature Accuracy	
Thermocouple Measurement Characteristics	
Digital I/O	
Totalizer	
Trigger	
Alarm Output	
2638A-100 Universal Input Module	
General	
Initial Setup and Configuration	
Introduction	
Set the Regional Voltage	
Connect to Mains Power	
Set the Handle Position	
Power On and Standby	
Warm-Up the Product	
Configure the Product	
Input Module and Relay Card Installation	
Set Up Security	2
Input and Channel Configuration	3
-	
Introduction	3
Introduction Input Wiring	
Introduction Input Wiring The Universal Input Module	
Introduction Input Wiring The Universal Input Module Wiring Safety and Considerations	
Introduction Input Wiring The Universal Input Module Wiring Safety and Considerations	
Introduction Input Wiring The Universal Input Module Wiring Safety and Considerations 3-Wire and 4-Wire Sense Input Configuration Input Types and Wiring Diagrams	
Introduction Input Wiring The Universal Input Module Wiring Safety and Considerations 3-Wire and 4-Wire Sense Input Configuration Input Types and Wiring Diagrams Input Wiring Instructions	
Introduction. Input Wiring The Universal Input Module Wiring Safety and Considerations	
Introduction. Input Wiring. The Universal Input Module Wiring Safety and Considerations. 3-Wire and 4-Wire Sense Input Configuration. Input Types and Wiring Diagrams Input Wiring Instructions Channel Configuration. About Channel Numbers	
Introduction Input Wiring The Universal Input Module Wiring Safety and Considerations 3-Wire and 4-Wire Sense Input Configuration Input Types and Wiring Diagrams Input Wiring Instructions Channel Configuration About Channel Numbers Basic Channel Operations	
Introduction Input Wiring The Universal Input Module Wiring Safety and Considerations 3-Wire and 4-Wire Sense Input Configuration Input Types and Wiring Diagrams Input Wiring Instructions Channel Configuration About Channel Numbers Basic Channel Operations Open the Channel Setup Menu	
Introduction. Input Wiring The Universal Input Module Wiring Safety and Considerations 3-Wire and 4-Wire Sense Input Configuration Input Types and Wiring Diagrams Input Wiring Instructions Channel Configuration About Channel Numbers Basic Channel Operations Open the Channel Setup Menu Set Channels to ON or OFF	
Introduction. Input Wiring The Universal Input Module Wiring Safety and Considerations 3-Wire and 4-Wire Sense Input Configuration Input Types and Wiring Diagrams Input Wiring Instructions Channel Configuration About Channel Numbers Basic Channel Operations Open the Channel Setup Menu Set Channels to ON or OFF Verify a Channel	
Introduction. Input Wiring The Universal Input Module Wiring Safety and Considerations. 3-Wire and 4-Wire Sense Input Configuration. Input Types and Wiring Diagrams Input Wiring Instructions Channel Configuration. About Channel Numbers Basic Channel Operations. Open the Channel Setup Menu Set Channels to ON or OFF. Verify a Channel Zero a Channel.	
Introduction. Input Wiring. The Universal Input Module. Wiring Safety and Considerations. 3-Wire and 4-Wire Sense Input Configuration. Input Types and Wiring Diagrams. Input Wiring Instructions. Channel Configuration. About Channel Numbers. Basic Channel Operations. Open the Channel Setup Menu Set Channels to ON or OFF. Verify a Channel. Zero a Channel. Copy a Channel.	
Introduction. Input Wiring. The Universal Input Module. Wiring Safety and Considerations. 3-Wire and 4-Wire Sense Input Configuration. Input Types and Wiring Diagrams. Input Wiring Instructions. Channel Configuration. About Channel Numbers. Basic Channel Operations. Open the Channel Setup Menu Set Channels to ON or OFF. Verify a Channel. Zero a Channel. Copy a Channel. Save or Load a Channel Configuration (Setup File).	
Introduction. Input Wiring. The Universal Input Module. Wiring Safety and Considerations. 3-Wire and 4-Wire Sense Input Configuration. Input Types and Wiring Diagrams. Input Wiring Instructions. Channel Configuration. About Channel Numbers. Basic Channel Operations. Open the Channel Setup Menu Set Channels to ON or OFF. Verify a Channel. Zero a Channel. Copy a Channel. Save or Load a Channel Configuration (Setup File). Reset the Channel and Test Configuration.	
Introduction. Input Wiring. The Universal Input Module. Wiring Safety and Considerations. 3-Wire and 4-Wire Sense Input Configuration. Input Types and Wiring Diagrams. Input Wiring Instructions. Channel Configuration. About Channel Numbers. Basic Channel Operations. Open the Channel Setup Menu Set Channels to ON or OFF. Verify a Channel. Zero a Channel. Copy a Channel. Save or Load a Channel Configuration (Setup File). Reset the Channel and Test Configuration. Analog Channel Configuration (Ch001, Ch101 to Ch322).	
Introduction Input Wiring. The Universal Input Module. Wiring Safety and Considerations. 3-Wire and 4-Wire Sense Input Configuration. Input Types and Wiring Diagrams. Input Wiring Instructions. Channel Configuration. About Channel Numbers. Basic Channel Operations. Open the Channel Setup Menu Set Channels to ON or OFF. Verify a Channel. Zero a Channel. Copy a Channel. Save or Load a Channel Configuration (Setup File). Reset the Channel and Test Configuration. Analog Channel Configuration (Ch001, Ch101 to Ch322) Current and Voltage Channels.	
Introduction Input Wiring. The Universal Input Module. Wiring Safety and Considerations. 3-Wire and 4-Wire Sense Input Configuration. Input Types and Wiring Diagrams Input Wiring Instructions Channel Configuration. About Channel Numbers Basic Channel Numbers. Basic Channel Operations Open the Channel Setup Menu Set Channels to ON or OFF Verify a Channel Zero a Channel Copy a Channel Save or Load a Channel Configuration (Setup File) Reset the Channel and Test Configuration. Analog Channel Configuration (Ch001, Ch101 to Ch322) Current and Voltage Channels Resistance Channels	
Introduction. Input Wiring. The Universal Input Module. Wiring Safety and Considerations. 3-Wire and 4-Wire Sense Input Configuration. Input Types and Wiring Diagrams. Input Wiring Instructions. Channel Configuration. About Channel Numbers. Basic Channel Numbers. Basic Channel Operations. Open the Channel Setup Menu Set Channels to ON or OFF. Verify a Channel. Zero a Channel. Copy a Channel. Save or Load a Channel Configuration (Setup File). Reset the Channel and Test Configuration. Analog Channel Configuration (Ch001, Ch101 to Ch322). Current and Voltage Channels. Resistance Channels. Thermocouple Channels.	
Introduction. Input Wiring. The Universal Input Module. Wiring Safety and Considerations. 3-Wire and 4-Wire Sense Input Configuration. Input Types and Wiring Diagrams. Input Wiring Instructions Channel Configuration. About Channel Numbers. Basic Channel Operations. Open the Channel Setup Menu Set Channels to ON or OFF. Verify a Channel. Zero a Channel. Copy a Channel. Save or Load a Channel Configuration (Setup File). Reset the Channel and Test Configuration. Analog Channel Configuration (Ch001, Ch101 to Ch322). Current and Voltage Channels. Thermocouple Channels. Frequency Channels.	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~
Introduction Input Wiring. The Universal Input Module. Wiring Safety and Considerations. 3-Wire and 4-Wire Sense Input Configuration. Input Types and Wiring Diagrams Input Wiring Instructions Channel Configuration. About Channel Numbers. Basic Channel Operations. Open the Channel Setup Menu Set Channels to ON or OFF. Verify a Channel. Zero a Channel. Copy a Channel. Save or Load a Channel Configuration (Setup File). Reset the Channel and Test Configuration. Analog Channel Configuration (Ch001, Ch101 to Ch322). Current and Voltage Channels. Resistance Channels. Thermocouple Channels. Frequency Channels. Thermistor Channels.	
Introduction Input Wiring The Universal Input Module Wiring Safety and Considerations 3-Wire and 4-Wire Sense Input Configuration Input Types and Wiring Diagrams Input Wiring Instructions Channel Configuration About Channel Numbers Basic Channel Operations Open the Channel Setup Menu Set Channels to ON or OFF Verify a Channel Zero a Channel Copy a Channel Save or Load a Channel Configuration (Setup File) Reset the Channel and Test Configuration Analog Channel Configuration (Ch001, Ch101 to Ch322) Current and Voltage Channels Thermocouple Channels Frequency Channels Frequency Channels PRT Channels	3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3
Introduction	33333333333333333333333333333333333333
Introduction Input Wiring The Universal Input Module Wiring Safety and Considerations 3-Wire and 4-Wire Sense Input Configuration Input Types and Wiring Diagrams Input Wiring Instructions Channel Configuration About Channel Numbers Basic Channel Operations Open the Channel Setup Menu Set Channels to ON or OFF Verify a Channel Zero a Channel Copy a Channel Save or Load a Channel Configuration (Setup File) Reset the Channel and Test Configuration Analog Channel Configuration (Ch001, Ch101 to Ch322) Current and Voltage Channels Thermocouple Channels Frequency Channels Frequency Channels Thermistor Channels PRT Channels	

	Read Mode	3-24
	Debounce	3-24
	Math Channel Configuration (Ch501 to Ch520)	
	Mx+B, Alarms, and Channel Options.	
	Mx+B Scaling	
	HI and LO Channel Alarms	
	Channel Delay	
	Rate of Change	
	NPLC	
	Input Impedance	
	Bandwidth	3-33
	Display As	3-33
	Open Detect	3-33
4	Scan/Monitor, Record, and Data	4-1
	Introduction	
	Scan	
	About Scan Timing and Sampling	
	Configure a Scan	
	Trigger Type	
	Auto Recording	
	File Destination	4-7
	Sample Rate	4-7
	Data Security	
	Temperature Unit	
	Align Channels	
	Automatic Power Loss Scan Resume	
	Basic Scan Procedures.	
	Start a Scan	
	View Scan Data and Statistics	
	Graph the Measurements	
	Monitor	
	Record	
	Record Measurement Data	
	Memory Consumption for Recorded Data	
	Open and View Measurement Data on a PC	
	How to Read the Setup CSV File	4-17
	How to Read the Data CSV File	4-19
5	DMM Operation	5-1
	Introduction	5-1
	About the DMM Function	
	Input Type Selection and Range Adjustment	
	More Functions (PT385 or PT392)	
	Relative Measurements	
	Graph the Measurements	
	Measurement Statistics	5-4
6	Maintenance and Care	6-1
	Introduction	6-1
	Clean the Product	
	Replace the Fuse	
	Memory Reset and Factory Reset	
	Firmware Update	
	I minware Opuate	0-5

iii

	User-Replaceable Parts and Accessories	6-5
7	Error Messages and Troubleshooting	7-1
	Introduction	7-1
	Error Messages	7-1
	Troubleshooting	7-17

List of Tables

Table

Title

Page

1-1.	Front-Panel Features	1-3
1-2.	Rear-Panel Features	1-5
1-3.	Symbols	1-7
2-1.	Fuses	
2-2.	Instrument Setup Menu	2-6
3-1.	Types of Inputs	3-5
3-2.	Channel Types and Numbers	3-8
3-3.	Channel Setup Menu	
3-4.	Current and Voltage Channel Configuration	3-17
3-5.	Resistance Channel Configuration	3-18
3-6.	Thermocouple Channel Configuration	3-19
3-7.	Frequency Channel Configuration	3-20
3-8.	Thermistor Channel Setup	3-21
3-9.	PRT Channel Setup	3-22
3-10.	Totalizer Channel Configuration	3-25
3-11.	Math Channel Formulas	
3-12.	Math Channel Configuration	3-28
4-1.	The Scan Menu	4-2
4-2.	Settling Time Delay Values	4-4
4-3.	Scan Sample Rates	4-8
4-4.	Scan Statistics	4-12
4-5.	Scan Data Memory Usage	4-15
5-1.	Statistics	5-4
6-1.	Fuses	6-1
6-2.	Comparison of the Memory Clear Functions	6-2
6-3.	User-Replaceable Parts and Accessories	6-5
7-1.	Error Messages	7-1
7-2.	Troublehooting Chart	

2638A Users Manual

List of Figures

Figure

Title

Page

1-1.	Screen Capture	1-9
2-1.	Fuse Replacement and Line-Voltage Selection	2-2
2-2.	Mains Power Cord Connection	
2-3.	Handle Positions and Boot Removal	2-4
2-4.	Main Power Switch and Standby Key	2-5
2-5.	Module Indicator Example	2-8
2-6.	Relay Card Installation.	2-9
3-1.	2-Wire, 3-Wire, and 4-Wire Example Connections	3-2
3-2.	3-Wire and 4-Wire Channel Reservation	3-4
3-3.	Module Indicator (Input Module Installed Shown)	3-7
3-4.	Example Channel Assignment	3-9
3-5.	Channel Status Indicators	
3-6.	Zero Function	3-13
3-7.	DIO Connector	
3-8.	Totalizer Input (TOT)	3-24
3-9.	Rear-Panel Alarm Outputs	3-31
3-10.	Alarm Output Example	3-31
4-1.	Scan Data	4-2
4-2.	Illustration of a Scan Sweep	4-4
4-3.	Test Setup Menu Example	4-6
4-4.	Scan Data	4-11
4-5.	Graph Feature	4-12
4-6.	Monitor Menu	4-13
4-7.	Scan Data File Name Convention	4-16
4-8.	Setup.csv and Dat00001.csv Files	4-17
5-1.	Example Voltage Front-Panel Connection	5-1
5-2.	Input Function Selection	5-2
5-3.	Relative Measurement	5-3
5-4.	Graph Function	5-3
5-5.	DMM Statistics	5-4
6-1.	Fuse Replacement	6-2

2638A Users Manual

fChapter 1 Product Overview and Specifications

Introduction

This chapter supplies information about the Product, the manual set, safety information, contact information, and specifications.

Product Overview

The Fluke 2638A HYDRA Series III Data Acquisition Unit (the Product or Instrument) is a portable bench-top data logger that measures and records dc volts, ac volts, dc current, ac current, resistance, frequency, and temperature (see Table 1-1). See the Specifications section for information on the types and ranges of the measurement inputs the Product can accept.

Features of the Product include:

• **Scan** – Sequentially scan up to 67 analog channels per scan sweep. In addition, the Product also has 20 math channels, one DIO channel, and one TOT channel that can be included in scan. A scan can be manually controlled from the front panel or triggered with a variety of triggers such a timer, an alarm, an external source, or a remote SCPI command.

While a scan is in progress, all channel values can be viewed on the display in a spreadsheet format along with statistics such as average, standard deviation, minimum, maximum, peak-to-peak, and rate-of-change. With the Graph feature, channel measurement data for up to four channels can be plotted and viewed on the display. Users can toggle the data mode with a softkey to view live data or historical data.

- **Monitor** View the measurement value or the statistics of a single channel. Monitor is an independent feature that can be used while a scan is in progress or inactive. Much like the Scan feature, the statistics of the single measurement can be viewed on the display or be shown in a graph.
- **Data Storage** Store up to 20 Mb of data and channel setup files directly to the internal non-volatile memory or an external USB drive. Data can also be transferred to a PC with a USB drive or LAN TCP/IP interface at the rear of the unit with SCPI interface command sets.

- Alarms Each channel can be assigned two independent alarms to indicate when either an upper (HI) or lower (LO) range has been exceeded. The alarms can be configured to output a digital signal from the rear-panel alarm output for control of external devices.
- **Digital I/O (DIO)** The Product is equipped with a digital 8-bit transistor-transistor logic (TTL) port that can sense and output. When the DIO channel is included in the scan list, the value of this port is recorded in the scan data record on each scan with a value range of 0 to 255 based on the port state when it is read.
- **Totalizer** The Product is equipped with a unidirectional, resettable totalizer with an input count capability of 1,048,575 (20 bits). Counter increment is accomplished through a change to a digital signal or contact closure to the totalizer input terminals on the rear of the Instrument.
- **Digital Multimeter Functionality (DMM)** Function that presents the user with familiar DMM features and controls like a standard bench DMM. The DMM can show 6 ½ digits on the display. To visualize trend data, the DMM provides additional functionality to graph and see measurement statistics.
- **Remote Operation –** Remotely operate the Product with remote SCPI commands or the FlukeDAQ application software over a rear-panel USB or LAN TCP/IP connection.

Front and Rear-Panel Overview

Table 1-1 identifies and describes the front-panel features and Table 1-2 identifies and describes the rear-panel features.

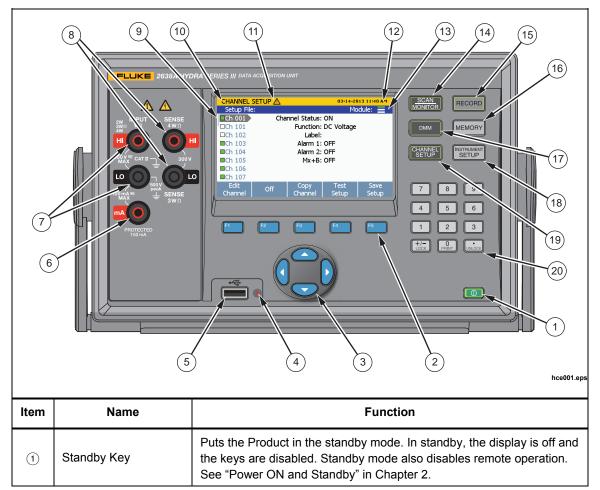


Table 1-1. Front-Panel Features


Item	Name	Function	
2	Function Softkeys	Function softkeys to open submenus and set selections. The function of the softkey changes with each menu and is shown above the softkey on the display.	
3	Arrow Keys	Scroll menus, increase or decrease values, and highlight selections. The keys also let the user cycle through measurement values in data menus and also change the view of graphs.	
(4)	USB Data Transfer Indicator	Red LED that illuminates when the USB drive is recognized and flashes red when data is transferred to or from the USB drive. Caution To prevent data loss, do not remove the USB drive when the LED is flashing.	
5	Front-Panel USB Port	USB port to insert a USB drive.	
6	Current Input Terminal	Input terminal to make current measurements up to 100 mA. The current input is connected to a thermal over-current protection circuit that disconnects the input when an overcurrent occurs and reconnects the input when the condition is removed.	
7	V, Ω, mA Input Terminals	Input terminals that connect to test leads to measure ac and dc volts, ac and dc milliamps, hertz, and ohms.	
8	$4W\Omega$ Sense Terminals	Sense input terminals to make 3-wire and 4-wire compensated resistance measurements.	
9	Channel Status Indicator	Square green box that shows when a channel is set to ON. When a channel is set to ON, it is referred to as "active".	
(10)	Menu Name	Name of the menu.	
(1)	A Hazardous Voltage	Warns the user of hazardous voltage on an input. Shows when voltage is >30 V dc or ac rms.	
(12)	Date and Time	Shows the current date and time that is set in the Instrument Setup menu. This date and time is used for timestamps when data is logged.	
(13)	Module Indicator	Visually shows how many and which slots the Input Modules are connected to. See "Input Module and Relay Card Installation" in Chapter 2. The model 2638A/05 will only indicate one active slot.	
(14)	Scan/Monitor	Scan all active channels. The Scan function samples all active channels directed by the test setup file. The Monitor function shows measurement data of a single channel. See Chapter 4 for more information and operation instructions.	

Table 1-1. Front-Panel Features (cont.)

Item	Name	Function
(15)	Record	Starts and stops data recording. When recording, the key illuminates and "RECORDING" shows on the top of the display. Recording can be set to automatically start and stop with a scan. In addition to recording scan data, measurements made with the front-panel DMM can also be recorded. See Chapter 4 for more information and operation instructions.
(16)	Memory	Manage setup files, scan data files, and DMM data files on either the internal memory or USB drive.
(17)	DMM	Digital multimeter (DMM) function that lets the user quickly configure and make measurements with the front-panel inputs. See Chapter 5 for DMM operation instructions.
(18)	Instrument Setup	Configure the Product. Menu contains many user-configurable settings to customize the Product. See "Configure the Product" in Chapter 2.
(19)	Channel Setup	Configure and verify channels. Channel Setup is the default menu that shows on the display when the Product is powered on. See Chapter 3 for instructions on how to wire and configure a channel.
20	Numeric Keypad	Use to input numerical values when prompted. Push and hold the PRINT or "0" key to take a screenshot of the display. Push and hold the LOCK key to lock the front panel to prevent changes and UNLOCK to unlock.

Table 1-1. Front-Panel Features (cont.)

Table 1-2. Rear-Panel Features

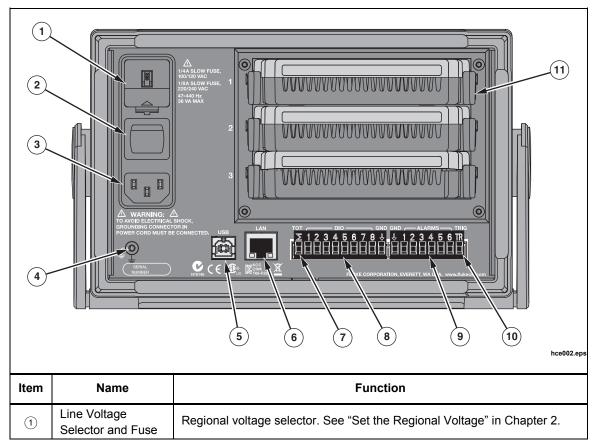

ltem	Name	Function
2	Main Power Switch	Supplies and disconnects mains power to the unit.
3	Mains Power Connector	Mains power cord receptacle.
4	Chassis Ground	Terminal that is internally grounded to the chassis. If the Product is the location of the ground reference point in a system, this binding post can be used to connect other instruments to earth ground.
5	Serial USB Port	USB port used for remote operation. See the 2638A Remote Programmers <i>Guide</i> .
6	LAN Connection	Network port used for remote operation. See the 2638A Remote Programmers Guide.
7	Totalizer Input	Input terminal for the Totalizer feature. See "Totalizer Channel Configuration" in Chapter 3.
8	DIO (Digital I/O Input Ports)	Eight digital ports used to sense and output a digital, 8-bit transistor- transistor logic (TTL) value that can be displayed as the 8-bit TTL value and be recorded as the decimal equivalent.
9	Digital External Alarm Trigger Outputs	Six digital outputs that can be used to trigger a digital external alarm if a channel exceeds the set alarm limits. See "HI and LO Channel Alarms" in Chapter 3.
10	Trigger Input	Input terminal to trigger a scan when the External trigger type is used. See Scan Test Setup" in Chapter 4.
(11)	Input Module Slots	Slots that accept the Input Modules. See "Input Module and Relay Card Installation" in Chapter 2. The 2638A/05 has only one usable slot.

Table 1-2. Rear-Panel Features (cont.)

Safety Information

A **Warning** identifies conditions and procedures that are dangerous to the user. A **Caution** identifies conditions and procedures that can cause damage to the Product or the equipment under test.

See Table 1-3 for a list of symbols used in this manual and on the Product.

Symbol	Description	Symbol	Description
	Risk of danger. Important information. See manual.	~	AC (Alternating Current)
	Hazardous voltage. Voltage >30 V dc or ac peak might be present.		DC (Direct Current)
} ⊳ { ;	AC or DC (Alternating or Direct Current)	л	Digital signal.
-	Earth ground.		Power ON / OFF
	Recycle.		Double insulated.
CAT II	Measurement Category II is applicable to test and measuring circuits connected directly to utilization points (socket outlets and similar points) of the low- voltage MAINS installation.	CAT III	Measurement Category III is applicable to test and measuring circuits connected to the distribution part of the building's low-voltage MAINS installation.
CAT IV	Measurement Category IV is applicable to test and measuring circuits connected at the source of the building's low-voltage MAINS installation.	CE	Product conforms with the requirements of the applicable EC directives.
<u>Ř</u>	This product complies with the WEEE Directive (2002/96/EC) marking requirements. The affixed label indicates that you must not discard this electrical/electronic product in domestic household waste. Product Category: With reference to the equipment types in the WEEE Directive Annex I, this product is classed as category 9 "Monitoring and Control Instrumentation" product. Do not dispose of this product as unsorted municipal waste.	K	Conforms to relevant South Korean EMC Standards.

Table 1-3. Symbols

<u>∧</u>∧Warning

To prevent possible electrical shock, fire, or personal injury:

- Read all safety information before you use the Product.
- Carefully read all instructions.
- Use the Product only as specified, or the protection supplied by the Product can be compromised.
- Examine the case before you use the Product. Look for cracks or missing plastic. Carefully look at the insulation around the terminals.
- Do not use the Product if it operates incorrectly.
- Do not use and disable the Product if it is damaged.
- Use only the mains power cord and connector approved for the voltage and plug configuration in your country and rated for the Product.
- Replace the mains power cord if the insulation is damaged or if the insulation shows signs of wear.
- Make sure the ground conductor in the mains power cord is connected to a protective earth ground. Disruption of the protective earth could put voltage on the chassis that could cause death.
- Do not put the Product where access to the mains power cord is blocked.
- Use only correct measurement category (CAT), voltage, and amperage rated probes, test leads, and adapters for the measurement.
- Use only cables with correct voltage ratings.
- Do not use test leads if they are damaged. Examine the test leads for damaged insulation and measure a known voltage.
- Do not exceed the Measurement Category (CAT) rating of the lowest rated individual component of a Product, probe, or accessory.
- Keep fingers behind the finger guards on the probes.
- Do not apply more than the rated voltage, between the terminals or between each terminal and earth ground.
- Do not touch voltages >30 V ac rms, 42 V ac peak, or 60 V dc.
- Limit operation to the specified measurement category, voltage, or amperage ratings.
- Measure a known voltage first to make sure that the Product operates correctly.

- Consider all accessible channels to be hazardous live and an electric shock hazard if any channel is connected to a hazardous voltage source.
- Do not remove, touch, or change the internal wiring of hazardous inputs until the input source is turned off.
- Remove inputs from hazardous voltage sources before an input module is opened.
- Use the correct terminals, function, and range for measurements.
- Use this Product indoors only.
- Do not use the Product around explosive gas, vapor, or in damp or wet environments.

Screen Capture Feature

The Product can take a screenshot of the display and save it directly to the USB drive.

To take a screenshot of the display (see Figure 1-1):

- 1. Insert a USB drive in the front panel and wait for the USB Data Transfer Indicator to show solid red.
- 2. Push and hold the PRINT or "0" key on the numeric keypad for 3 seconds and then release. The display shows "File Saved".
- 3. Remove the USB from the front panel and connect it to a USB drive on a PC.
- 4. Open the USB drive and navigate to the image folder with this path:

\\fluke\2638A\[Product Serial Number]\Image

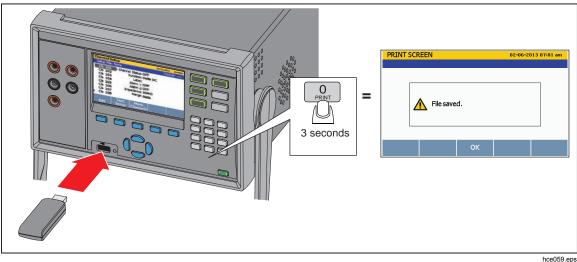


Figure 1-1. Screen Capture

About this Manual

This manual has seven chapters:

- **Chapter 1** supplies product information, safety information, contact information, and product specifications.
- **Chapter 2** supplies information and instructions on how to set up and configure the Product for first time use.
- **Chapter 3** supplies instructions on how to wire inputs to the Input Module then configure the associated channel.
- **Chapter 4** supplies information and instructions on how to do a scan, monitor a channel, and record measurement data.
- Chapter 5 supplies instructions on how to operate the DMM function of the Product.
- **Chapter 6** supplies information on how to clean the Product and replace the fuse in the rear of the Product.
- **Chapter 7** supplies information on error messages and how to troubleshoot the Product.

The Product Manual Set

The Product manual set includes:

- This *2638A Users Manual* that contains feature information, operation instructions, and basic user maintenance and troubleshooting information. The Users Manual is translated into many languages.
- The 2638A *Safety Information* is printed and contains important safety information for this Product. The Safety Information is translated into many languages.
- The *2638A Remote Programmers Guide* contains information on how to remotely operate the Product. The Programmers Guide alphabetically lists all commands and provides example code for different applications.
- The 2638A Calibration Manual contains calibration and adjustment procedures to keep the Product within specifications.

All manuals are online at http://www.fluke.com/

How to Contact Fluke Calibration

To contact Fluke Calibration, call one of the following telephone numbers:

- Technical Support USA: 1-877-355-3225
- Calibration/Repair USA: 1-877-355-3225
- Canada: 1-800-36-FLUKE (1-800-363-5853)
- Europe: +31-40-2675-200
- Japan: +81-3-6714-3114
- Singapore: +65-6799-5566
- China: +86-400-810-3435
- Brazil: +55-11-3759-7600
- Anywhere in the world: +1-425-446-6110

To see product information and download the latest manual supplements, visit Fluke Calibration's website at <u>www.flukecal.com.</u>

To register your product, visit http://flukecal.com/register-product.

Calibration and Repair Information

To schedule and send the Product to Fluke Calibration for calibration or repair:

- 1. Contact the Fluke Calibration Service Center in your area to schedule the calibration or repair (see "Contact Fluke Calibration").
- 2. Pack and secure the Product in a shipment box with a minimum of 2 inches of packing around the Product to prevent damage.
- 3. Send the Product to the Service Center.

General Specifications

Mains Voltage 100 V Setting	90 V to 110 V
120 V Setting	
220 V Setting	
240 V Setting	
0	
Frequency	
Power Consumption	
Environment Temperature	
Operating	
Full accuracy Storage	
Relative Humidity (non-condensing)	
Operating	0 °C to 28 °C <90 %
opolating	28 °C to 40 °C <75 %
	40 °C to 50 °C <45 %
Storage	
Altitude	
Operating	
Storage	
Channel Capacity	
Total analog channels	
Voltage/resistance channels	
Current channels	
Digital I/O	
Totalizer	
Alarm outputs	
Trigger input	1
Channel Capacity: 2638A/05	
Total analog channels	
Voltage/resistance channels	
Current channels	
Safety Protection	
	IEC 61010-1, Overvoltage Category II, Pollution Degree 2
Measurement Front Panel	IEC 61010-2-030: CAT II 300 V
	IEC 61010-2-030: CAT II 150 V CAT II, 250 V rms with maximum transient voltage of 1000 V peak. These terminals are not intended for
	connection to mains voltage above 150 V without external transient suppression. The maximum input that can be applied between rear-
	module terminals or between any rear-module terminal and earth ground is 250 V dc or ac rms.
Electromagnetic Compatibility (EMC)	ground is 250 V dc of ac mis.
International	IEC 61326-1: Basic Electromagnetic Environment
	CISPR 11: Group 1, Class A
	Group 1: Equipment has intentionally generated and/or uses
	conductively-coupled radio frequency energy that is necessary for the internal function of the equipment itself.
	Class A: Equipment is suitable for use in all establishments other than domestic and those directly connected to a low-voltage powe supply network that supplies buildings used for domestic purposes There may be potential difficulties in ensuring electromagnetic compatibility in other environments due to conducted and radiated disturbances.
	Emissions that exceed the levels required by CISPR 11 can occur when the equipment is connected to a test object.

Korea (KCC)	Class A Equipment (Industrial Broadcasting & Communication Equipment)
	Class A: Equipment meets requirements for industrial electromagnetic wave equipment and the seller or user should take notice of it. This equipment is intended for use in business environments and not to be used in homes.
USA (FCC)	47 CFR 15 subpart B. This product is considered an exempt device per clause 15.103.
Math Channels Number of channels Operations	20 sum, difference, multiply, divide, polynomial, power, square root, reciprocal, exponential, logarithm, absolute value, average, maximum, minimum
Triggers	interval, external (trigger input), alarm, remote (bus), manual
Battery life	5 years
Memory Scan data RAM Data/Setup flash memory Non-volatile memory life	20 MB
USB Host Port Standard Connector type Function File system Memory capacity	Type A Memory FAT32
USB Device Port Connector type Class Function Command protocol	Instrument Control and data transfer
LAN Function Network protocols Command protocol	Ethernet 10/100, TCP/IP
Dimensions Height Width Depth Weight Shipping Weight	245 mm 385 mm 6 kg (typical configuration)
Conformity	CE, CSA, IEC 61010 3 rd ed.

Measurement Specifications

Accuracy specifications generally are valid for 6 ½ digit resolution mode (unless otherwise noted) for front panel input (Channel 001), after a minimum of 1-hour warm-up, and within an environment temperature range of 18 °C to 28 °C. 24-hour specifications are relative to calibration standards and assume a controlled electromagnetic environment per EN 61326. The confidence level for accuracy specifications is 99 % within 1 year of calibration (unless otherwise noted).

Scan rate (typical, depending on function and range)

Fast	46 channels per second max (0.02 seconds per channel)
Medium	10 channels per second (0.1 seconds per channel)
Slow	2 channels per second (0.5 seconds per channel)
Display Resolution	4 $\frac{1}{2}$ to 6 $\frac{1}{2}$ digits, depending on Sample Rate or NPLC

DC Voltage

5	
Maximum Input	300 V on any range
Common Mode Rejection	140 dB at 50 Hz or 60 Hz (1 k Ω unbalance for NPLC of 1 or greater, ± 500 V peak maximum in the low lead)
Normal Mode Rejection	55 dB for NPLC of 1 or greater and power-line frequency ±0.1 %, ±20 % of range peak maximum
Measurement Method	Multi-ramp A/D
A/D Linearity	2 ppm of measurement + 1 ppm off range
Input Bias Current	<30 pA at 25 °C

DC Voltage Input Characteristics

	Resolution			
Resolution	Fast 4½ Digits	Medium 5 ½ Digits	Slow 6 ½ Digits	Input Impedance
100.0000 mV	10 μV	1 μV	0.1 μV	10 M Ω or >10 G Ω ^[1]
1.000000 V	100 μV	10 μV	1 μV	10 M Ω or >10 G Ω ^[1]
10.00000 V	1 mV	100 μV	10 μV	10 M Ω or >10 G Ω ^[1]
100.0000 V	10 mV	1 mV	100 μV	10 MΩ ±1 %
300.000 V	100 mV	10 mV	1 mV	10 MΩ ±1 %
	100.0000 mV 1.000000 V 10.00000 V 100.0000 V	Fast 4½ Digits 100.0000 mV 10 μV 1.000000 V 100 μV 100.0000 V 100 μV 100.0000 V 100 μV 100.0000 V 10 mV	Resolution Fast 4½ Digits Medium 5 ½ Digits 100.0000 mV 10 μV 1 μV 1.000000 V 100 μV 10 μV 10.00000 V 100 μV 100 μV 10.00000 V 1 mV 100 μV	Resolution Fast 4½ Digits Medium 5½ Digits Slow 6½ Digits 100.0000 mV 10 μV 1 μV 0.1 μV 1.000000 V 100 μV 10 μV 1 μV 1.000000 V 100 μV 10 μV 1 μV 1.00000 V 100 μV 100 μV 10 μV 10.0000 V 1 mV 100 μV 10 μV

Note:

Input beyond ± 12 V is clamped. The clamp current is up to 3 mA. 10 M Ω is default input impedance.

DC Voltage Accuracy

Accuracy is given as ± (% measurement + % of range).

Range	24 Hour (23 ±1 °C)	90 Days (23 ±5 °C)	1 Year (23 ±5 °C)	T.C./ °C Outside 18 °C to 28 °C
100 mV	0.0025 % + 0.003 %	0.0025 % + 0.0035 %	0.0037 % + 0.0035 %	0.0005 % + 0.0005 %
1 V	0.0018 % + 0.0006 %	0.0018 % + 0.0007 %	0.0025 % + 0.0007 %	0.0005 % + 0.0001 %
10 V	0.0013 % + 0.0004 %	0.0018 % + 0.0005 %	0.0024 % + 0.0005 %	0.0005 % + 0.0001 %
100 V	0.0018 % + 0.0006 %	0.0027 % + 0.0006 %	0.0038 % + 0.0006 %	0.0005 % + 0.0001 %
300 V	0.0018 % + 0.002 %	0.0031 % + 0.002 %	0.0041 % + 0.002 %	0.0005 % + 0.0003 %

Notes:

• For conducted disturbances on mains input >1 V from 10 MHz to 20 MHz, add 0.02 % of range. For disturbances >3 V, accuracy is unspecified.

For radiated disturbances >1V/m from 450 MHz to 550 MHz, add 0.02 % of range. For disturbances > 3 V/m, accuracy is unspecified.

Digits	NPLC	Ch. x01 – x20	Additional NPLC Noise Error
6 1/2	200	add 2 µV	-
6 1/2	100	add 2 µV	-
6 1⁄2	10 (Slow)	add 2 µV	-
5 1/2	1 (Medium)	add 2 µV	add 0.0008 % of range
4 1/2	0.2 (Fast)	-	add 0.002 % of range + 12 μV
4 1/2	0.02	-	add 0.014 % of range + 17 μV

DC Voltage Additional Errors

AC Voltage

AC voltage specifications are for ac sine wave signals >5 % of range. For inputs from 1 % to 5 % of range and <50 kHz, add an additional error of 0.1 % of range. For 50 kHz to 100 kHz, add 0.13 % of range.

Maximum Input	300 V rms or 425 V peak or 3×10^7 volts-Hertz product (whichever is less) for any range.
Measurement Method	AC-coupled true-rms. Measures the ac component of input with up to 300 V dc bias on any range.
AC Filter Bandwidth:	
Slow	20 Hz
Fast	200 Hz
Maximum Crest Factor	5:1 at full scale
Additional Crest Factor Errors	Crest factor 1-2, 0.05 % of full scale
	Crest factor 2-3, 0.2 % of full scale
	Crest factor 3-4, 0.4 % of full scale
	Crest factor 4-5, 0.5 % of full scale

AC Voltage Input Characteristics

			Resolution		
Range	Resolution	4 ½ Digits	5 ½ Digits	6 ½ Digits	Input Impedance
100 mV	100.0000 mV	10 μV	1 μV	0.1 μV	
1 V	1.000000 V	100 μV	10 μV	1 μV	$-$ 1 M Ω ±2 % shunted by 150 pF
10 V	10.00000 V	1 mV	100 µV	10 μV	
100 V	100.0000 V	10 mV	1 mV	100 μV	
300 V	300.000 V	100 mV	10 mV	1 mV	

AC Voltage Accuracy

Accuracy is given as ± (% measurement + % of range).

Range	Frequency	24 Hour (23 ±1 °C)	90 Days (23 ±5 °C)	1 Year (23 ±5 °C)	T.C./ °C Outside 18 °C to 28 °C
	20 Hz to 20 kHz	0.1 % + 0.05 %	0.11 % + 0.05 %	0.11 % + 0.05 %	0.01 % + 0.005 %
100 mV	20 kHz to 50 kHz	0.2 % + 0.05 %	0.22 % + 0.05 %	0.22 % + 0.05 %	0.01 % + 0.005 %
	50 kHz to 100 kHz	0.55 % + 0.08 %	0.6 % + 0.08 %	0.6 % + 0.08 %	0.05 % + 0.01 %
	20 Hz to 20 kHz	0.1 % + 0.05 %	0.11 % + 0.05 %	0.11 % + 0.05 %	0.01 % + 0.005 %
1 V	20 kHz to 50 kHz	0.2 % + 0.05 %	0.22 % + 0.05 %	0.22 % + 0.05 %	0.01 % + 0.005 %
	50 kHz to 100 kHz	0.55 % + 0.08 %	0.6 % + 0.08 %	0.6 % + 0.08 %	0.05 % + 0.01 %
	20 Hz to 20 kHz	0.1 % + 0.05 %	0.11 % + 0.05 %	0.11 % + 0.05 %	0.01 % + 0.005 %
10 V	20 kHz to 50 kHz	0.2 % + 0.05 %	0.22 % + 0.05 %	0.22 % + 0.05 %	0.01 % + 0.005 %
	50 kHz to 100 kHz	0.55 % + 0.08 %	0.6 % + 0.08 %	0.6 % + 0.08 %	0.05 % + 0.01 %
	20 Hz to 20 kHz	0.1 % + 0.05 %	0.11 % + 0.05 %	0.11 % + 0.05 %	0.01 % + 0.005 %
100 V	20 kHz to 50 kHz	0.2 % + 0.05 %	0.22 % + 0.05 %	0.22 % + 0.05 %	0.01 % + 0.005 %
	50 kHz to 100 kHz	0.55 % + 0.08 %	0.6 % + 0.08 %	0.6 % + 0.08 %	0.05 % + 0.01 %
	20 Hz to 20 kHz	0.1 % + 0.05 %	0.11 % + 0.05 %	0.11 % + 0.05 %	0.01 % + 0.005 %
300 V	20 kHz to 50 kHz	0.2 % + 0.05 %	0.22 % + 0.05 %	0.22 % + 0.05 %	0.01 % + 0.005 %
	50 kHz to 100 kHz	0.55 % + 0.27 %	0.6 % + 0.27 %	0.6 % + 0.27 %	0.05 % + 0.03 %

For conducted disturbances on mains input >1 V from 10 MHz to 40 MHz, add 0.02 % of range. For disturbances >3 V, accuracy is unspecified.

Additional Low Frequency Errors

Error is stated as % of reading.

F	AC Fi	lter
Frequency	20 Hz	200 Hz
20 Hz to 40 Hz	0 %	-
40 Hz to 100 Hz	0 %	0.55 %
100 Hz to 200 Hz	0 %	0.2 %
200 Hz to 1 kHz	0 %	0.02 %
>1 kHz	0 %	0 %

DC Current

Input Protection 0.15 A / 600 V Resettable PTC

DC Current Input Characteristics

			Resolution		Reference	
Range	Resolution	Fast 4½ Digits	Medium 5 ½ Digits	Slow 6 ½ Digits	Resistance (Ohms)	Burden Voltage
100 μA	100.0000 μA	10 nA	1 nA	0.1 nA	1k Ω	<1 mV
1 mA	1.000000 mA	100 nA	10 nA	1 nA	1k Ω	<1 mV
10 mA	10.00000 mA	1 μA	100 nA	10 nA	10 Ω	<1 mV
100 mA	100.0000 mA	10 µA	1 µA	100 nA	10 Ω	<1 mV

DC Current Accuracy

Accuracy is given as ± (% measurement + % of range).

Range	24 Hour (23 ±1 °C)	90 Days (23 ±5 °C)	1 Year (23 ±5 °C)	T.C./ °C Outside 18 °C to 28 °C
100 μA	0.005 % + 0.003 %	0.015 % + 0.0035 %	0.015 % + 0.0035 %	0.002 % + 0.001 %
1 mA	0.005 % + 0.001 %	0.015 % + 0.0011 %	0.015 % + 0.0011 %	0.002 % + 0.001 %
10 mA	0.005 % + 0.003 %	0.015 % + 0.0035 %	0.015 % + 0.0035 %	0.002 % + 0.001 %
100 mA	0.005 % + 0.001 %	0.015 % + 0.0035 %	0.015 % + 0.0035 %	0.002 % + 0.001 %

DC Current Additional Errors

Digits	NPLC	Additional NPLC Noise Error for 10 mA, 100 mA	Additional NPLC Noise Error for 100 μA, 1 mA
6 1⁄2	200	-	-
6 1⁄2	100	-	-
6 1⁄2	10 (Slow)	-	-
5 1⁄2	1 (Medium)	0.0008 % of range	0.0008 % of range
4 1/2	0.2 (Fast)	0.002 % of range + 1.2 μA	0.002 % of range + 12 nA
4 1/2	0.02	0.014 % of range + 1.7 μA	0.014 % of range + 17 nA

AC Current

Measurement Method AC-coupled true-rms, dc-coupled to the shunt (no blocking capacitor).

AC	Fil	ter	Ba	nd	w	idt	h	
	1							

Crest factor 4-5, 0.5 % of full scale

AC Current Input Characteristics

			Resolution		Deferrer	Dundan	
Range	Resolution	4 ½ Digits	5 ½ Digits	6 ½ Digits	Reference Resistance	Burden Voltage	
100 μA	100.0000 µA	10 nA	1 nA	0.1 nA	1 kΩ	<10 mV (RMS)	
1 mA	1.000000 mA	100 nA	10 nA	1 nA	1 kΩ	<10 mV (RMS)	
10 mA	10.00000 mA	1 μA	100 nA	10 nA	10 Ω	<20 mV (RMS)	
100 mA	100.0000 mA	10 µA	1 μA	100 nA	10 Ω	<50 mV (RMS)	

AC Current Accuracy

Accuracy is given as \pm (% measurement + % of range). Basic accuracy specification is for a sinusoidal signal with amplitude greater than 5 % of range. For input signals between 1 % to 5 % of range, add 0.1 % of range.

Range	Frequency	24 Hour (23 ±1 °C)	90 Days (23 ±5 °C)	1 Year (23 ±5 °C)	T.C./ °C Outside 18 °C to 28 °C
100 μA	20 Hz to 2 kHz	0.2 % + 0.06 %	0.25 % + 0.06 %	0.3 % + 0.06 %	0.015 % + 0.005 %
1 mA	20 Hz to 2 kHz	0.2 % + 0.06 %	0.25 % + 0.06 %	0.3 % + 0.06 %	0.015 % + 0.005 %
10 mA	20 Hz to 2 kHz	0.2 % + 0.06 %	0.25 % + 0.06 %	0.3 % + 0.06 %	0.015 % + 0.005 %
100 mA	20 Hz to 2 kHz	0.2 % + 0.06 %	0.25 % + 0.06 %	0.3 % + 0.06 %	0.015 % + 0.005 %

Additional Low Frequency Errors

Error is stated as % of reading.

E	AC Fi	lter
Frequency	20 Hz	200 Hz
20 Hz to 40 Hz	0 %	-
40 Hz to 100 Hz	0 %	0.55 %
100 Hz to 200 Hz	0 %	0.2 %
200 Hz to 1 kHz	0 %	0.02 %
>1 kHz	0 %	0 %

Frequency

Gate Times	100 milliseconds to 1 second.
Measurement Method	Flexible counting technique. AC-coupled input using the ac voltage measurement function.
Settling Considerations	When measuring frequency after a dc offset voltage change, errors may occur. For the most accurate measurement, wait up to 1 second for the input blocking capacitor to settle.
Measurement Considerations	To minimize measurement errors, shield inputs from external noise when measuring low-voltage, low-frequency signals.

Frequency Accuracy

Accuracy is given as ± % of measurement.

Range	Frequency	24 Hour (23 ±1 °C)	90 Days (23 ±5 °C)	1 Year (23 ±5 °C)	T.C./ °C Outside 18 °C to 28 °C
100 mV to	20 Hz to 40 Hz	0.03 %	0.03 %	0.03 %	0.001 %
300 V ^{[1] [2]}	40 Hz to 1 MHz	0.006 %	0.01 %	0.01 %	0.001 %
 [1] Input >100 mV. For 10 mV to 100 mV, multiply percent measurement error by 10. [2] Limited to 3 x 10⁷ volt-Hertz 					

Resistance

Measurement Method Current source referenced to LO input.		
Max. Lead Resistance (4-wire ohms)	. 10 Ω per lead for 100 $\Omega,$ 1 $k\Omega$ ranges. 1 $k\Omega$ per lead on all other	
	ranges.	
Input Protection	. 300 V on all ranges.	

			Resolution		
Range	Resolution	Fast 4½ Digits	Medium 5 ½ Digits	Slow 6 ½ Digits	Source Current
100 Ω	100.0000 Ω	10 mΩ	1 mΩ	0.1 mΩ	1 mA / 4 V
1 kΩ	1.000000 kΩ	100 mΩ	10 mΩ	1 mΩ	1 mA / 4 V
10 kΩ	10.00000 kΩ	1 Ω	100 mΩ	10 mΩ	100 µA / 6 V
100 kΩ	100.0000 kΩ	10 Ω	1 Ω	100 mΩ	100 µA / 12 V
1 MΩ	1.000000 MΩ	100 Ω	10 Ω	1 Ω	10 µA / 12 V
10 MΩ	10.00000 MΩ	1 kΩ	100 Ω	10 Ω	1 µA / 12 V
100 MΩ	100.0000 MΩ	10 kΩ	1 kΩ	100 Ω	0.1 µA / 12 V

Resistance Input Characteristics

Resistance Accuracy

Accuracy is given as \pm (% measurement + % of range). Basic accuracy specification is for 4-wire resistance. For 2-wire resistance add 0.02 Ω internal resistance if using Channel 1 or 1.5 Ω if using channels x01 through x20, and add external lead wire resistance.

Range	24 Hour (23 ±1 °C)	90 Days (23 ±5 °C)	1 Year (23 ±5 °C)	T.C./ °C Outside 18 °C to 28 °C
100 Ω	0.003 % + 0.003 %	0.008 % + 0.004 %	0.01 % + 0.004 %	0.0006 % + 0.0005 %
1 kΩ	0.002 % + 0.0005 %	0.008 % + 0.001 %	0.01 % + 0.001 %	0.0006 % + 0.0001 %
10 kΩ	0.002 % + 0.0005 %	0.008 % + 0.001 %	0.01 % + 0.001 %	0.0006 % + 0.0001 %
100 kΩ	0.002 % + 0.0005 %	0.008 % + 0.001 %	0.01 % + 0.001 %	0.0006 % + 0.0001 %
1 MΩ	0.002 % + 0.001 %	0.008 % + 0.001 %	0.01 % + 0.001 %	0.001 % + 0.0002 %
10 MΩ	0.015 % + 0.001 %	0.02 % + 0.001 %	0.04 % + 0.001 %	0.003 % + 0.0004 %
100 MΩ	0.3 % + 0.01 %	0.8 % + 0.01 %	0.8 % + 0.01 %	0.05 % + 0.002 %
Note:				

Note:

For conducted disturbances on mains input >1 V from 10 MHz to 40 MHz, add 0.6 % of range. For disturbances >3 V, accuracy is unspecified.

Resistance Additional Errors

Digits	NPLC	Additional NPLC Noise Error
6 1/2	200	0 % of range
6 1⁄2	100	0 % of range
6 1⁄2	10 (Slow)	0 % of range
5 1/2	1 (Medium)	0.0008 % of range
4 1/2	0.2 (Fast)(only for 2-wire)	0.002 % of range + 12 mΩ
4 1/2	0.02 (only for 2-wire)	0.01 % of range + 17 m Ω

RTD

Temperature Range	200 °C to 1200 °C (depending on the sensor)
Resistance Range	. 0 Ω to 4 kΩ
Maximum Lead Resistance (4-wire Ω)	. 2.5 % of range per lead for 400 Ω and 4 $k\Omega$ ranges
Sample Rate	
Slow	. 10 PLC
Medium	.2 PLC
Fast	.1 PLC

RTD Temperature Accuracy

Accuracy is for 4-wire 100 Ω nominal RTD, using the slow sample rate. With 3-wire PRT/RTD add 0.015 °C if using Channel 1, or add 0.15 °C internal resistance mismatch to the accuracy specification if using channels x01 through x20, and add external lead wire resistance mismatch. When using medium or fast sample rate (NPLC <10), add the number given in the table to the accuracy specification. If the environment temperature is outside the specified range, multiply the Temperature Coefficient number by the temperature deviation and add to the accuracy specification. Linear interpolation may be used between points in the table. Specifications do not include sensor accuracy. The practical range of temperature measurement depends on the sensor and characterization.

Temperature	Accuracy	Medium/Fast Sample Rate (NPLC <10)	T.C./ °C Outside 18 °C to 28 °C
-200 °C	0.016 °C	add 0.02 °C	0.0026 °C
0 °C	0.038 °C	add 0.02 °C	0.0041 °C
300 °C	0.073 °C	add 0.03 °C	0.0063 °C
00 °C	0.113 °C	add 0.03 °C	0.0089 °C

Note:

For conducted disturbances on mains input >1 V from 10 MHz to 40 MHz, add 0.2 Celsius. For disturbances >3 V, accuracy is unspecified.

RTD Measurement Characteristics

	Temperature Di		
Range	Slow Sample Rate	Medium/Fast Sample Rate	Source Current
0 Ω to 400 Ω	0.001 °C	0.01 °C	1 mA
400 Ω to 4 kΩ	0.001 °C	0.01 °C	0.1 mA

Thermistor

Temperature Range	200 °C to 400 °C (depending on the sensor)
Resistance Range	0 Ω to 1 MΩ
Sample Rate	
Slow	10 PLC
Medium	2 PLC
Fast	1 PLC

Thermistor Temperature Accuracy

Accuracy specifications are for a 4-wire thermistor using medium or slow sample rate. With 2-wire thermistor add the number given in the table to the accuracy specification for internal resistance. When using fast sample rate (NPLC <10), multiply the accuracy specification by 3. If the environment temperature is outside the specified range, increase the accuracy specification by 25 % for every 1 °C outside the specified environment temperature range. Specifications do not include sensor accuracy. The practical range of temperature measurement depends on the sensor.

	Accuracy			
Temperature	2.2 kΩ thermistor	5 kΩ thermistor	10 kΩ thermistor	2-wire
-40 °C	0.002 °C	0.007 °C	0.007 °C	add 0.002 °C
0°C	0.005 °C	0.004 °C	0.003 °C	add 0.004 °C
25 °C	0.013 °C	0.007 °C	0.005 °C	add 0.016 °C
50 °C	0.019 °C	0.01 °C	0.011 °C	add 0.05 °C
100 °C	0.116 °C	0.054 °C	0.026 °C	add 0.34 °C
150 °C	0.527 °C	0.239 °C	0.1 °C	add 1.7 °C

For conducted disturbances on mains input >1 V from 10 MHz to 40 MHz, add 0.2 Celsius. For disturbances >3 V, accuracy is unspecified.

	Temperature Dis		
Range	Slow Sample Rate	Medium/Fast Sample Rate	Source Current
0 Ω to 98 kΩ	0.001 °C	0.01 °C	10 μA
95 kΩ to 1 MΩ	0.001 °C	0.01 °C	1 μΑ

Thermistor Measurement Characteristics

Thermocouple

Temperature Range	270 °C to 2315 °C (depending on the sensor)
Voltage Range	15 mV to 100 mV
Sample Rate	
Slow	10 PLC
Medium	2 PLC
Fast	1 PLC

Thermocouple Temperature Accuracy

Accuracy specifications apply using a slow sample rate. When using a medium or fast sample rate (NPLC < 10), increase the accuracy specification by 25 %. If the environment temperature is outside the specified range, increase the accuracy specification by 12 % for every 1 °C outside the specified environment temperature range. Accuracy with fixed/external CJC does not include the accuracy of the reference junction temperature. Linear interpolation may be used between points in the table. Specifications do not include sensor accuracy. The practical range of temperature measurement depends on the sensor.

		Accuracy		
Type (Range)	Temperature	Fixed / External CJC		Internal CJC
(Range)		Channel 1	Ch. x01 – x20	Ch. x01 – x20
к	-200 °C	0.28 °C	0.41 °C	1.60 °C
-270 °C to 1372 °C	0 °C	0.10 °C	0.15 °C	0.62 °C
-270 C to 1372 C	1000 °C	0.14 °C	0.20 °C	0.64 °C
	-200 °C	0.27 °C	0.40 °C	1.60 °C
Т	0 °C	0.10 °C	0.15 °C	0.65 °C
-270 °C to 400 °C	200 °C	0.08 °C	0.12 °C	0.47 °C
	400 °C	0.08 °C	0.11 °C	0.41 °C
	0 °C	0.76 °C	1.13 °C	1.28 °C
R	300 °C	0.42 °C	0.63 °C	0.71 °C
-50 °C to 1768 °C	1200 °C	0.33 °C	0.47 °C	0.52 °C
	1600 °C	0.34 °C	0.49 °C	0.54 °C
	0 °C	0.74 °C	1.11 °C	1.26 °C
S	300 °C	0.45 °C	0.67 °C	0.76 °C
-50 °C to 1768 °C	1200 °C	0.37 °C	0.54 °C	0.60 °C
	1600 °C	0.39 °C	0.56 °C	0.63 °C
	-200 °C	0.20 °C	0.29 °C	1.41 °C
J	0 °C	0.08 °C	0.12 °C	0.61 °C
-210 °C to 1200 °C	1000 °C	0.11 °C	0.14 °C	0.53 °C
	-200 °C	0.42 °C	0.62 °C	1.69 °C
Ν	0 °C	0.15 °C	0.23 °C	0.64 °C
-270 °C to 1300 °C	500 °C	0.12 °C	0.17 °C	0.44 °C
	1000 °C	0.14 °C	0.19 °C	0.45 °C
	-200 °C	0.17 °C	0.25 °C	1.42 °C
Е	0 °C	0.07 °C	0.10 °C	0.61 °C
-270 °C to 1000 °C	300 °C	0.06 °C	0.09 °C	0.46 °C
	700 °C	0.08 °C	0.10 °C	0.45 °C

	300 °C	1.32 °C	1.97 °C	1.97 °C
В	600 °C	0.68 °C	1.02 °C	1.02 °C
100 °C to 1820 °C	1200 °C	0.41 °C	0.60 °C	0.60 °C
	1600 °C	0.38 °C	0.55 °C	0.55 °C
0	600 °C	0.23 °C	0.33 °C	0.54 °C
C	1200 °C	0.28 °C	0.40 °C	0.63 °C
0 °C to 2315 °C	2000 °C	0.44 °C	0.60 °C	0.91 °C
6	600 °C	0.22 °C	0.32 °C	0.44 °C
	1200 °C	0.26 °C	0.36 °C	0.49 °C
0 °C to 2315 °C	2000 °C	0.39 °C	0.53 °C	0.69 °C
0	600 °C	0.24 °C	0.36 °C	0.36 °C
G	1200 °C	0.22 °C	0.32 °C	0.33 °C
0 °C to 2315 °C	2000 °C	0.33 °C	0.46 °C	0.46 °C
	-200 °C	0.13 °C	0.19 °C	0.99 °C
	0 °C	0.08 °C	0.12 °C	0.62 °C
-200 °C to 900 °C	800 °C	0.09 °C	0.12 °C	0.48 °C
	0 °C	0.11 °C	0.16 °C	0.64 °C
M	500 °C	0.10 °C	0.15 °C	0.51 °C
-50 °C to 1410 °C	1000 °C	0.10 °C	0.14 °C	0.41 °C
	-200 °C	0.25 °C	0.37 °C	1.48 °C
U 00 00 to 000 00	0 °C	0.10 °C	0.15 °C	0.63 °C
-200 °C to 600 °C	400 °C	0.08 °C	0.11 °C	0.40 °C
14/	600 °C	0.24 °C	0.36 °C	0.36 °C
W 0.°C to 2015 °C	1200 °C	0.22 °C	0.32 °C	0.33 °C
0 °C to 2315 °C	2000 °C	0.33 °C	0.46 °C	0.46 °C

Thermocouple Measurement Characteristics

	Temperature Display Resolution		
Range	Slow Sample Rate	Medium/Fast Sample Rate	
-270 °C to 2315 °C	0.01 °C	0.1 °C	

Digital I/O

Absolute Voltage Range	4 V to 30 V
Input Minimum Logic High	2.0 V
Input Maximum Logic Low	0.7 V
Output Type	open drain active low
Output Logic Low (<1 mA)	0 V to 0.7 V
Maximum Sink Current	50 mA
Output Resistance	47 Ω
Totalizer	

TOTATIZET	
Absolute Voltage Range	4 V to 30 V
Minimum Logic High	2.0 V
Maximum Logic Low	0.7 V
Minimum Pulse Width	50 μs
Maximum Frequency	10 kHz
Debounce Time	1.7 ms
Maximum Count	1048575 (20 bits)

Trigger

Absolute Voltage Range	-4 V to 30 V
Minimum Logic High	2.0 V
Maximum Logic Low	0.7 V
Minimum Pulse Width	50 µs
Maximum Latency	100 ms

Alarm Output

Absolute Voltage Range	4 V to 30 V
Output Type	open drain active low
Output Logic Low (<1 mA)	. 0 V to 0.7 V
Maximum Sink Current	. 50 mA
Output Resistance	. 47 Ω

2638A-100 Universal Input Module

General

Measurement	IEC 61010-2-030: CAT II 150 V, on any range. 250 V Max. (see safety notice in this manual under input protection)
Offset Voltage	<2 μV
3-Wire Internal Resistance Mismatch	<50 mΩ
Basic CJC Accuracy	0.6 °C

Chapter 2 Initial Setup and Configuration

Introduction

This chapter supplies information and instructions on how to set up and configure the Product for first time use.

Set the Regional Voltage

The Product is equipped with a voltage selector that must be set for the region of use before the mains power cord is connected. The selector can be set to 100 V, 120 V, 220 V, or 240 V. See Figure 2-1 for an illustration on how to set the voltage selector.

See Chapter 6 for instructions on how to change the fuse. Each voltage selection requires a specific fuse. See Table 2-1.

Voltage Selector	Fuse	Fluke Calibration Part Number
100 V	0.25 A, 250 V (slow blow)	166306
120 V	0.25 A, 250 V (slow blow)	166306
220 V	160 mA, 250 V (slow blow)	4394437
240 V	160 mA, 250 V (slow blow)	4394437

Table 2-1. Fuses

≜Caution

To prevent damage to the Product, make sure the regional voltage selector is in the correct position for the region of use before mains power is connected.

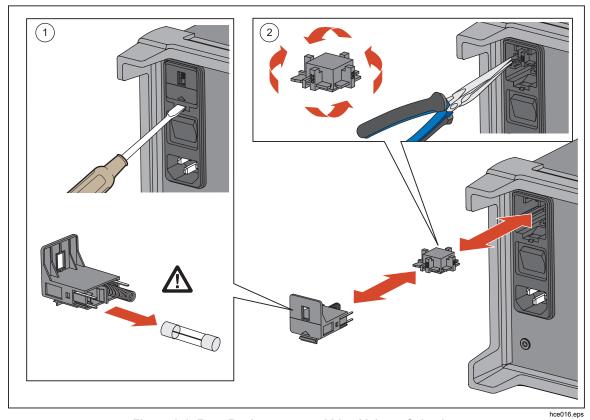


Figure 2-1. Fuse Replacement and Line-Voltage Selection

Connect to Mains Power

Use the mains power cord to connect the Product to a 100 V ac, 120 V ac, or 230 V ac nominal outlet as shown in Figure 2-2.

<u>∧</u>∧Warning

To prevent possible electrical shock, fire, or personal injury:

- Use only the mains power cord and connector approved for the voltage and plug configuration in your country and rated for the Product.
- Replace the mains power cord if the insulation is damaged or if the insulation shows signs of wear.
- Make sure the ground conductor in the mains power cord is connected to a protective earth ground. Disruption of the protective earth could put voltage on the chassis that could cause death.
- Do not put the Product where access to the mains power cord is blocked.

▲Caution

To prevent damage to the Product, make sure the regional voltage selector is in the correct position for the region of use before mains power is connected.

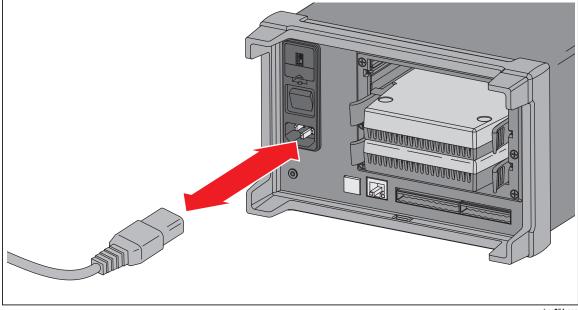


Figure 2-2. Mains Power Cord Connection

hcn051.eps

Set the Handle Position

The handle is used to easily transport the Product but can also be used as a stand. Figure 2-3 shows the various handle positions and also shows how to remove and install the handle and the protective rubber boots.

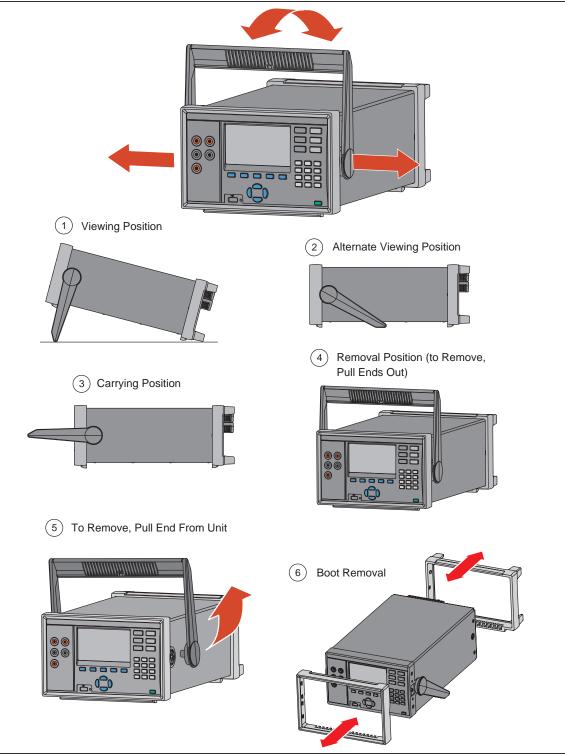


Figure 2-3. Handle Positions and Boot Removal

hce007.eps

Power On and Standby

As shown in Figure 2-4, the Product has a main power switch located on the rear panel that supplies power to the unit, and a Standby key (()) on the front panel that puts the Product in a standby mode. Push the (I) side of the main power switch to power on the Product. As the Product powers on, a startup screen is shown on the display while the Product performs a self-check. This self-check can take up to 2 minutes to complete and if the Product detects any errors, an error message is shown on the display that contains the error description along with an error code to help troubleshoot the problem (see "Error Messages" in Chapter 7).

Once the Product is powered on, use the Standby key () to put the Product in standby. When in standby, the display, keys, and functions are disabled while the internal components remain powered on and warmed up (see "Warm-Up the Product").

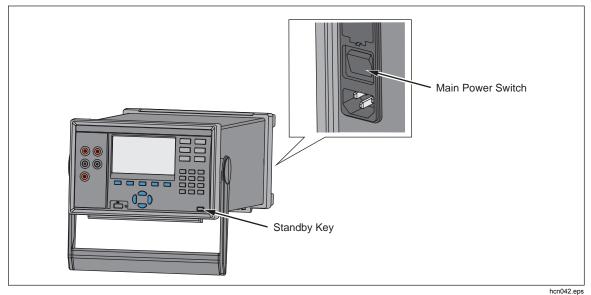


Figure 2-4. Main Power Switch and Standby Key

Warm-Up the Product

It is recommended that the Product be warmed up before use to stabilize the environmentally controlled components. This will ensure the best performance to the specification listed in Chapter 1. Sufficient warm-up times are as follows:

- If the Product has been powered off for 30 minutes or more, let it warm-up for 1 hour or more.
- If the Product has been powered off for less than 30 minutes, let it warm-up for a minimum of two times the length of time it was powered off. For example, if Product has been turned off for 10 minutes, let it warm-up for 20 minutes.

Configure the Product

Use the Instrument Setup menu to configure the Product. To open the Instrument Setup menu, push menu, push on the front panel. To change a setting, highlight the setting then use the menu softkeys shown on the display to edit the settings.

Table 2-2 shows the menu items and selections available in the Instrument Setup menu.

Menu Item	Description	Selections Available	
Language	Changes the display language. Note If the incorrect language is set by accident, push SETUP then push E1. This temporarily resets the language to English.	English 中文 Español Français Русский Deutsch 日本語 Portugués	
Firmware	Shows the firmware version installed, model number, and serial number		
Date	Changes the date and date format shown on the top-right corner of the display. This date is also used for timestamps in the data log.	MM-DD-YYYY YYYY-MM-DD DD/MM/YYYY	
Time	Changes the time and time format shown on the top-right corner of the display. This time is also used for timestamps in the data log.	12H or 24H	
Decimal Format	Changes the decimal format to show a comma or decimal.	Period (0.000) or Comma (0,000)	
Display Brightness	Changes the display brightness level.	High, Med, or Low	
Keypad Beep	Turn on or turn off the key beep that sounds when a key is pushed.	ON or OFF	

Table 2-2. Instrument Setup Menu

Menu Item	Description	Selections Available
Screen Saver	Change the wait time or disable the screensaver.	Never, 15 Min, 30 Min, or 60 Min
Calibration Date	Shows the date that the Product was last calibrated. See the 2638A Calibration Manual for more information.	
Password Management	Change the Admin and User profile passwords.	See "Set Up Security" in this chapter for more information.
Resume Scan	Sets the Product to automatically turn on and resume scanning and recording after a power loss.	See "Automatic Power Loss Scan Resume" in Chapter 4 for more information.
Remote Port	Configure the LAN Ethernet or serial USB communication settings.	See the 2638 <i>Remote</i> <i>Programmers Guide</i> for more information.
Relay Counter	Shows how many times the channel relays have been scanned along with the name, serial number, and calibration date of the Input Module.	

Table 2-2. Instrument Setup Menu (cont.)

Input Module and Relay Card Installation

Before an Input Module can be inserted into the rear panel, a relay card must be installed. Use the procedure below and refer to Figure 2-6 as necessary to install the relay card:

- 1. Power off the Product with the main power switch.
- 2. Remove the six screws that secures the plastic frame to the rear panel.
- 3. Remove the plastic frame.
- 4. Slide the aluminum slot protector out of the Product.
- 5. Carefully align the rails of the relay card into the slot guides.
- 6. Slowly push the relay card into the Product until the card is fully seated.

≜Caution

Do not force the relay card into the slot. The card should easily move when the rails of the relay card are properly aligned in the slot guides.

The 2638A/05 has only one available relay slot. Do not remove the cover plates on slots 2 and 3. This will damage the Product and require a return for service.

7. Install the plastic frame and secure it to the rear panel with six screws.

To install the Input Module:

- 1. Power off the Product with the main power switch.
- 2. Slide an Input Module into the slot the relay card was installed.
- 3. Power on the Product with the main power switch.
- 4. Verify that the module indicator appears green on the main screen (see Figure 2-5).

Note

If the module indicator is not green, the Product did not recognize the Input Module or relay card. Refer to the troubleshooting section in Chapter 7.

CHANN'L SET	UP			5-2013 06:44 Module:				
□Ch 001	Channe	Status:				Slot 1		Module Installed
Ch 101		unction:				Slot 2		Empty
■Ch 102		Label:	FP					
■Ch 103		Alarm 1:	OFF			Slot 3		Empty
■Ch 104		Alarm 2:	OFF				L	
□Ch 105		Mx+B:	OFF					
■Ch 106								
□Ch 107								
Edit	Off _	Сору	Test	Sav	Э			
Channel	∽" Ic	hannel	Setup	Setu	p			

Figure 2-5. Module Indicator Example

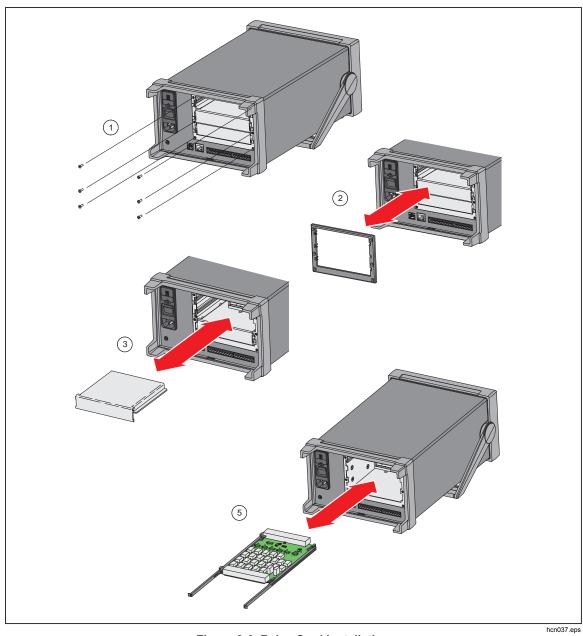


Figure 2-6. Relay Card Installation

Set Up Security

The Product has one administration (Admin) and five User profiles. The Admin profile is used for three purposes:

- To protect the Product from accidental or unintentional changes to the calibration coefficients. The Admin profile is the only profile that can open the Calibration menu to calibrate the Product. Refer to the *2638A Calibration Manual* for calibration and adjustment instructions.
- To clear the memory or reset the Product to factory defaults. See Chapter 6.
- To change passwords of the User profiles.

The User profiles sole purpose is to produce secure data files that are traceable back to the user who performed the test (commonly referred to as test traceability). See Chapter 4 for more information.

Note

The user profile names are fixed and cannot be changed.

The Product ships from the factory with a default Admin password of "2638". To change the Admin or User profile password:

- 1. Push Setup.
- 2. Highlight **Password Management** then push
- 3. Enter the default password of **2638** (or the current Admin password if it was previously changed) then push **F4**.
- 4. Select an **Admin** or **User** profile then push **F4**.
- 5. Enter a new password then push F4
- 6. Enter the password again to confirm then push **F**4

Chapter 3 Input and Channel Configuration

Introduction

This chapter supplies instructions on how to wire inputs to the Input Module then configure the associated channel.

Input Wiring

The Universal Input Module

The 2686A-100 Universal Input Module (the Input Module) is used to wire inputs of various types to the Product (see Figure 3-1). Each Input Module has 22 analog channels (ChX01 through ChX20) that can be configured to measure dc volts, ac volts, resistance, frequency, and temperature and two low-burden current channels (ChX21 and ChX22) that can be configured to measure ac and dc current without the use of an external shunt resistor.

Note

To expand the functionality of the Product, current sources can also be connected to channels ChX01 through ChX20 by the use of an accessory shunt resistor. See Chapter 6 for part number and ordering information.

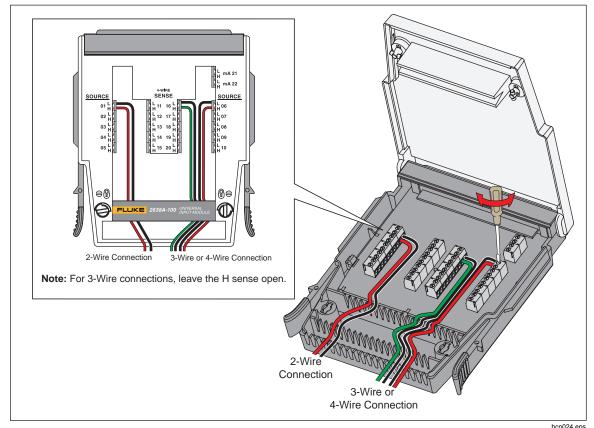


Figure 3-1. 2-Wire, 3-Wire, and 4-Wire Example Connections

Wiring Safety and Considerations

<u>∧</u>∧Warning

To prevent possible electrical shock, fire, or personal injury:

- Consider all accessible channels to be hazardous live and an electric shock hazard if any channel is connected to a hazardous voltage source.
- Do not remove, touch, or change the internal wiring of hazardous inputs until the input source is turned off.
- Remove inputs from hazardous voltage sources before an input module is opened.
- Use the correct terminals, function, and range for measurements.
- Make sure proper insulation is maintained between channel wiring terminations and that no loose strands are outside of the terminal block connections.

≜Caution

To prevent damage to the Product, do not exceed the specified input voltage levels.

Shielded wires and sensors (such as thermocouples) should be used in environments where "noisy" voltage sources are present. When shielded wiring is used, the shield is normally connected to the L (low) input terminals for each channel. Alternate configurations should be examined for each equipment application.

In situations where multiple inputs of different types are connected, a phenomenon known as crosstalk can cause one signal to interfere with another and thereby introduce measurement errors. The typical effect is an ac voltage channel can be interfered by another high frequency/high voltage ac signal on the same Input Module.

3-Wire and 4-Wire Sense Input Configuration

For improved resistance measurement accuracy, the Product can connect to 3-wire (PRT only) and 4-wire instruments with sense connections.

Sense connections cancel out the resistance of the test lead or wire that significantly improves the accuracy of the measurement. As shown in Table 3-1, many thermistors, platinum-resistance thermometers (PRTs) and resistors use a 3-wire or 4-wire sense connection to eliminate lead wire resistance errors.

For 2-wire measurements, the wires can be connected to either the source or sense channels ChX01 through ChX20. For 3-wire or 4-wire resistance measurements, the source wires must be connected to channels ChX01 through ChX10 and the sense wires to the set of terminals directly across from where the source is connected (channels ChX11 through ChX20).

Note

The Product will not show or let the user select a 3-wire or 4-wire input on channels ChX11 through ChX20.

Figure 3-2 shows an example of a 4-wire input (PRT) with sense wires connected to the Input Module, then how it would look in the Channel Setup menu once it is properly configured.

To use the sense connections, the channel connected to the source wires must be configured as a 3-wire or 4-wire input as described in "Channel Configuration Procedures" on page 3-7. When a channel is configured as a 3-wire or 4-wire input, the Product automatically reserves the sense channel across from the source that prevents the channel from being independently configured, as shown in Figure 3-2.

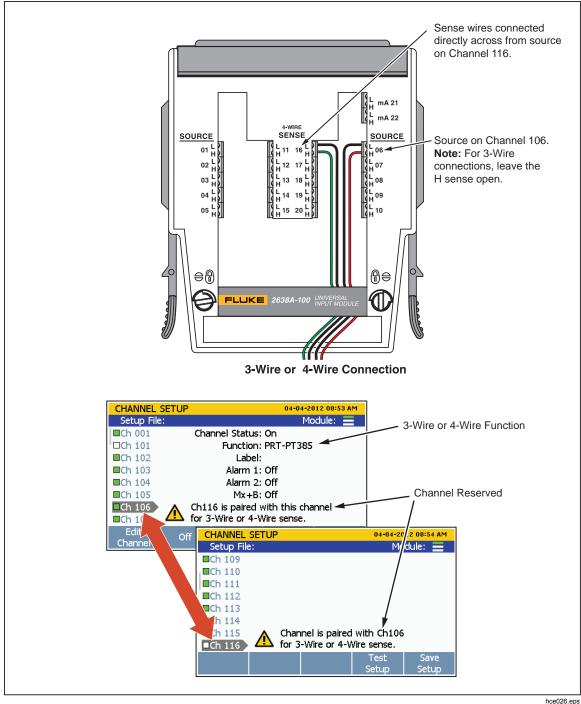


Figure 3-2. 3-Wire and 4-Wire Channel Reservation

Input Types and Wiring Diagrams

Table 3-1 lists the type of input types the Product can measure and the wiring polarity that should be used to wire it to the Input Module.

Type of Input	Range and Types	Channel Configuration Reference	Wiring Polarity
ac and dc Voltage	Range: 0 V to 300 V ^[2]	Page 3-17	н () >
ac and dc Current ^[1]	Range: 0 mA to ±100 mA	Page 3-17	
Resistance (Ω)	2-Wire or 4-Wire $^{[3]}$ Range: 0 Ω to 100 M Ω	Page 3-18	2-Wire ⊣ <mark>€ +</mark>
Platinum Resistance Thermometer (PRT)	 2-Wire, 3-Wire or 4-Wire Types: PT385 or PT392 R0: 0.09 Ω to 1.2 kΩ 	Page 3-22	с ^R 3-Wire н ● + + ● н
Thermistor	2-Wire or 4-Wire Types: • 2.252 kΩ • 5 kΩ • 10 kΩ	Page 3-20	Source L Source H Source L Sense H Sense L Sens L Sense L Sens L Sense L Sens L Sens L Sense L Sense L
Thermocouple	Types: B, C, D, E, G, J, K, L, M, N, R, S, T, U, W,	Page 3-19	
Note [1] – Each Input Mo	dule has two terminal sets (mA	1 21 and mA 22) that	are dedicated to current measurements.

Table 3-1	Types	of Inputs
-----------	-------	-----------

[1] – Each Input Module has two terminal sets (mA 21 and mA 22) that are dedicated to current measurements.

[2] - 300 V is for Ch001 only. Other analog channels are 150 V max.

[3] – 100 M Ω is for Ch001 only. Other analog channels are 10 M Ω Max.

Input Wiring Instructions

Use the procedure below and refer to Figure 3-1 for instructions on how to wire a 2-wire, 3-wire, or 4-wire input to the Input Module.

<u>∧</u>∧Warning

To prevent possible electrical shock, fire, or personal injury, read the Wiring Safety and Considerations section on page 3-2.

- 1. Power off the Product with the main power switch.
- 2. Squeeze together the release tabs located on both sides of the Input Module then pull the module out of the Product.
- 3. Use a straight-head screw driver to rotate the cover locks to the unlock position then open the cover.

▲ Caution

To prevent damage to the module, never turn the cover locks more than quarter of a turn.

- 4. Connect the positive source wire to the H terminal and the negative source wire to the L terminal. For 3-wire and 4-wire sense connections, connect the sense wires to the terminals directly across from the source wires. See "Sense Input Configuration" on page 3-3.
- 5. Route the wires through the strain-relief pins then out the back of the Input Module. If necessary, the rubber wire compressor used to secure the wires can be removed for more room.
- 6. Close the Input Module cover and rotate the cover locks to the locked position.
- 7. Align the Input Module on the guide rails and carefully slide the module into the connector at the rear of the Product until it latches in place.
- 8. Power on the Product with the main power switch. After powered on, the Product tests the connection to the Input Module. If the Input Module is recognized, the module indicator changes to green and shows all channels available on the left side of the Channel Setup menu as shown in Figure 3-3. If the module indicator does not turn green, refer to the troubleshooting information in Chapter 4.
- 9. Configure the channel. For instructions on how to configure the various input types, see "Channel Configuration" on page 3-7.

CHANNYL SETUP		03-03	5-2013 06:44 AM	<u>]</u> Г			
Set p File:			Module:		Slot 1		Module Installed
□Ch 001	Channel Status:	ON		\mathbb{N}	0101 1	-	
■Ch 101	Function:	VDC		$ \setminus $	Slot 2		Empty
■Ch 102	Label:	FP		$ \rangle$			
■Ch 103	Alarm 1:	OFF			Slot 3		Empty
■Ch 104	Alarm 2:	OFF					_
□Ch 105	Mx+B:	OFF					
■Ch 106							
□Ch 107							
, ^{Edit} , Oi	rr Copy	Test	Save				
Channel	Channel	Setup	Setup				

Figure 3-3. Module Indicator (Input Module Installed Shown)

Channel Configuration

This section contains instructions on how to configure the channels after the inputs are connected to the Input Module.

About Channel Numbers

A channel number (Ch) is a numerical identification associated with a set of terminals on the Input Module. The channel number of the input is determined by the slot number the Input Module is in (1, 2, or 3) followed by the number of the terminal the input is connected to (1 to 22) as illustrated in Figure 3-4. The front-panel inputs are permanently assigned to channel Ch001. Here are some examples on how to determine the channel number of an input:

- A voltage source is connected to input terminal 4 (04) in the Input Module and then slid into slot 1. The channel is Ch104.
- A thermistor source is connected to input terminal 8 (08) in the Input Module and then slid into slot 2. The channel is Ch208.
- A voltage source is connected to the front-panel terminals. The channel is Ch001.

Table 3-2 shows channel types and channel numbers.

Channel Type	Channel Numbers and Range	Reference	
Input Channel (front panel)	Ch001		
Input Channel (rear panel, slot 1)	Ch101 to Ch122	See "Analog Channel Configuration (Ch001 Ch102 to Ch322)" on page 3-16. Channels	
Input Channel (rear panel, slot 2)	Ch201 to Ch222	201 to Ch222 and Ch301 to Ch322 are not available on 2638A/05.	
Input Channel (rear panel, slot 3)	Ch301 to Ch322		
Digital I/O Channel	Ch401	See "Digital I/O Channel Configuration (Ch401)" on page 3-23.	
Totalizer Channel	Ch402	See "Totalizer Channel Configuration (Ch402)" on page 3-24.	
Math Channel	Ch501 to Ch520	See "Math Channel Configuration (Ch501 to Ch520)" on page 3-25.	

Table 3-2. Channel Types and Numbers

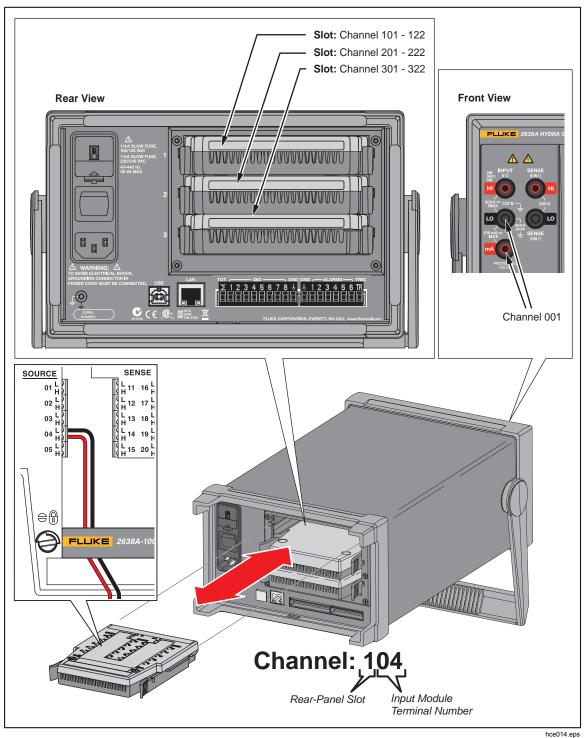


Figure 3-4. Example Channel Assignment

Note

Channels 201 to 222 and 301 to 322 and relay slots 2 and 3 are not available on 2638A/05.

Basic Channel Operations

Use the instructions in this section to perform basic channel operations.

Open the Channel Setup Menu

The Channel Setup menu lets the user manage channels, verify inputs, and also set up tests. To open the menu, push **Setup** on the front panel.

To select channels, use the \bigcirc and \bigcirc arrow keys. To quickly move up and down the list of channels, use the \bigcirc and \bigcirc arrow keys.

Note

The Channel Setup menu cannot be accessed while a scan is in progress.

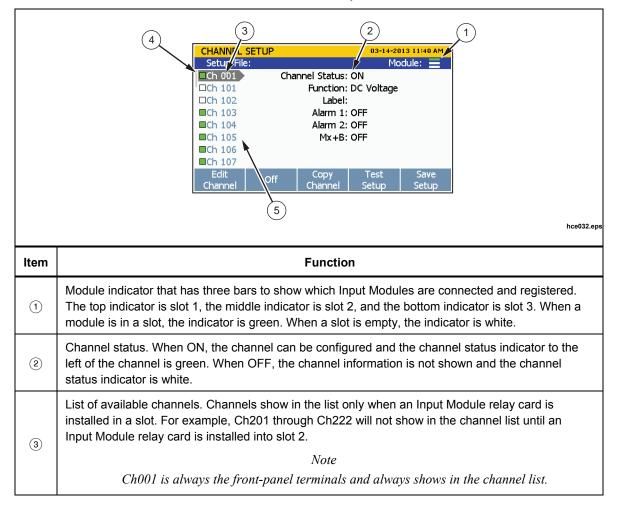


Table 3-3. Channel Setup Menu

Table 3-3. Channel	Setup	Menu	(cont.)
--------------------	-------	------	---------

Item	Function
4	Channel status indicator. When a channel is set to ON, the channel status indicator is green. When OFF, the channel status indicator is white.
5	Channel selection indicator. When a channel is selected, the channel information shows on the screen. Use and to move up or down one channel at a time. Use or to jump to the next module number (for example, to jump from channel Ch101 to channel Ch201).

Set Channels to ON or OFF

To scan, monitor, or record an input, the associated channel must be set to ON and configured. When a channel is set to ON, it is referred to as "active". The channel indicator appears green when set to ON and white when set to OFF as shown in Figure 3-5. To set a channel to ON, push from then push from the push from the channel to OFF.

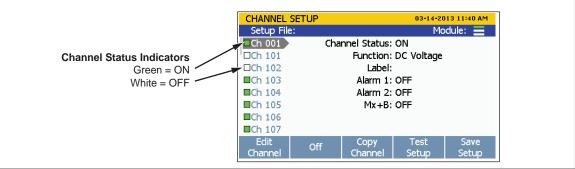


Figure 3-5. Channel Status Indicators

hce018.eps

When a channel is set to ON, the channel loads the previous channel configuration. If the channel was not previously configured, the default channel settings are loaded. To change the or edit the channel:

- 1. Push SETUP.
- 2. Push \bigtriangledown or \bigtriangleup to highlight a channel.
- 3. Push **F1** to edit the channel.
- 4. Set the **Channel Status** to **ON** if necessary.

The display opens a channel configuration sequence that prompts the user to select key parameters for the specific channel type. These sequences are shown and described in the analog channel configuration section that starts on page 3-16.

Note

If the configuration sequence is skipped or stopped before the sequence is complete, the default channel settings are used for the skipped steps. Some channel settings are not able to be configured or changed outside of the setup sequence.

Use the \bigcirc or \bigcirc to select the settings and input values with the numeric keypad. Once a parameter is set, push $\boxed{F4}$ to save the setting.

Verify a Channel

After a channel is set to ON and configured, a direct measurement can be made to verify that the channel is configured properly.

To verify a channel:

- 1. Turn on the input source that is connected to the Product.
- 2. Push CHANNEL .
- 3. Push \bigtriangledown or \bigtriangleup to highlight a channel.
- 4. Set the channel to **ON**.
- 5. Push **E** to edit the channel.
- 6. Push **E** to open the Verify Channel menu.
- 7. Evaluate the measurement and zero the channel if necessary. See "Zero a Channel".

Zero a Channel

In certain applications, it may be necessary to zero the channel in order to make measurements without unwanted offsets or noise levels. The zero channel function is located in the Verify Channel menu that is accessed by a softkey in the Channel Setup menu. The Product uses the Mx+B offset value to zero a channel. To do this, the Product calculates the offset required to convert the measurement to a zero value, sets Mx+B to ON, and loads the calculated offset value into the Mx+B settings. To clear the zero, the offset value can be manually set back to the original value (usually "0") or Mx+B can be set to OFF if it was off before the channel was zeroed. Zero offset values can be viewed in the setup file associated with the scan data file (see Chapter 4).

Note

When a zero is performed, the Product will overwrite any custom offset values in the Mx+B settings. If a channel has a custom Mx+B offset, make note of the offset value before the channel is zeroed so it can be referred to later if necessary.

To zero a channel:

1. Turn on the input source that is connected to the Product.

- 2. Push **CHANNEL** SETUP.
- 3. Push \bigtriangledown or \frown to highlight a channel.
- 4. Push **F1** to edit the channel.
- 5. Push **E** to open the Verify Channel menu.
- 6. Push 3 to zero the channel. A confirmation message appears, select OK to continue or Cancel to disregard the changes and return to previous menu. After OK is selected, the Product sets the Mx+B to ON and loads the calculated offset into the Mx+B offset setting. To clear the zero function, set the Mx+B back to the original values. See "Mx+B Scaling" on page 3-29 for instructions.

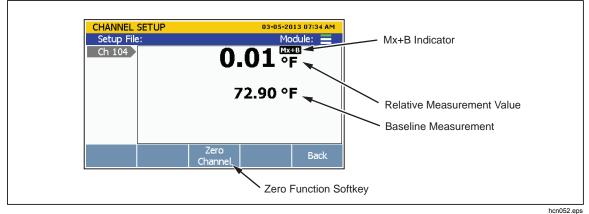


Figure 3-6. Zero Function

Copy a Channel

The Product has a copy and paste function to help duplicate channels. When a channel is duplicated, all of the channel configuration settings are copied and pasted to a new channel number. The copy channel softkey in located in the Channel Setup menu.

Note

When a channel is copied to another channel, the channel configuration of the target channel is overwritten without a notification. Confirm the channel selections before OK is pushed to prevent accidental overwrites.

To duplicate a channel with copy and paste:

- 1. Push SETUP.
- 2. Push \bigtriangledown or \bigtriangleup to highlight a channel.

- 3. Set the channel to **ON** if necessary.
- 4. Push **F3** to open the Copy Channel menu.
- 5. Use \frown or \frown to highlight a channel then push \square to select the channels to paste to.
- 6. Push **F4** to paste the channels.

Save or Load a Channel Configuration (Setup File)

The channel and test configuration can be saved to a file referred to as the Setup file. When the Setup file is saved, the Product saves the present configuration of each channel (including Mx+B and Alarms) in their current state (ON or OFF). Setup files can be loaded at a later time or transferred to another Product with a USB drive. Setup files are managed and loaded from the internal memory in the Memory menu.

Notes

- Setup files cannot be directly saved to or loaded from the USB drive. To save Setup files to a USB drive, save the file to the internal memory, then copy it to the USB drive. To load a Setup file from a USB drive, copy the file to internal memory then load the file. See the instructions below.
- The Product will not load a Setup file if the present configuration does not match the configuration in the Setup file. This is caused by missing Input Modules. Match the configuration and try to load the Setup file again.

To save a Setup File:

- 1. Push SETUP.
- 2. Push F5
- 3. Follow the on-screen directions to name the file then push **E4** to save.

To save a Setup file to a USB drive:

- 1. Save the current Setup file to internal memory.
- 2. Insert a USB drive into the front-panel USB port.

Note

Wait about 15 seconds to let the Product recognize the USB drive. The LED illuminates solid red when the USB drive is recognized and ready.

- 3. Push MEMORY.
- 4. Push **F1** to select **Internal Files**.

- 5. Choose **Setup Files** then push **F4**.
- 6. Use the \bigtriangledown and \blacklozenge keys to select the file to be copied.
- 7. Push **F3** to manage the file.
- 8. Push **E1** to copy to the USB drive.

Note

Do not remove the USB drive until you see a file transfer complete message.

To load a Setup File:

- 1. Push MEMORY.
- 2. Push **F1** to select internal files.
- 3. Select **Setup Files** then push **F4**.
- 4. Use \bigtriangledown and \frown to highlight the Setup File.
- 5. Push **F2** to load and use the Setup File.

To load a Setup File from a USB drive:

1. Insert a USB drive into the front-panel USB port.

Note

Wait 15 seconds to let the Product recognize the USB drive.

- 2. Push MEMORY.
- 3. Push F2 to select USB Files.
- 4. Choose **Setup Files** then push **F4**.
- 5. Use the \bigtriangledown and \blacklozenge keys to select the file to be copied.
- 6. Push **F3** to manage the file.
- 7. Push **E** to copy to the internal memory.

Note

Do not remove the USB drive until you see a file transfer complete message.

Reset the Channel and Test Configuration

To reset the entire channel configuration and test setup:

Note

All channels are set to the default settings when reset and cannot be restored unless the configuration was saved.

- 1. Push and hold [CHANNEL] for 3 seconds.
- 2. Push **F3** to confirm to reset channel setup, or push **F5** to cancel.

Analog Channel Configuration (Ch001, Ch101 to Ch322)

After an analog input is connected to the Input Module and/or the front-panel connectors, the channel must be configured for the type of input that is connected. Analog inputs are channels Ch101 to Ch122, Ch201 to Ch222, and Ch301 to Ch322. Use the procedure below and the tables in this section to set up channels for specific input types.

Please read the considerations below to help with channel configuration:

- For new channels that have not been previously set up, the user is prompted to configure the channel when it is set to ON for the first time. Push the cancel softkey (F5)) while in the setup sequence to: (1) accept the default settings for new channels or (2) use the previous configuration for channels previously configured.
- A channel can be configured with the Edit Channel softkey in the Channel Setup menu.
- Each channel has independent channel options such as Channel Delay, Rate of Change, NPLC, and Input Impedance, that can be accessed with the Channel Options softkey in the Edit Channel menu. The channel options listed vary based on the on the input type.
- After a channel is configured, it is important to verify the channel with the Verify Channel softkey on the Channel Setup menu. This ensures that the channel was configured properly before data is collected from a scan. See "Verify a Channel" on page 3-12.

To configure an analog channel:

- 1. Push SETUP.
- 2. Set the channel to ON (see "Set Channels to ON or OFF" on page 3-10). When the channel is set to ON, a channel configuration sequence shows on the display that steps the user through an initial configuration sequence as shown in Table 3-5. If the channel was previously configured, push for to cancel the configuration sequence to use the last channel configuration.
- 3. Use the information in the tables in this section to configure the channel. Push ♥ or to highlight the channel setting then push 🖼 to edit the setting.

4. After the channel is configured, verify that the channel is configured properly and reading the input. For instructions, see "Verify a Channel" on page 3-12.

Current and Voltage Channels

Refer to Table 3-4 to configure an ac or dc voltage or current channel.

Note

Ch001 can be set up for all measurements. ChX21 and ChX22 are the only channels that can be set up for current measurements. To expand the functionality of the Product, current sources can also be connected to ChX01 through ChX20 by the use of an accessory shunt resistor. See Chapter 2 for part number and ordering information.


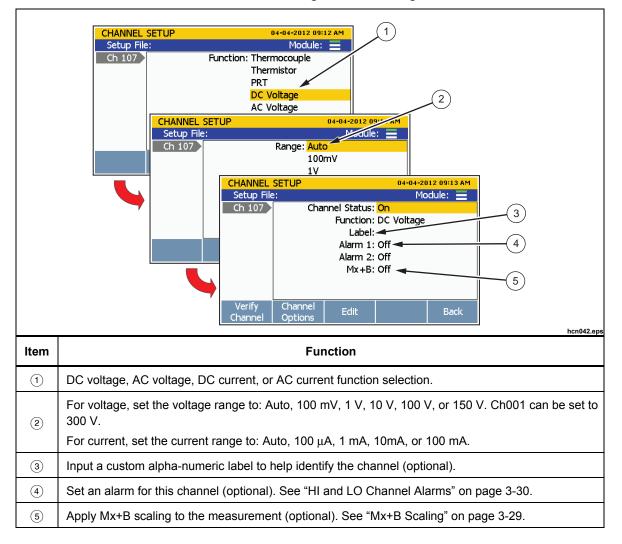


Table 3-4. Current and Voltage Channel Configuration

Resistance Channels


Refer to Table 3-5 to configure a resistance channel.



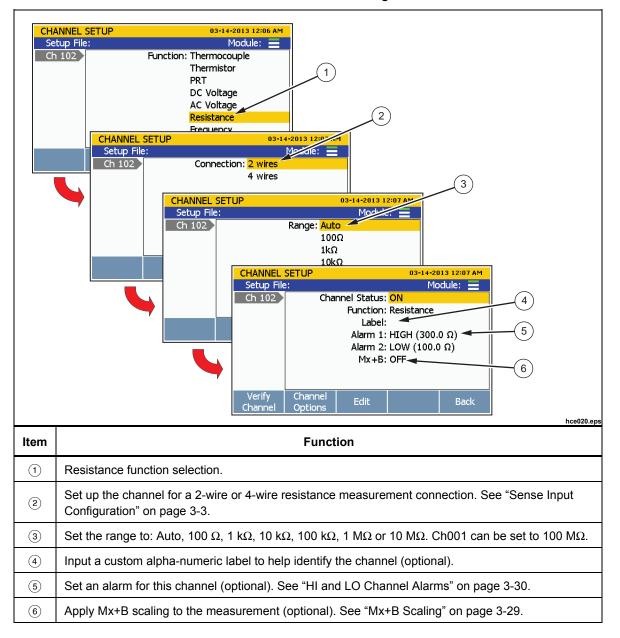

Thermocouple Channels

Refer to Table 3-6 to configure a thermocouple channel.

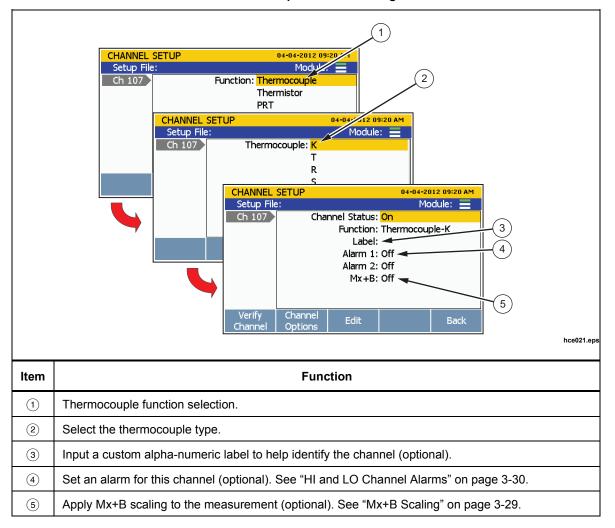



Frequency Channels

Refer to Table 3-7 to configure a frequency channel.


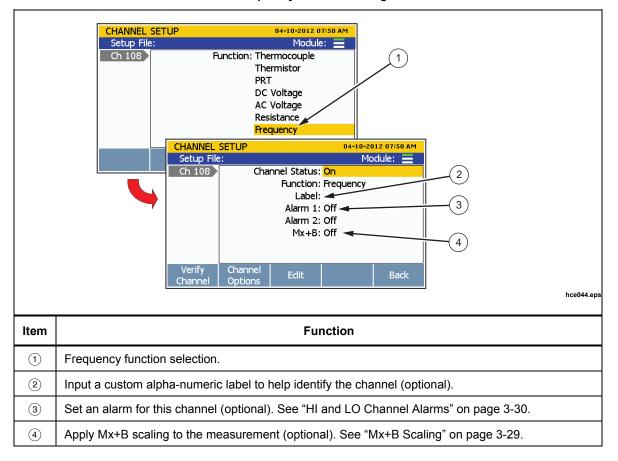


Table 3-7. Frequency Channel Configuration

Thermistor Channels


Refer to Table 3-8 to configure a thermistor channel.



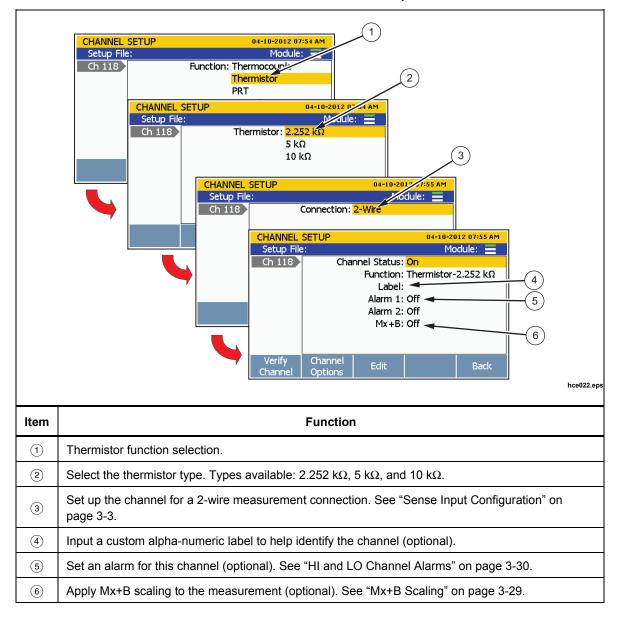

PRT Channels

Refer to Table 3-9 to configure a Platinum Resistance Thermometer (PRT) channel.

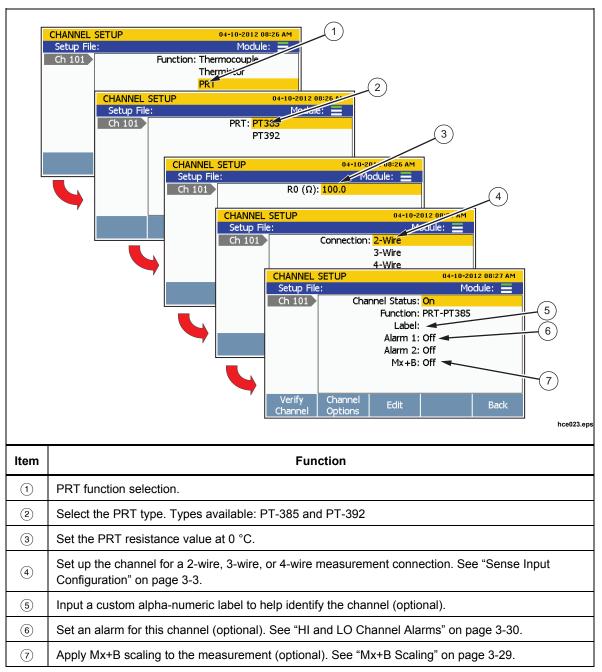



Digital I/O (DIO) Channel Configuration (Ch401)

The Product can sense and output a digital, 8-bit transistor-transistor logic (TTL) value that can be displayed as the 8-bit TTL value and be recorded as the decimal equivalent. This is accomplished with the rear-panel digital I/O connectors (DIO) that are shown in Figure 3-7.

When a DIO input is sensed, the Product displays the status of the digital I/O as 8-bit TTL value and records the decimal equivalent. The 8-bit TTL value can also be seen when a channel is monitored. The default value is a high state that shows as "11111111" until the Product senses a low state or is used as an output. A few examples of some 8-bit TTL values and their decimal equivalents are shown below:

- 11111111 is represented by decimal 255
- 00001111 is represented by decimal 15
- 00010001 is represented by decimal 17
- 10000101 is represented by decimal 133

Notes

For input and output specifications such as input and output voltages, see "Digital I/O" in Chapter 1.

The DIO channel will be read-only when it is set to ON (active).

With a remote command, the Product can output an 8-bit TTL value. See the 2638A Remote Programmers Guide for more information.

Terminal	Function
ТОТ	Totalizer Input
1	Input/Output Line 1
2	Input/Output Line 2
3	Input/Output Line 3
4	Input/Output Line 4
5	Input/Output Line 5
6	Input/Output Line 6
7	Input/Output Line 7
8	Input/Output Line 8
GND	Ground Terminal

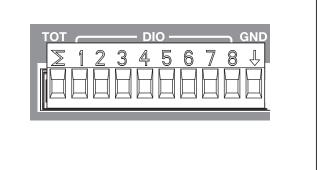


Figure 3-7. DIO Connector

hcn040.eps

Set up the DIO channel as follows:

- 1. Connect the equipment to the DIO input terminal then insert it into the rear-panel digital I/O (DIO) port.
- 2. Push CHANNEL SETUP

- 3. Set channel 401 to ON (see "Set Channels to ON or OFF" on page 3-11).
- 4. Assign a label to the channel if desired.
- 5. To measure the DIO, monitor channel Ch401 in the Scan/Monitor menu. The 8-bit TTL value is shown on the display and the decimal equivalent will be recorded to the data file.

Totalizer Channel Configuration (Ch402)

The Product is equipped with a unidirectional, resettable totalizer with an input count capability of 0 to 1048575 (20 bits). When a digital input is connected to the TOT input on the rear panel and Ch402 is set to on, the Product counts each time the dc voltage of the signal transitions from high to low or a contact closes to the ground (GND). When a scan started, the TOT counter is reset to 0. The totalizer count can be manually reset at any time with F2 in the Scan menu.

Read Mode

The totalizer function has two read modes: read and read/reset. The mode can be set in Channel Setup or by remote command. The default totalizer mode is read.

In read mode, the count is not effected when read during the scan sweep or read by remote command.

In read/reset mode, the totalizer count is automatically reset to 0 when it is read during a scan sweep or read by remote command. It is not effected by pause scan. The totalizer count is not reset when it is viewed with the Monitor function.

Debounce

In some applications, contacts can "bounce" when they close that results in multiple signals on one line. Without a filter the Product detects multiple closures that can cause duplicate counts for one closure. To filter the signal, the Product has a debounce feature that can detect bounce on the signal and ignore it. Debounce (600 Hz) can be turned on with the Edit channel function of the Totalizer channel (Ch402). If the debounce feature is disabled, 10 kHz is the maximum frequency the Totalizer input can support.

Terminal	Function	
TOT	Totalizer Input	
1	Input/Output Line 1	
2	Input/Output Line 2	
3	Input/Output Line 3	∑ 1 2 3 4 5 6 7 8 ↓
4	Input/Output Line 4	
5	Input/Output Line 5	
6	Input/Output Line 6	
7	Input/Output Line 7	
8	Input/Output Line 8	
GND	Ground Terminal	

Figure 3-8. Totalizer Input (TOT)

hce040.eps

Set up a totalizer channel as follows (see Table 3-10):

- 1. Connect the input to the TOT input terminal then insert it into the rear-panel Digital I/O port.
- 2. Set the channel to ON (see "Set Channels to ON or OFF" on page 3-10). When the channel is set to ON, a channel configuration sequence shows on the display that steps the user through an initial configuration sequence as shown in Table 3-10. If the channel was previously configured, push ^{F5} to cancel the configuration sequence to use the last channel configuration.
- 3. Use the information in Table 3-10 to configure the totalizer channel. Push ♥ or ♠ to highlight the channel setting then push 🖼 to edit the setting.
- 4. To see the totalizer count, monitor Ch402 in the Scan/Monitor menu.

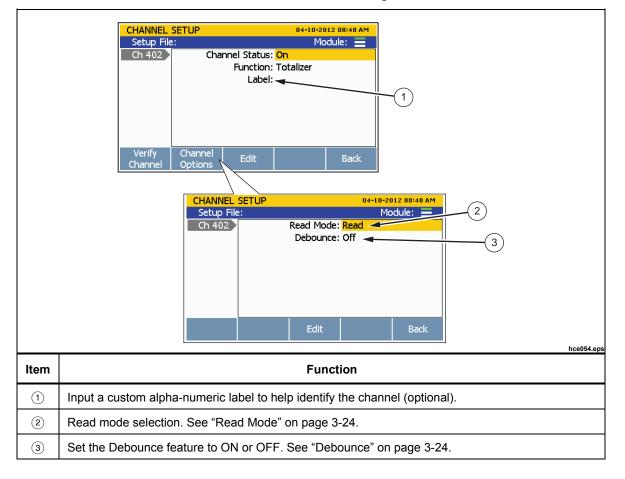


Table 3-10. Totalizer Channel Configuration

Math Channel Configuration (Ch501 to Ch520)

The Product has 20 math channels that lets the user apply a math conversion to a single channel or to a range of channels through the use of preset math functions. Table 3-11 lists the math functions available for use.

Math channels are commonly used to combine the measurement values then display them as one number without the need to manually calculate the values. Like all other channels, math channels can be scanned and recorded.

Another use of the math channels is to apply a math conversion to a single channel that is more advanced than Mx+B scaling. For example, a more accurate conversion of an output of a transducer to a physical parameter.

More complicated expressions can be made with a math channel that uses the calculations from two other math channels. For example, a math channel could be configured to calculate the exponential function of another math channel that is configured to calculate a polynomial function of an input channel.

Formula	Equation	Description
Polynomial	$C_6A^6 + C_5A^5 + C_4A^4 + C_3A^3$ + $C_2A^2 + C_1A + C_0$	Calculates a polynomial expression of up to sixth order. Coefficients may be set to arbitrary constants. A polynomial of order less than six is created by setting high order coefficients to 0.
Square Root	√A	Calculates the square root function. The argument must be a positive number, otherwise the result will be "+OL" (over limit).
Power	A ^x	Calculates the power of the variable. The exponent can be a noninteger number but the result will be "+OL" if the argument is negative.
Exponential	e ^A	Calculates the exponential function of a variable, where e is 2.718.
Log10	Log10(A)	Calculates the logarithm, base 10, of a variable. The argument must be positive or the result will be "+OL". This formula is helpful when used with an Mx+B scale factor of 20 to convert a reading to decibels.
A	ABS(A)	Calculates the absolute value of a variable, converting a value to a positive number if it happens to be negative. The absolute value function can be useful to ensure that the argument to another math channel is always positive.


Table 3-11. Math Channel Formulas

Formula	Equation	Description
1 / A	1 / A	Calculates the reciprocal of a variable. The argument cannot be 0 or the result will be "+OL".
A + B	A + B	Adds the readings of two source channels. This is useful to create expressions of more than one independent variable.
A – B	A – B	Calculates the difference between readings of two source channels.
A x B	A x B	Multiplies the readings of two source channels. This can be useful for calculating electric power from a voltage reading on one channel and a current reading on another channel.
A / B	A / B	Divides the reading of one source channel by the reading of another channel. This can be useful for observing the ratio of two related parameters. The argument cannot be 0 or the result will be "+OL".
Average ^[1]	<u>A1 + A2 + A3</u> N	Calculates the arithmetic mean of the readings of selected channels.
Maximum ^[1]	N/A	Finds the maximum reading among selected channels.
Minimum ^[1]	N/A	Finds the minimum reading among selected channels.
Sum ^[1]	A1 + A2 + A3	Calculates the sum of the readings of selected channels

Set up a math channel as follows (see Table 3-12):

[1] - Maximum of 10 channels can be calculated.

- 1. Connect and configure the channel or channels to apply the math formula to.
- Set the channel to ON (see "Set Channels to ON or OFF" on page 3-10). When the channel is set to ON, a channel configuration sequence shows on the display that steps the user through an initial configuration sequence as shown in Table 3-12. If the channel was previously configured, push to cancel the configuration sequence to use the last channel configuration.
- 3. Use the information in the Table 3-12 to configure the math channel. Push ♥ or ♠ to highlight the channel setting then push 🛐 to edit the setting.

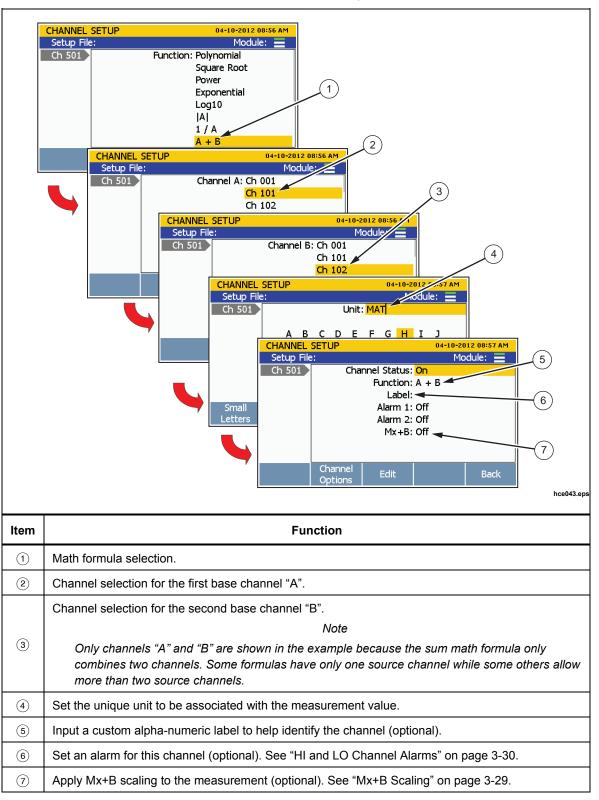



Mx+B, Alarms, and Channel Options

The subsequent sections supply information and procedures on how to apply Mx+B scaling, set up channel alarms, and configure additional channel options.

Mx+B Scaling

Mx+B is a calculation that can be applied to a channel to scale a measurement value. This feature is useful in applications where an input measurement needs to be converted to a different unit or value to simulate an output. Common scaling conversions are:

- Scaling of a milliamp output of a pressure transducer to the equivalent kPa or psi value.
- Scaling of a temperature reading from degrees Celsius to kelvins.
- Conversion of shunt resistor voltage to current in amperes.

To calculate Mx+B, the "M" value is referred to as the "gain" and is used as a multiplier of the actual reading. After the gain is calculated, the "B" value or the "offset" is added to the resultant.

For example, if a channel measures a voltage of 3 volts and the gain was set to 3.3, the measurement on the display would read 9.9 volts (3 V * 3.3 gain = 9.9 V). Now the offset is added to the gain. If the offset was set to 11.0, it would be added to the 9.9 volts and the display would read 20.9 volts (9.9 V + 11.0 offset = 20.9 V).

More examples:

(6.9 gain * 20 mA) + 16.0 offset = 154 kPa (1.0 gain * 25.0 °C) + 273.15 offset = 298.15 K (10.0 gain * 0.32 V) + 0.0 offset = 3.2 A

If necessary, the Mx+B menu lets the user designate a new unit to accurately represent the scaled measurement. This unit shows on the display and in the recorded scan data as long as Mx+B is set to ON. If the Mx+B is set to OFF, the unit reverts back to the original unit. When a channel has Mx+B scaling applied, a [Mx+B] icon is shown above the unit next to the measurement value.

Note

If the scaled value is too large, "OL" (overload) is displayed. Adjust the gain or the offset and try again.

The Product uses the offset to zero a channel. To do this, the Product calculates the offset required to convert the measurement to a zero value, sets Mx+B to ON, and loads the calculated offset value into the Mx+B settings. To clear the zero, the offset value can be manually set back to the original value (usually "0") or Mx+B can be set to OFF if it was off before the channel was zeroed. See "Zero a Channel" on page 3-12 for instructions on how to zero a channel.

To apply an Mx+B scaling to a channel:

- 1. Push SETUP.
- 2. Push \bigtriangledown or \bigtriangleup to highlight a channel.
- 3. Set the channel to **ON** if necessary.
- 4. Push **F1** to edit the channel.
- 5. Select Mx+B and push **F3**.
- Input the Gain and Offset values and set the unit as desired. When complete, push
 to return to the previous menu.
- Verify the channel. If the scaled channel gives unexpected results (like zero or "OL"):
 - Verify that the correct gain and offset values are set.
 - Manually calculate the result with the entered gain and offset values. See the examples in this section.
 - Temporarily set the gain to 1 and the offset to 0 to verify that the measurements are in the expected range. Unexpected measurements could result from a wiring error or the wrong range or function selected.

HI and LO Channel Alarms

Each channel has two channel alarms that can have custom values assigned to trip when a channel measurement exceeds the assigned high (HI) or low (LO) limit. If an alarm trips, the measurement value on the display changes to red and will stay red until the measurement is back in the normal range.

In addition to the visual indication, the channel alarm can be tied to one of the six alarm outputs on the rear panel (see Figure 3-9 and Figure 3-10). An alarm output can have multiple channels assigned to it. If an alarm trips, the alarm outputs a low condition signal (<0.7 V dc). A common use of this feature is to connect to an external audio alarm that will sound if the channel alarm is tripped.

To set a channel alarm:

- 1. Push SETUP.
- 2. Push \bigtriangledown or \bigtriangleup to highlight a channel then push \blacksquare .
- 3. Push \bigtriangledown or \frown to highlight Alarm then push $\boxed{13}$.
- 4. Select Alarm 1 or Alarm 2 then push **F3**.

hcn041.eps

- 5. Highlight **High** or **Low** then push **F4**.
- 6. Use the numeric keypad to input the limit (Setpoint).
- 7. To turn on an alarm output:
 - a. Highlight **Output** the then push **F3**.
 - b. Highlight an alarm output to assign to the channel then push **F4**.

erminal	Function	
GND	Ground Terminal	
1	Alarm Output 1	1123456TR
2	Alarm Output 2	↓ 1 2 3 4 5 6 TR
3	Alarm Output 3	
4	Alarm Output 4	
5	Alarm Output 5	
6	Alarm Output 6	<u> </u>
TRIG	External Trigger Input	

Figure 3-9. Rear-Panel Alarm Outputs

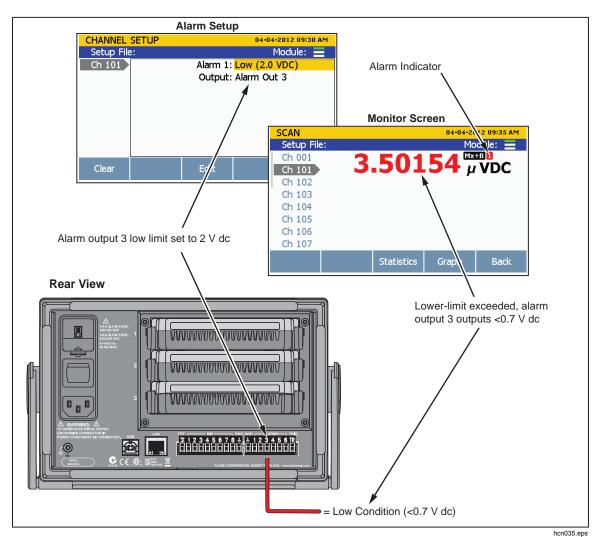


Figure 3-10. Alarm Output Example

3-31

Channel Delay

A channel delay is a measurement time delay that can be individually assigned to each channel to delay the measurement. Channel delays can be used for various applications, but they are most useful in applications where the source impedance or circuit capacitance is high. Use of a channel delay in these applications allow the input signal to settle before a measurement is made. This provides better measurement accuracy.

When a channel delay is set, the Product inserts the delay after the channel relays switch and waits until the channel delay time runs out before it measures the channel. Channel delays are set in seconds and the default setting is 0 seconds.

To set a channel delay:

- 1. Push SETUP.
- 2. Push \bigtriangledown or \bigtriangleup to highlight a channel then push \blacksquare .
- 3. Push **F2** to open the Channel Options menu.
- 4. Select **Channel Delay** then push **F3**.
- 5. Set the custom channel delay. The delay can be manually set in 1 millisecond increments from 1 millisecond to 600 seconds.

Rate of Change

Rate of Change is a statistical calculation that shows the user how much a measurement value has changed over a period of time. The Rate of Change is viewed in the statistics/graphing area in the Scan Menu. The Rate of Change setting in the Channel Options menu sets the scaling to per second (/s) or per minute (/min).

Note

Per minute (/min) is the default scaling selection unless otherwise changed.

To determine the rate of change, the Product compares two readings of a channel sampled at different times. First, the product computes the difference between the two readings and then divides it by the time difference between the samples in seconds. The result is then multiplied by the time base in seconds (60 for per minute) to determine the Rate of Change.

Note

If a channel is sampled more frequently than once every 10 seconds, two readings about 10 seconds apart are selected. If the interval between readings is 10 seconds or longer, the latest two readings are used.

To change the Rate of Change time base for a channel:

- 1. Push SETUP.
- 2. Push \bigtriangledown or \bigtriangleup to highlight a channel then push \blacksquare .
- 3. Push **F2** to open the Channel Options menu.
- 4. Select **Rate of Change** then push **F**3
- 5. Select per second or per minute then push **F3**.

NPLC

NPLC (Number of Power Line Cycles) is a user defined measurement speed selection used to filter out induced ac signal noise and other inherent noise signals (line frequency noise typically) on dc voltage, dc current, and resistance channels. It gives the user fine control of the measurement time for either faster speed or better accuracy. Lower NPLC increases the scan speed, but results in lower measurement accuracy. Higher NPLC improves the measurement accuracy, but reduces the scan speed.

Higher NPLC settings are necessary in some precise measurement applications where power line induced ac noise can affect precise dc signal measurements. Induced ac noise is usually not uniform and requires multiple samples to accurately read the induced ac signal. The more samples (the higher the NPLC setting), the better the ac noise can be counteracted and filtered out. To increase the measurement accuracy and to better filter the ac noise, the NPLC setting can be manually increased so that the Product samples the ac noise signal over multiple cycles to get a better average of the signal.

In summary, when higher NPLC settings are set, the measurement value is more accurate, but the tradeoff is that it takes longer for the Product to complete the measurement (see "About Scan Timing and Sampling" in Chapter 5). For applications where ac noise will not affect the test outcome (such as a true or false digital logic), a lower NPLC setting is recommended for faster measurements.

Input Impedance

This setting is used to set the input impedance on the channels. For the 100 mV, 1 V, 10 V dc voltage function, there are two available choices: 10M or >10G. The default setting is 10M.

Bandwidth

This setting is used to select the bandwidth of ac filter for ac voltage and ac current functions. The available choices are: 20Hz or 200Hz. The default setting is 20Hz.

Display As

This setting is used to set the display to show temperature or the mV equivalent for thermocouple channels.

Open Detect

This setting enables the Product to automatically detect an open circuit in the probe. This setting only shows in a thermocouple channel.

Chapter 4 Scan/Monitor, Record, and Data

Introduction

This chapter supplies information on the Scan, Monitor, and Record functions along with procedures and instructions.

Scan

Scan is a function of the Product that sequentially measures each channel and either temporarily shows the data on the display or records it to file if the recording feature is enabled (see "Record" on page 4-14). Scans are started manually by the user or by an internal or external trigger. To scan a channel, the Product sequentially cycles through the channels that are active and makes measurements as directed by the Test Setup file (see "Configure a Scan" on page 4-5).

Note

Monitor is a function to see the measurement data from a single channel while a scan is in progress (see "Monitor" on page 4-13). Use of the monitor function does not interrupt the active scan and only shows the measurement data from the last scan cycle completed.

In order for the Product to scan, the applicable channels need to be active and the unit under test (UUT) must be connected and ready. After these steps are complete, a scan can be started from the Scan/Monitor menu. If "Auto Recording" in the Test Setup menu is set to ON, the Product automatically records the scan data when the scan is started. If set to OFF, the user must manually push the Record key (necond) to record the measurement data to file. The scan data is stored to memory where it can be transferred to a PC to be viewed with Microsoft Excel (see "Open and View Measurement Data on a PC" on page 4-15).

While a scan is in progress, the measurements and statistics for all channels can be viewed in a chart or in a graph without interruption to the scan (see Figure 4-4). After a scan is stopped, this scan data stays in temporary memory and remains available until a new scan is started.


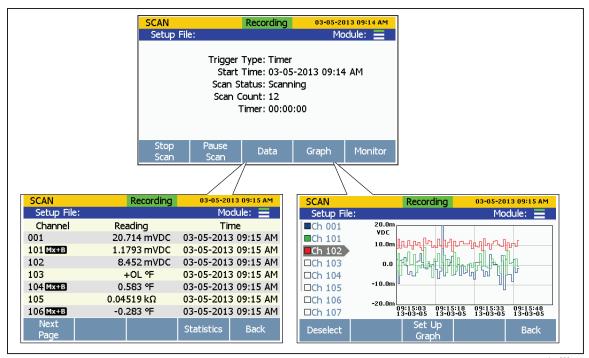


Figure 4-1. Scan Data

hcn038.eps

The Scan menu lets the user control the scan and view the scan data. The Scan menu also shows important status indicators to quickly inform the user of the scan status and progress of the scan. Table 4-1 shows the Scan menu and describes the status indicators and functions that can be performed from this menu. To open the Scan menu, push on the front panel.

Table 4-1. The Scan Menu

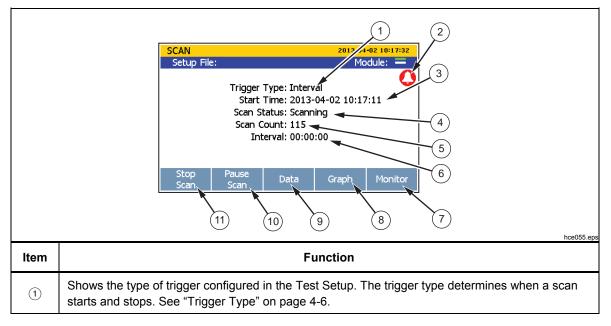

Item	Function
2	Master alarm indicator that displays when any configured channel alarm is tripped while a scan is in progress. To see which alarm tripped, push a on the Scan menu to open the channel data. If an alarm has tripped, a [1] or [2] icon will show next to the channel to indicate which alarm is tripped.
3	Shows then the scan was started. This field is blank until the first scan is started.
4	Shows the status of the scan. This field shows "Scanning" when a scan is in progress, "Paused" when the scan is paused, "Waiting" when the Instrument is waiting for the trigger, and "Inactive" when scanning is stopped.
5	Shows the number of scan sweeps have been completed since the start of the scan.
6	Countdown timer displayed only when the trigger source is Timer, Alarm or External.
7	Opens the Monitor function to take measurements of a single channel between scan sweeps. See "Monitor" on page 4-13.
(8)	Opens the Graph feature that lets the user plot the measurement data on a scalable graph. See "Graph the Measurements" on page 4-12.
9	Opens a spreadsheet view of all the most recent samples for each channel along with helpful statistics. See "View Scan Data and Statistics" on page 4-11.
(10)	Pause a scan after it is started. The softkey is not visible when the scan is inactive.
(1)	Start or stop a scan. See "Start a Scan" on page 4-10.

Table 4-1. The Scan Menu (cont.)

About Scan Timing and Sampling

When a scan is started, the Product sequentially scans and measures (samples) each active channel in ascending channel order. How long it takes to sample a channel depends on the measurement function, the user-programmed channel delay, and the sample rate of the scan or the NPLC setting of the channel. Collectively, the sum of channel sample times determine how long it takes to complete a full scan cycle and is referred to as the sweep time. See Figure 4-2 for an illustration of how the scan process works.

The channel sample times and scan sweep times vary based on the channel and test settings. The items below provide information on how these times can be impacted:

- The minimum channel sample time depends on the sample rate or NPLC setting and the measurement function (see Table 4-3).
- The channel sample time includes any necessary settling delay prior to the ADC sample to meet accuracy specifications in usual conditions. Table 4-4 lists the internal fixed settling delays for each parameter type and range.
- In some conditions, it may be necessary to add channel delay to allow for longer settling times. See "Channel Delay" in Chapter 3 for more information.

- The total channel sample time is the minimum sample time plus the userprogrammed channel delay. The longer the channel delay, the longer it takes to sample the channel.
- The total scan sweep time is sum of the channel sample times of all the channels scanned. A scan sweep will start when the selected trigger source is asserted if a previous scan sweep is not still in progress (see "Trigger Type" on page 4-6).
- The interval at which scan sweeps occur can be fixed by programming the trigger type to Timer and setting an interval time.

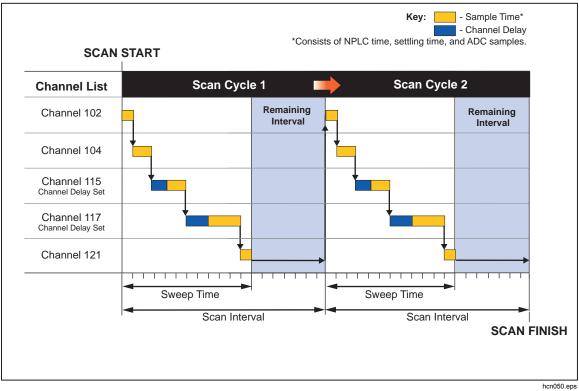


Figure 4-2. Illustration of a Scan Sweep

Type and Range	Time Delay
100 mV dc	0 ms
1 V dc	0 ms
10 V dc	0 ms
100 V dc	100 ms
300 V dc	100 ms
ACV all ranges 20 Hz filter	400 ms
ACV all ranges 200 Hz filter	100 ms
A dc (all ranges)	0 ms

Type and Range	Time Delay
ACI all ranges 20 Hz filter	400 ms
ACI all ranges 200 Hz filter	100 ms
100 Ω	0 ms
1 kΩ	0 ms
10 kΩ	100 ms
100 kΩ	100 ms
1 ΜΩ	500 ms
10 MΩ	1 s
100 ΜΩ	1 s
Thermocouple all types	0 ms
PRT 400 Ω	0 ms
PRT 4 kΩ	100 ms
Thermistor 2 kΩ	500 ms
Thermistor 90 kΩ	500 ms
Thermistor 1 MΩ	1 s

Figure 4-2. Settling Time Delay Values (cont.)

Configure a Scan

Scans are configured in the Test Setup menu that is opened in the Channel Setup menu (push then push 4). This section contains information on each parameter in the Test Setup menu to help configure the scan. Figure 4-3 shows the Test Setup menu.

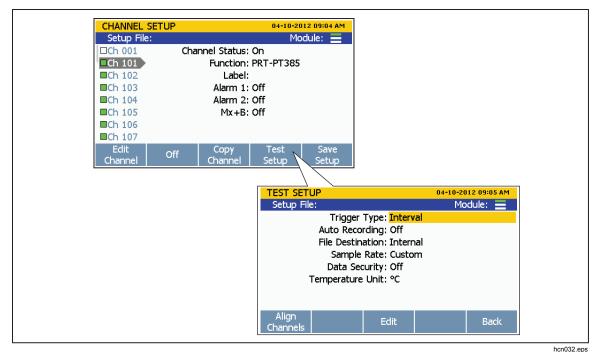


Figure 4-3. Test Setup Menu Example

Trigger Type

The Trigger Type tells the Product when and how to start and stop a scan. There are four trigger types:

Note

If a Scan Count of 0 is set or if the scan interval is shorter than the scan sweep time, the scan continuously repeats until the scan is stopped or the Product runs out of memory.

- The **Interval** trigger type sets the scan to happen on a user-defined numeric interval that is started by a front-panel softkey in the Scan/Monitor menu. The user sets the number of times to scan (Scan Count) and how often the scans occur (Interval).
- The **External** trigger type set the scan to start when a set TRIG input on the Digital I/O port detects a low condition. Like Interval, the user manually sets the number of times to scan (Scan Count) and the time between the scans (Interval).
- The **Alarm** trigger type sets the scan to start when a HI or LO channel alarm is tripped on a monitored channel. Like Interval, the user manually sets the number of times to scan (Scan Count) and the time between the scans (Interval).
- The **Manual** trigger type sets the scan to happen only when the user manually pushes the Scan/Monitor key on the front panel. This trigger type lets the user set the number of times to scan (Scan Count) when the key is pushed, but does not have an interval time because the interval is a manual key push.

Auto Recording

The Auto Recording feature automates the recording process. If Auto Recording is set to ON, the Product automatically records the scan data to file when the scan is started. If set to OFF, the user must manually push **FECORD** to start recording.

File Destination

Scan data can be stored to internal memory or a USB drive. If set to Internal, scan data is saved to the internal nonvolatile memory. If set to USB, scan data is saved to the USB drive connected to the front-panel USB port.

Note

Scan data stored directly to the USB drive is not visible to the user through the Memory menu. However, the Memory menu does show the user how much memory is available on the USB drive. To manage the scan data files on the USB drive, connect the USB drive to a PC and open the folder named "Scan Data". See "Open and View Measurement Data on a PC" on page 4-15.

Sample Rate

The Sample Rate sets the speed the channels are scanned. When set to Fast, the Product scans each channel very quickly that lets the user monitor the channels for rapid measurements changes. As a result of the quicker scan speed, the Product is not given the time to fine tune the measurement and results in a loss of one digit of measurement resolution. For example, a temperature measurement would read 22.41 °C with Slow and 22.4 °C in Fast.

Note

Sample Rate should not be confused with Channel Delay and Rate of Change in the advanced channel options. See "Scan Sweep" for more information.

The four Sample Rates are: Fast, Medium, Slow, and Custom. Table 4-3 shows the sample speeds for the different input types and ranges.

Functions		Sample Time (s)	
Functions	Fast ^[1]	Medium	Slow
DC Current DC Voltage Resistance	0.2 PLC	1 PLC	10 PLC
AC Current AC Voltage		Fixed to 10 PLC	
Frequency		Fixed to 1 PLC	
PRT Thermocouple Thermistor	1 PLC	2 PLC	10 PLC

Table 4-3. Scan Sample Rates

Data Security

Data security is used to secure data files that are traceable back to the user that performed the test (commonly referred to as test traceability). This is necessary for test environments and applications that require a method to guarantee that the test data has not been forged, changed, or tampered with, and was produced by trained, authorized personnel.

If the data security setting in the Test Setup menu is set to ON, the user must select a user profile and enter the associated password in order to start and record a scan. The user information is recorded into the scan data file that contains the user profile number and test information. For more information on the scan data files, see "Record" on page 4-14. For instructions on how to change the Admin or User profile passwords, see "Change the Admin and User Passwords" in Chapter 2.

When Data Security is on, Setup files are also protected. A setup file created with Data Security on cannot be changed or deleted except by an authorized user.

Note

If the guest option is used to start a scan, the user is recorded as "Guest" and the data file is not considered authorized and traceable.

Temperature Unit

This is an overall Product setting that sets the temperature units to be shown in either Celsius or Fahrenheit.

Notes

- The ability to change this setting to Fahrenheit is not available in some regions.
- *Mx*+*B* and Alarm settings of temperature channels are reset when the temperature unit is changed.

Align Channels

The Align Channels function lets the user designate a reference channel to align other channels to so that all the displayed measurements will be the same. This is accomplished with an Mx+B offset that is automatically applied to the selected channels to make them match the reference channel.

An application where this is commonly used is for temperature measurements. For example, a reference probe that is fully calibrated is put into a chamber with other probes that reads 250.52 °C. With the align function, the user sets the calibrated reference probe channel to be the reference channel. The user then sets four probes channels to be aligned with that reference that currently read 250.52 °C, 250.68 °C, 250.71 °C, 250.33 °C. When the user aligns the probes, the Product calculates and applies an Mx+B offset to the probes so that the displayed measurement value is the same as the reference probe. The result is that all four probes now measure 250.52 °C.

To align to a reference channel:

- 1. Push SETUP.
- 2. Push F4
- 3. Push F1
- 4. Use \bigtriangleup and \bigtriangledown to select a channel as the reference then push $\llbracket 4 \rrbracket$.
- 5. Use and to highlight a channel then push to set. Multiple channels can be selected to align.
- 6. Push **F4** to align the channels. The Product will take measurements on the reference channel and selected channels, then use Mx+B function to align these channels to the reference.

Automatic Power Loss Scan Resume

In the event that the Product experiences a loss of mains power while a scan is in progress, it can be configured to resume the scan when mains power comes on. This feature is referred to as "Power Loss Resume State".

Note

This setting is located in the Instrument Setup menu and not the Test Setup menu.

Unlike when a new scan is started, the Product will resume recoding to the file that it was recording to when the mains power was lost.

To turn on this feature:

- 1. Push SETUP.
- 2. Push ♥ or to highlight **Resume Scan** then **E**
- 3. Set to **ON** then push **F**3.

Basic Scan Procedures

Start a Scan

To start a scan:

Note

Once a scan is started, the scan must be paused or stopped before the Channel Setup or the Instrument Setup menu can be accessed.

- 1. Configure the Test Setup. See "Configure a Scan" on page 4-5.
- 2. Set all channels to be scanned to **ON**. See "Set Channels to ON of OFF" in Chapter 3.
- 3. Push SCAN MONITOR.
- 4. Start the scan as follows:
 - For the Interval trigger type: Push ^[1] to start the scan. The scan completes the amount of scan cycles set then automatically stops. At any time, push ^[1] again to stop the test or push ^[2] to pause the test. If automatic recording is set to OFF, push ^[ECORD] to record data.
 - For the **External** trigger type: Push **E** to start the scan. The scan is triggered by a low condition in the rear-panel Trig input. Once the low condition is detected, the scan sweep starts and runs as directed by the interval configuration. When the low condition that triggered the scan is removed, the Product will finish the scan in progress then stop and wait for next external trigger.

- For the **Alarm** trigger type: The scan sweep is triggered by an alarm that has tripped. To do this, select the Alarm trigger type in the test setup and assign a channel to be a trigger. When the scan is started, the Product automatically starts to monitor the channel set as the trigger for a tripped alarm. Once an alarm is tripped, the scan sweep starts and runs as directed by the test setup. Scan sweeps will continue as long as the alarm is tripped. If the alarm is no longer tripped, the Product will finish the scan in progress then wait for next alarm trip.
 - a. Configure the applicable channel alarm as previously described.
 - b. Push **SCAN** then push **F1** to start the scan.
- For the **Manual** trigger type: Push is to start the scan. The scan performs one scan cycle then stops. Push is again to trigger another scan cycle. At any time, push is again to stop the test or push is to pause the test. If automatic recording is set to OFF, push is to record data.

View Scan Data and Statistics

The Scan Data feature lets the user see the scan data from the last scan sweep (see Figure 4-4). This feature is located in the Scan menu (push then push f3). The data on this menu updates in real-time. From the Scan Data menu, the user can open a Statistics menu to view minimum, maximum, average, and standard deviation statistics for each channel (see Table 4-4).

If Mx+B is applied to the channel, an [Mx+B] icon will show next to the channel number. If an alarm is tripped, the alarm number will show next to the channel as a red icon and also the measurement value will be red. See Figure 4-4.

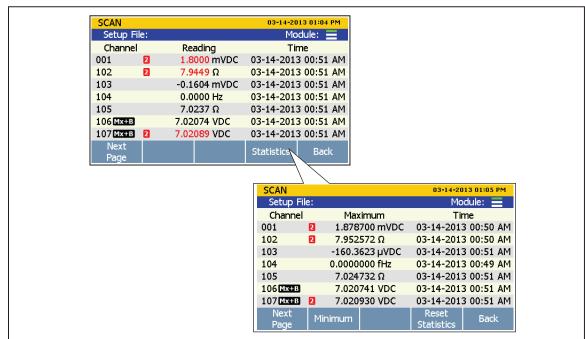


Figure 4-4. Scan Data

hcn055.eps

Statistic	Description
Maximum	Maximum measurement.
Minimum	Minimum measurement.
Average	Average of all the measurements taken.
Standard Deviation	A measure of the distribution of a set of data from its mean. The more spread apart the data, the higher the deviation.
Peak-to-Peak	Difference between the Maximum and the Minimum.
Rate of Change	A measure of how much the readings change over time.

To view the scan data:

- 1. Start a scan. See "Start a Scan" on page 4-10.
- 2. Push **E**⁴ to open the Scan Data menu. After the menu opens, push **E**¹ to cycle the menu pages to view more channels.
- 3. To view channel statistics, push **F4**.

Graph the Measurements

The Scan function has a graph feature that lets the user display the measurement data in a graph. This feature is located in the Scan menu (push item push f4). The graph automatically scales to fit all the information on the display when opened. To refine the data, the graph can be manipulated with the front-panel arrow keys as shown in Figure 4-5.

Notes

The maximum number of channels that can be graphed at once is four.

Selection of two or more channels with different input types (such as temperature and milliamps) can make the graph difficult to read because they do not share the same unit. To prevent this, only select channels of the same input type or view the channels one at a time.

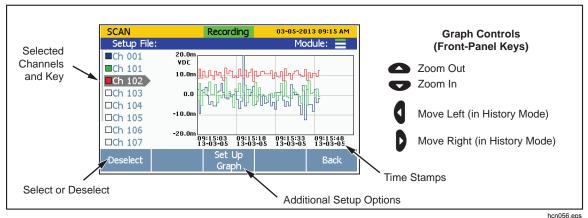


Figure 4-5. Graph Feature

To see the measurement data in a graph:

- 1. Push SCAN MONITOR.

Monitor

Monitor lets the user measure a single channel between scan sweeps. In addition, the user can view statistics and a graph of the measurement data since the scan began. To monitor a channel, push for on the Scan menu. When a scan is in progress, the display shows the measurement from the last reading. If a scan is not in progress, the display shows a real-time measurement.

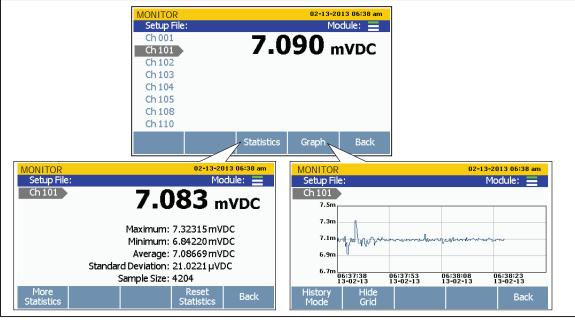


Figure 4-6. Monitor Menu

hcn046.eps

To monitor a channel:

- 1. Set all channels to be scanned to ON. See "Set Channels to ON or OFF" in Chapter 3.
- 2. Push SCAN MONITOR.
- 3. Push **F5** to open the Monitor menu. The first active channel is displayed.
- 4. Push \frown or \frown to switch between channels.

Record

The Record function saves the scan or DMM measurement results to a file that can be transferred to a PC for further evaluation. When the Product is recording data, the Record key is illuminated and "RECORDING" shows on the top of the display. Data is recorded for as long as the key is illuminated and "RECORDING" shows on the display.

Note

Scans can be completed without recording the results. In this scenario, the data is saved to temporary memory and will be overwritten the next time a scan is started or if the temporary memory becomes full (approximately 60,000 readings).

Record Measurement Data

For the Scan function, the behavior of the Record key is dependent on the Auto Recording setting in the Test Setup menu. If set to ON, the Product automatically records the scan data when the scan is started. If set to OFF, the user must manually push record to record scan data to file after the scan is started.

Note

Auto Recording is associated only with the Scan/Monitor function and does not work with the DMM function. To record a DMM measurement, push to start recording DMM data regardless of the Auto Recording setting in the Test Setup menu.

Each time a scan or a DMM measurement is recorded, a new data folder is made with a unique timestamp so that it can be easily found and managed (see "Open a Data File on a PC"). Data files made from a scan are saved in the scan folder and the DMM data files are saved in the DMM folder.

Note

Scan data or DMM data stored directly to the USB drive is not visible to the user through the Memory menu. However, the Memory menu shows the user how much memory is available on the USB drive. To manage the scan data files on the USB drive, connect the USB drive to a PC and open the folder named "Scan Data" or "DMM Data".

Memory Consumption for Recorded Data

The amount of memory consumed by recorded scan data varies based on how many channels are recorded and the number of scan cycles completed. See the information in Table 4-5 to estimate memory consumption. For front-panel DMM recording, it takes approximately 25 hours to consume 1 GB of memory.

Channels Recorded	Bytes Used Per Scan	Approximate Scans Cycles to Reach 1 GB
20 Channels	320 bytes	3,125,000 scans cycles
40 Channels	600 bytes	1,666,000 scans cycles
60 Channels	880 bytes	1,136,000 scan cycles
80 Channels	1,160 bytes	862,000 scan cycles

Table	4-5.	Scan	Data	Memory	Usage

Open and View Measurement Data on a PC

After a recorded scan is finished, the data file can be transferred to a PC where the results can be viewed in Microsoft Excel. To open the a data file on a PC:

- 1. Put the data on the USB drive to be transferred to the PC. If the Data file is on the internal memory, copy the file to the USB drive. If the scan was set up to record directly to the USB, the data file is already on the USB drive and no action is necessary.
- 2. Remove the USB drive from the front panel and insert it into a USB port on the PC.
- 3. Open the Start menu and search for the word "Computer" to open the Computer Drive manager (see image below).

computer	x	Shut down	
1 (1)	Computer	Ster OSI	Disk (C:)

- 4. Find the USB drive and double-click on it to explore the contents.
- 5. Navigate to the data folder as follows (see Figure 4-8 for an example of the folder structure):
 - a. Double-click on the **fluke** folder.
 - b. Double-click on the **2638A** folder.
 - c. Double-click on the serial number of the Product used to record the data. In the example, **12345678** is the serial number of the Product.

- d. Double-click on the **data** folder.
- e. Double-click on the **scan** folder to see scan data files or the **DMM** folder to see DMM data files. The data files are saved within a folder that was named with a timestamp of when the scan or measurement was recorded. This file naming convention is illustrated in Figure 4-7.

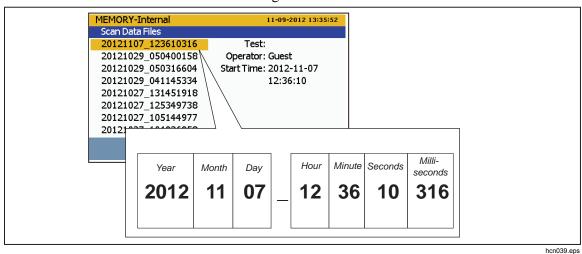


Figure 4-7. Scan Data File Name Convention

6. Choose a file to open then double-click on the file. The time-stamped data folder contains two comma-separated values (.csv) files: setup.csv and dat00001.csv. The setup.csv file contains all the test parameters that were configured when the data was recorded. The dat00001.csv contains all of the recorded measurement data. See Figure 4-8.

Note

The Product will make a new data file when the number of lines exceed 65535. For example, Dat00002.csv will be made when Dat00001.csv is filled.

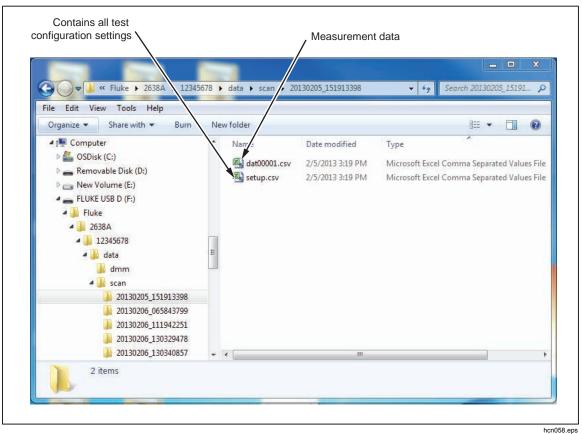


Figure 4-8. Setup.csv and Dat00001.csv Files

How to Read the Setup CSV File

The six sections of the setup.csv spreadsheet are discussed and shown in the subsequent sections.

General Information

This section of the spreadsheet shown below contains general information on the scan performed such as the start time and the Operator.

Test Setup)
Start Time	4/4/2012 10:03
User	GUEST

Instrument Information

This section of the spreadsheet shown below contains general information on the Product such as the serial number and last calibration date. This section also shows the Input Module configuration used.

Instrumen	t			
Hardware	Model	Serial Number	Version	CAL Date
Mainframe	2638A	12345678	20130322+0.33	3/26/2013
Slot1	2638A-100	23456789	(n/a)	1/31/2013
Slot2	NONE	(n/a)	(n/a)	(n/a)
Slot3	NONE	(n/a)	(n/a)	(n/a)

Analog Channels

This section of the spreadsheet shown below contains configuration information on each analog channel that was recorded.

Analog Ch Channel	Label	Function	Channel Delay	Rate of Cha	Dange	NPLC	Rand Wid	Input Imp	Onen
					-				
Ch001	FP	VOLT		MIN	3		(n/a)	10M	(n/a)
Ch101		VOLT	0	MIN	2	10	(n/a)	10M	(n/a)
Ch102		TEMP TC	0	MIN	AUTO	10	(n/a)	(n/a)	ON
Ch103		TEMP TC	0	MIN	AUTO	10	(n/a)	(n/a)	ON
Ch104	PROBE_F	TEMP TC	0	SEC	AUTO	10	(n/a)	(n/a)	ON
Ch105		TEMP TC	0	MIN	AUTO	10	(n/a)	(n/a)	ON
Ch106		TEMP RTD	0	MIN	AUTO	10	(n/a)	(n/a)	(n/a)
Ch107		TEMP TC	0	MIN	AUTO	10	(n/a)	(n/a)	ON
Ch108	S	VOLT	0	MIN	1	10	(n/a)	10M	(n/a)
Ch109		TEMP THER	0	MIN	AUTO	10	(n/a)	(n/a)	(n/a)
Ch110		TEMP RTD	0	MIN	AUTO	10	(n/a)	(n/a)	(n/a)
Ch112	S	VOLT	0	MIN	1	10	(n/a)	10M	(n/a)
Ch113	S	VOLT	0	MIN	1	10	(n/a)	10M	(n/a)
Ch114	S	VOLT	0	MIN	1	10	(n/a)	10M	(n/a)
Ch115	S	VOLT	0	MIN	1	10	(n/a)	10M	(n/a)
Ch117	S	VOLT	0	MIN	1	10	(n/a)	10M	(n/a)
Ch118	S	VOLT	0	MIN	1	10	(n/a)	10M	(n/a)
Ch119	S	VOLT	0	MIN	1	10	(n/a)	10M	(n/a)
Ch121		CURR	0	MIN	AUTO	10	(n/a)	(n/a)	(n/a)
Ch122		CURR	0	MIN	AUTO	10	(n/a)	(n/a)	(n/a)

Digital Channels

This section of the spreadsheet shown below contains configuration information for the DIO channel and the TOT channel.

Digital Cha	Digital Channels					
Channel	Label	Function	DIO Output	TOT Mode	TOT Debo	unce
Ch401		DIO	255	(n/a)	(n/a)	
Ch402		тот	(n/a)	READ	Off	

Math Channels

This section of the spreadsheet shown below contains configuration information for the math channels.

Math Chan	inels											
Channel	Label	Function	Туре	Rate of Cha	CO	C1	C2	C3	C4	C5	C6	Channels
Ch501		MATH	ADD	MIN	(n/a)	Ch101 Ch103						
Ch502	SQRT	MATH	SRO	MIN	(n/a)	Ch101						

Test Setup Parameters

This section of the spreadsheet shown below contains the test setup settings that were used to run the scan.

Test Setup												
Setup Nam Trigg	ger Type	Auto Record	File Destination	Sample Rat	Security	Scan Cour	Interval	TriggerCh	Sample C	Ref1	Num Of Po	oints
TIM	(ON	USB	NPLC	OFF	100	0	(n/a)	(n/a)	(n/a)	(n/a)	

How to Read the Data CSV File

The dat00001.csv file contains the measurement data from the scan. Each row contains measurement data for a single scan sweep and shows the time when the sweep completed. To see how the test and channels were configured, view the information in the setup.csv file (see "How to Read the Setup.csv File").

All measurements can easily be toggled to engineering notation with the cell formatting options within Microsoft Excel. An example of the spreadsheet is shown below.

```
Record # Time
                  Ch 001 (V[ Ch 101 (V[ Ch 102 (C) Ch 103 (C) Ch 104 (C) Ch 105 (C) Ch 106 (C) Ch 107 (C) Ch 108 (V[
          04:10.2 9.82E-04 -1.95E-06 25.23118 25.31694 26.96164 24.89176 9.90E+37 9.90E+37 9.89E-04
      1
          04:19.6 9.84E-04 -1.35E-05 24.96417 25.32083 26.79717 24.89303 9.90E+37 9.90E+37 9.76E-04
      2
          04:29.0 9.75E-04 -1.66E-05 24.93361 25.32176 26.89517 24.87964 9.90E+37 9.90E+37 1.02E-03
      3
           04:38.3 9.87E-04 -1.38E-05 25.02723 25.3208 26.98641 24.88509 9.90E+37 9.90E+37
      4
                                                                                            1.04E-03
      5
           04:47.7 9.49E-04 -5.63E-06 25.18236 25.3241 26.81155 24.86407 9.90E+37 9.90E+37
                                                                                            1.04E-03
          04:57.1 1.02E-03 -3.90E-06 25.25767 25.33134 26.5986 24.86986 9.90E+37 9.90E+37
                                                                                            1.10E-03
      6
      7
          05:06.5 1.01E-03 -4.42E-06 25.03256 25.32218 26.38639 24.86133 9.90E+37 9.90E+37
                                                                                            1.05E-03
      8
          05:15.9 9.75E-04 -1.05E-05 24.82163 25.29039 26.34924 24.84834 9.90E+37 9.90E+37
                                                                                            1.05E-03
      9
          05:25.2 9.93E-04 -1.54E-05 24.72215 25.2746 26.40215 24.83991 9.90E+37 9.90E+37 1.06E-03
          05:34.6 9.92E-04 -1.32E-05 24.82524 25.27247 26.5988 24.85923 9.90E+37 9.90E+37 1.07E-03
      10
          05:44.0 9.90E-04 -1.33E-05 24.92385 25.27348 26.78825 24.85618 9.90E+37 9.90E+37 1.08E-03
      11
          05:53.4 9.87E-04 -9.18E-06 25.04537 25.25016 26.86346 24.87239 9.90E+37 9.90E+37 1.04E-03
     12
     13
          06:03.2 9.69E-04 -1.23E-05 24.8901 25.22368 26.66354 24.87937 -9.90E+37 9.90E+37 1.01E-03
```

Chapter 5 DMM Operation

Introduction

This chapter supplies instructions on how to operate the DMM function of the Product.

About the DMM Function

The DMM is a digital multimeter feature lets users quickly connect test leads to the frontpanel to make voltage, resistance, current, frequency, and temperature measurements. As these measurements are taken, these measurements values are shown on the screen and can also be recorded to file. These recorded files are referred to as DMM Data files. The DMM feature is easily accessed and configured with the DMM key on the front panel.

Note

The DMM function is an individual function of the Product that does not read or share configuration information with channel 001 in the channel list. For example, use of the DMM feature does not automatically configure and set channel 001 to ON in the Channel Setup menu.

Figure 5-1 shows an example of a front-panel input configuration.

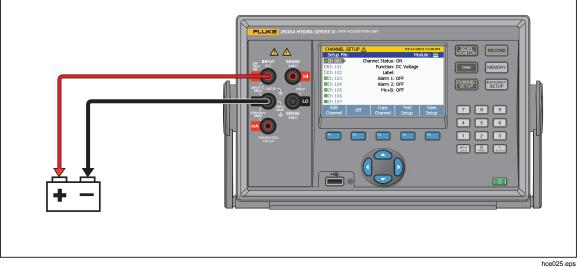


Figure 5-1. Example Voltage Front-Panel Connection

Input Type Selection and Range Adjustment

The DMM menu has four softkeys available to select and configure the front-panel inputs for the measurement type. After a softkey is pushed, the user is prompted for additional input information to fully configure the input. To adjust the range of the measurement after the input is configured, push the \bigcirc and \bigcirc keys on the front panel to cycle through the available range selections. Push the \bigcirc and \bigcirc to adjust the NPLC setting, which determines the sample rate.

Input Type and Range	DMM DC Volta Ch 001		Auto : 10PL 0.98	.C Mo	12 10:20 AM bdule: = 1VDC
			T arrow key arrow key t		
	Volts	Amps	Ω	Freq	Options
		Input Func	tion Selecti	on	J

Figure 5-2. Input Function Selection

hcn037.eps

More Functions (PT385 or PT392)

Under More Function menu, users can configure the front-panel inputs to measure PT100 (PT385 or PT392).

- 1. Push DMM
- 2. Push **F5** to show Channel Options.
- 3. Push **F2** to show More Functions;
- 4. Push **F1** or **F2** to select PT385 or PT392.
- 5. Follow the onscreen directions to complete the configuration.

Relative Measurements


The DMM feature has a relative function that lets the user make relative measurements. A relative measurement is the difference above or below a baseline measurement value.

To make a relative measurement, a measurement is made from the front panel then the REL softkey is pushed (E1...). The Product takes the measurement and freezes it as the baseline measurement as shown in Figure 5-3. Any measurements made after this point is shown as the amount above or below the baseline measurement that is referred to as the relative measurement value. When REL function is activated, the range is locked automatically.

To make a relative measurement:

- 1. Push DMM.
- 2. Configure the input.
- 3. Push **F5** to show the channel options.

4. Make a measurement from the front panel. After the measurement is stable, push **FI** (REL) to set the baseline.

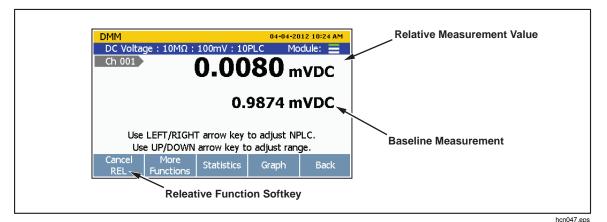

5. Observe subsequent readings as relative measurements.

Figure 5-3. Relative Measurement

Graph the Measurements

The DMM has a graph feature that lets the user display the measurement data in a graph. The graph has features such as History mode and Live mode to let the user evaluate the data on the display. The graph automatically scales to fit all the information on the display when opened. To refine the data, the graph can be manipulated with the arrow keys as shown in Figure 5-4.

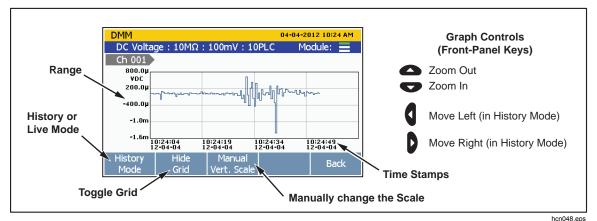


Figure 5-4. Graph Function

To see the measurement data in a graph:

- 1. Push DMM.
- 2. Configure the input.

- 3. Push **F5** to show the channel options.
- Push ^[4] to show the graph. Use and to zoom in and out. To see historical data, push ^[5] to switch between History Mode and Live Mode. When in History Mode, use and to move the graph left and right.

Measurement Statistics

The DMM has a statistics feature that lets the user see statistical information for the measurements made. Table 5-1 lists the statistics available along with a brief description. The statistics start when the user pushes the statistics are reset.

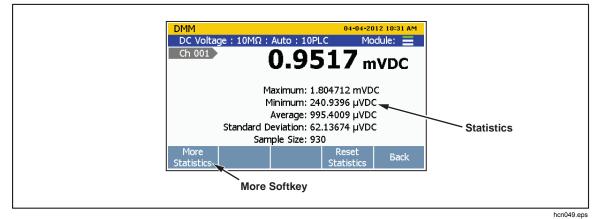


Figure 5-5. DMM Statistics

Table 5-1. Statistics

Statistic	Description
Maximum	Maximum measurement.
Minimum	Minimum measurement.
Average	Average of all the measurements taken.
Standard Deviation	A measure of the distribution of a set of data from its mean. The more spread apart the data, the higher the deviation.
Sample Size	The number of readings used in the statistical calculations.
Rate of Change	A measure of how much the readings change over time.
Peak to Peak	Difference between the Maximum and the Minimum.

To see the statistics data:

- 1. Push DMM.
- 2. Configure the input.
- 3. Push **F5** to show the channel options.
- 4. Push **E3** to show the statistics. Push **E1** to view more statistics. To reset the statistics, push **E4**.

Chapter 6 Maintenance and Care

Introduction

This section supplies information on how to clean the Product, reset the memory, and replace the fuse in the rear of the Product.

Clean the Product

To clean the Product, wipe the instrument with a cloth that is lightly dampened with water or mild detergent. Do not use aromatic hydrocarbons, chlorinated solvents, or methanol based fluids.

Replace the Fuse

The Product has a product fuse that protects from overcurrent. Each voltage selection requires a specific fuse. See Table 6-1.

<u>∧</u>∧Warning

To prevent possible electrical shock, fire, or personal injury, use only specified replacement parts.

Voltage Selector	Fuse	Fluke Calibration Part Number
100 V	0.25 A, 250 V (slow blow)	166306
120 V	0.25 A, 250 V (slow blow)	166306
220 V	160 mA, 250 V (slow blow)	4394437
240 V	160 mA, 250 V (slow blow)	4394437

Table 6-1. Fuses

To replace the fuses (see Figure 6-1):

- 1. Disconnect the mains-power cord from the power-entry module.
- 2. Open the power entry module and remove the fuse holder.
- 3. Replace the fuses with exact replacements as listed in Table 6-1.

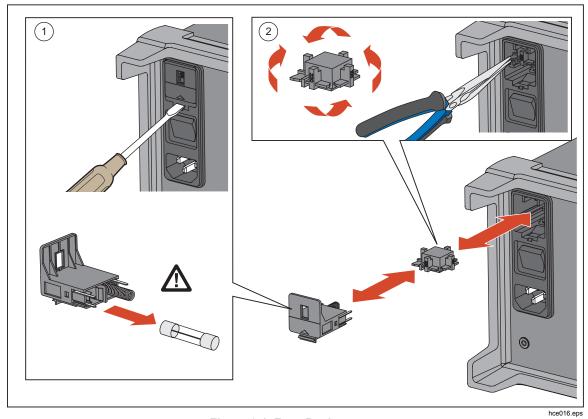


Figure 6-1. Fuse Replacement

Memory Reset and Factory Reset

The Product has two memory reset functions to remove data from the memory and to reset the Product: Clear all Files and Factory Reset. See Table 6-2 for a comparison of the three functions.

Note

All memory reset functions require the Admin password to accomplish.

 Table 6-2. Comparison of the Memory Clear Functions

Task	Clear All Files	Factory Reset
Deletes Test Setup files, DMM Data files, and Scan Data files from the internal memory. ^[1]	•	
Clears the configuration of the Channel Setup, Test Setup, and Instrument Setup ^[2]		•
Notes: [1] – Does not remove data from the USB drive. [2] – Does not reset the MAC address, the serial number, calibration passwords.	, clock time, nor th	e Admin or User

To Clear all Files:

- 1. Push MEMORY.
- 2. Push **F1**
- 3. Push F1
- 4. Enter the Admin password, then push **F4**.
- 5. Push **F3** to confirm.

To reset the Product to factory settings:

- $1. \quad Push [] \text{Instrument} \\ \text{Setup}.$
- 2. Push **F**²
- 3. Enter the Admin password, then push **F4**.

Firmware Update

For Products with a firmware version 1.03 or higher, firmware may be updated by the product administrator with the front-panel USB port. New firmware versions are available from the Fluke Calibration web page for the Product under the Knowledge and Information tab.

For Products that have firmware versions below 1.03, contact Fluke Calibration Service to schedule a firmware update as these versions do not support the USB firmware update process.

Update instructions for Products that use version 1.03 and above:

≜Caution

- Do not cycle the power or remove the USB device while the firmware update is in process. These actions will cause an instrument failure during the update process and require a return to a Fluke Calibration Service center to correct.
- The Product automatically re-boots when the update process is complete. Updates can take several minutes to complete and the display screen will not illuminate until the re-boot.

Note

Fluke Calibration recommends that you move all internal data files and setup files from the Product to a USB device before the update of the firmware.

Before the update process starts, verify that the current firmware is version 1.03 or above by viewing "Firmware" under [SETUP]. If your firmware version is below 1.03, do not continue the update process. You must return the Product to Fluke Calibration Service for the firmware update.

Firmware update steps:

- 1. Download and extract the firmware update files (AuxInfo.txt and mtv.flt) to your computer from the Fluke Calibration website.
- 2. Create a new folder "firmware" on a USB flash drive (1 GB or greater), and then copy these files into this folder. To prevent file corruption, use the Windows utility to safely eject your USB flash drive from your computer.
- 3. Plug the USB flash drive into the Product and wait for the red light on the USB port to illuminate and show that the drive is recognized.

Note

Some USB flash drives may not be recognized by the Product. Test the USB flash drive prior to starting this update process to ensure it is recognized.

- 4. Push setup to enter the Setup menu.
- 5. Push the Up/Down arrow button to select "Firmware" then push **F3** to enter the firmware menu.
- 6. Push **F** and enter the administrator password and then push **F** to start the update process.
- 7. WAIT until the Product automatically re-boots. There will be no screen display for several minutes during this time. Do not cycle the power or remove the USB device while the firmware update is in process.
- 8. After the automatic re-boot, push [NETRUMENT] to verify that the update was successful. Verify the firmware version that you have installed is displayed on the screen.

User-Replaceable Parts and Accessories

Table 6-3 lists the part numbers of each user-replaceable part or accessory for the Product.

Part Number	Name	Quantity
4410441	Transit Case	1
Contact Fluke Calibration	DIO/ALARM connectors for 2638A	1
4298499	USB Cable	1
4121552	USB Drive (4 GB)	1
4396147	884X-ETH Ethernet Interface Cable, 1 Meter	1
3980562	TL71 Test Lead Set	1
4281980	Protective Rubber Boot (front)	1
4281971	Protective Rubber Boot (rear)	1
4281998	Handle	1
4374731	Protective Slot Cover	1
166306 📐	Fuse 0.25A, 250V (slow blow) [2]	1
4394437 📐	Fuse 0.160 mA, 250V (slow blow) [2]	1
4410418	Relay Card	1 ^[1]
4410452	2638A-100 Universal Input Module	1 ^[1]
Notes:	·	
[1] – Quantity of it	ems listed can vary based on kit or model ordered.	
[2] – Only use exa	act replacements.	

Table 6-3. User-Replaceable Parts and Accessories

Chapter 7 Error Messages and Troubleshooting

Introduction

This chapter supplies information on error messages and how to troubleshoot the product.

Error Messages

Error messages help the user diagnose problems with the Product. Error messages contain a message along with an error code. If an error message shows on the display, use the information in Table 7-1 to resolve the problem.

Error Code	Error Message	Causes and Solutions
		Cause: The error queue is full because more than 16 errors have occurred.
Error -350	Queue overflow	Solution: The error queue is cleared by *CLS (clear status) command or when power is cycled. The errors are also cleared when the queue is read.
Frror -224	Illegal parameter value	Cause: A discrete parameter was received that was not a valid choice for this command.
		Solution: Invalid parameter value used. Check the parameter values and try again.
Error -222	Data out of range	Cause: A numeric parameter value is outside the valid range for this command.
		Solution: Check the parameter value and try again.
Error -213	INIT ignored	Cause: An INITiate command was received but could not be executed because a scan was already in progress.
		Solution: Send an ABORt command to stop a scan in progress.
Error -211	Trigger ignored	Cause: More than one trigger was received while the instrument was scanning.
		Solution: Make sure the proper trigger type is selected. If the problem persists, try to slow down the rate that the trigger occurs.
Error -171	Invalid expression	Cause: The expression data element was invalid. This could be because of an unmatched parentheses or an illegal character.
		Solution: Check the parameter value and try again.

Error Code	Error Message	Causes and Solutions
Error -161	Invalid block data	Cause: A block data element was expected, but was invalid. For example, an END message was received before the length was satisfied.
		Solution: Check the command and try again.
		Cause: An invalid character string was received.
Error -151	Invalid string data	Solution: Check to see if the character string in is enclosed in quotation marks and verify that the string contains valid ASCII characters.
Error -144	Character data too long	Cause: The character data element contains more than 250 characters.
	long	Solution: Check the parameter value and try again.
Error -123	Exponent too large	Cause: A numeric parameter was found whose exponent was too large for this command.
		Solution: Check the parameter value and try again.
		Cause: A command was received that is not valid for this instrument.
Error -113	Undefined header	Solution: The command entered could be misspelled or not a valid command. If the shortened form of a command is used, remember that it can contain up to four letters. Also check for duplicate colons.
	Missing parameter	Cause: Fewer parameters were received than expected for this command.
Error -109		Solution: One or more parameters that are required for this command have been omitted. Check the parameter value and try again.
	Parameter not allowed	Cause: More parameters were received than expected for this command.
Error -108		Solution: An extra parameter could have been added to a command that does not require a parameter. Check the parameter value and try again.
Error -104	Data type error	Cause: Invalid data type was found in the command string.
		Solution: Check the parameter value and try again.

Error Code	Error Message	Causes and Solutions
Error -102	Syntax error	Cause: Invalid syntax was found in the command string. Solution: Check the parameter value and try again.
Error 0	No error	Cause: Error queue is empty. No action necessary.
Error 100	Acknowledgement queue full	Cause: GX acknowledgement queue overflow. Note GX is the abbreviation for Guard Crossing - which is the communication link between the inguard and outguard. Solution: Instrument will restart the GX.
Error 101	Inguard not responding (recv)	Cause: Inguard not responding (receive). Solution: Instrument will restart the GX.
Error 102	Lost sync with inguard	Cause: Lost sync with inguard. Solution: Instrument will restart the GX.
Error 103	Inguard not responding (send)	Cause: Inguard not responding (send). Solution: Instrument will restart the GX.
Error 104	Oversize packet received	Cause: Oversize packet received. Solution: The packet will be ignored automatically.
Error 105	GX CRC error	Cause: CRC error detected. Solution: No user action necessary. The packet will be ignored automatically.
Error 106	Wrong ACK number	Cause: An ACK packet was received with unexpected ACK number. Solution: No user action necessary. The Instrument will restart the GX.
Error 107	Info packet received; link not active	Cause: An INFO packet was received, but the communication has not been setup. Solution: No user action necessary. The packet will be ignored automatically.
Error 108	Unknown control byte	Cause: A packet was received with unknown control byte. Solution: No user action necessary. Instrument will restart the GX.

Table 7-1. Error Messages (cont.)

Error Code	Error Message	Causes and Solutions
Error 109	Unknown ACK byte	Cause: A packet was received, but it is not an acknowledgement. Solution: No user action necessary. The Instrument will restart the GX.
Error 110	Quality indicator too low	Cause: GX quality low. Solution: No user action necessary. The Instrument will restart the GX.
Error 111	GX restart	Cause: GX not responding. Solution: No user action necessary. Instrument will restart the GX.
Error 200	A/D conversion timeout	Cause: A/D conversion timeout. Solution: Cycle the power. If the error occurs again, contact Fluke Calibration (see Chapter 1).
Error 201	Error detecting line frequency	Cause: The line frequency is out of range. Solution: Cycle the power. If the error occurs again, contact Fluke Calibration (see Chapter 1).
Error 202	A2 memory failed	 Cause: Failed to access memory on A2 board, or checksum failure detected in the memory. Solution: Cycle the power. If the error occurs again, contact Fluke Calibration (see Chapter 1).
Error 203	Slot 1 module memory failed	 Cause: Failed to access memory on module of slot 1, or checksum failure detected in the memory. Solution: Cycle the power. If the error occurs again, contact Fluke Calibration (see Chapter 1).
Error 204	Slot 2 module memory failed	 Cause: Failed to access memory on module of slot 2, or checksum failure detected in the memory. Solution: Cycle the power. If the error occurs again, contact Fluke Calibration (see Chapter 1).
Error 205 (2638A Only)	Slot 3 module memory failed	 Cause: Failed to access memory on module of slot 3, or checksum failure detected in the memory. Solution: Cycle the power. If the error occurs again, contact Fluke Calibration (see Chapter 1).

Table 7-1. Error Messages (cont.)

Error Code	Error Message	Causes and Solutions
Error 206	Error reading cold junction temperature	Cause: Failed to read cold junction temperature from module. Solution: Cycle the power. If the error occurs again, contact Fluke Calibration (see Chapter 1).
Error 207	Failed to reset relay on slot 1	Cause: The relay does not reset when the channel is switched.
Error 208	Failed to reset relay on slot 2	Solution: Cycle the power and try again. If the error occurs again, the relay card needs serviced, contact Fluke
Error 209	Failed to reset relay on slot 3	Calibration (see Chapter 1).
Error 260	Error copying	Cause: The copy function failed.
	configure to ChXXX	Solution: Check the channel list and make sure all selected channel are set up correctly.
Error 300	Invalid procedure	Cause: Wrong calibration procedure is specified in CALibrate:STARt command or MAIN in CALibrate:STARt command could be misspelled.
		Solution: Check the parameter value and try again.
Error 301	Invalid procedure step	Cause: Wrong or misspelled calibration step is specified in CALibrate:STARt command.
	step	Solution: Check the parameter value and try again.
Error 302	Step change not allowed while busy	Cause: Invalid CALibrate:STARt was received while a calibrate operation is in progress.
		Solution: Send CALibrate:ABORt to terminate the active calibration procedure.
Error 303	Invalid starting point	Cause: The step specified in CALibrate:STARt command should be the first point of a function or a range, it is invalid to start a calibration procedure from an intermediate step.
		Solution: Check the start point and try again.
Error 304	Invalid reference unit	Cause: CALibrate:NEXT command was received with an unexpected unit.
		Solution: Check the parameter value and try again.
Error 305	Entered value out of	Cause: CALibrate:NEXT command was received, but the reference value is out of range.
	range	Solution: Check the parameter value and try again.

Table 7-1. Error Messages (cont.)

Error Code	Error Message	Causes and Solutions
Error 306	Not waiting for reference	Cause: CALibrate:NEXT command with a reference value was received, but the reference value is not allowed for current step. Solution: Check the parameter value and try again.
Error 307	Continue command ignored	Cause: CALibrate:NEXT command was received, but it is not expected for current calibrate step. Solution: Check the parameter value and try again.
Error 318	Reading does not match reference	Cause: The measured value out of range, it might be caused by wrong input signal or hardware defect. Solution: Make sure that the input signal matches the requirement. If the input signal is correct, cycle the power. If the error occurs again, contact Fluke Calibration (see Chapter 1).
Error 320	Timeout waiting for reading	Cause: Timeout while waiting readings from inguard. Solution: Cycle the power. If the error occurs again, contact Fluke Calibration (see Chapter 1).
Error 322	Password missing	Cause: CALibrate:ENABle command was received to unlock the calibration but ADMIN password is not provided. Solution: Make sure that ADMIN password was sent with the CALibrate:ENABle command.
Error 323	Wrong password	Cause: CALibrate:ENABle command was received to unlock the calibration but the ADMIN password is wrong. Solution: Make sure that correct ADMIN password was sent with the CALibrate:ENABle command.
Error 324	Calibration locked	Cause: The calibration is locked when a CALibrate command was received. Solution: Use the CALibrate:ENABle command to unlock the calibration first.
Error 398	Anomalous error %d	 Cause: Unknown error occurred during the calibration procedure. Solution: Restart the calibration procedure. If the error occurs again, contact Fluke Calibration (see Chapter 1).

Error Code	Error Message	Causes and Solutions
Error 399	Error at step %s	Cause: An error occurred at present calibrating step. Solution: Check next error message for specific solution.
Error 400	External CJC not configured	 Cause: A thermocouple channel is set to external CJC, but the channel that is used to measure external CJC temperature has not been configured. Solution: Configure the lowest module channel to PRT or Thermistor with temperature reading, it will be used as external CJC channel.
Error 401	Channel used as external CJC	Cause: Configure is changed to the channel that is used to measure external CJC temperature.Solution: Turn off all thermocouple channels that are configured for external CJC first.
Error 402	TC external reference channel	Cause: Configure the lowest module channel as TC with external CJC. Solution: Check the parameter and make sure that the lowest module channel is not configured as TC with an
Error 403	Parameter does not meet present config	external CJC. Cause: Parameter or command is not allowed for present configuration. For example: SENSe:NPLC 1 (@401) is received, but channel 401 is DIO. Solution: Check the parameter value and try again.
Error 404	Channel limit exceeded	Cause: Too many channels in scan list (max. 178). Solution: Turn off some channels and try again.
Error 405	Channel used as alarm trigger	Cause: A channel cannot be set to OFF while it is used as trigger channel for alarm test. Solution: Change the trigger channel setting or reconfigure the trigger source.
Error 406	Alarm channel not enabled	Cause: The alarm channel selected to be the alarm trigger is set to OFF. Solution: Enable and configure the alarm channel then try again.
Error 410	Alarm channel not set	Cause: A scan is started but the alarm trigger does not have an alarm channel assigned. Solution: Assign a channel as alarm trigger channel.

Table 7-1. Error Messages (cont.)

Error Code	Error Message	Causes and Solutions
Error 411	Pause ignored	Cause: Invalid pause operation while scan has not been initiated. Solution: Pause is only allowed when scan is initiated.
Error 412	Scan list is empty	Cause: No channel is ON while scan is being initiated. Solution: Configure the channels before the scan is started.
Error 415	Module not connected	Cause: The Instrument attempted an operation but detected that a required Input Module was not installed. This error can also occur if a setup file is loaded without all the Input Modules installed that the setup file requires. Solution: Install the required Input Module and try the operation again. See Chapter 2.
Error 416	Channel unavailable	 Cause: The channel is unavailable or reserved for 3-wire or 4-wire use. Solution: Reconfigure the channel that reserved this sense channel for use. See Chapter 3.
Error 417	Active module disconnected	 Cause: An Input Module was disconnected. If a scan is was in progress, it will be stopped. Solution: Install the Input Module again then try the test again. If the Input Module was installed when the error occurred, make sure the Input Module is fully seated in the rear panel. See Chapter 2.
Error 418	Monitor state is locked	Cause: Monitor channel or monitor state is changed while an alarm trigger scan or automated test is in progress. Solution: Stop the scan.
Error 419	Read config file failed	Cause: The Instrument could not read the configuration file that contains all the Instrument settings. When this happens, the configurations are reset to factory defaults until the configuration can be read again. Solution: Contact Fluke Calibration. See Chapter 1.
Error 420	Not a math channel	Cause: Error occurs when a user attempts to set a math channel on any channel other than Ch501 through Ch520. Solution: Check the parameter value and try again.

Error Code	Error Message	Causes and Solutions
Error 421	Not a DIO channel	Cause: Error occurs when a user attempts to set a DIO channel on any channel other than Ch401. Solution: Check the parameter value and try again.
Error 422	Not a totalizer channel	Cause: Error occurs when a user attempts to set a TOT channel on any channel other than Ch402. Solution: Check the parameter value and try again.
Error 423	Not an analog channel	Cause: Error occurs when a user attempts to set an analog channel on any channel other than Chx01 through Chx22. Solution: Check the parameter value and try again
	3-wire or 4-wire not allowed on channel	Cause: Channel cannot be configured for 3-wire or 4-wire because (1.) the input type does not support it (2.) the channel is not a dedicated sense channel.
Error 424		Solution: Check to make sure that the sense wires are in the sense terminals and not the input terminals. When a sense is configured, it is configured on the channel associated with the input terminal and automatically reserves the sense channel directly across from the input. See Chapter 2 and Chapter 3 for more information.
Error 425	Function not allowed on current channel	Cause: Chx21 or Chx22 can only be configured as a current channel. Solution: Set up the input on a different channel.
Error 428	Parameter value out of range	Cause: Parameter in command exceeds the limit. Solution: Check the parameter value and try again.
Error 429	Channel limit exceeded	 Cause: A single math channel is configured to use more than 10 channels. Solution: Limit the number of math channels to no more than 10 with the CALCulate:MATH:SOURce command.
Error 430	String too long	Cause: Too many characters are included in a string parameter. For example,Probe ID (max. 24 characters); Unit (max. 3 characters); Channel label (max. 16 characters); Test setup file name (max. 8 characters). Solution: Check the parameter value and try again.

Error Code	Error Message	Causes and Solutions
Error 431	Invalid setpoint	Cause: Setpoint that is specified in the command is not in range 1 to 20. This could be because of a wrong setpoint in the TRIGger:AUTO:POINts, TRIGger:AUTO:SPOint, TRIGger:AUTO:TOLerance, TRIGger:AUTO:STABility, TRIGger:AUTO:DWELI commands Solution: Check the parameter value and try again.
Error 432	Input module not installed	Cause: The Input Module is not installed. Solution: Install the Input Module and try again.
Error 433	Recording is automatic	Cause: Recorder is set to OFF while automatic recording is in progress. Solution: Stop the scan or use the ABORt command.
Error 434	Cannot record while idle	Cause: Recorder is started, but a scan has not been started yet. Solution: Use command INITiate to start scan.
Error 435	Only fixed CJC allowed on channel	Cause: Ch001 is being configured to thermocouple with internal or external CJC, that is not supported on this channel. Solution: Set up the input on a different channel.
Error 436	Unavailable operation	Cause: The operation is not supported on specified channel. Solution: Check the parameter value and try again.
Error 439	DIO currently committed to scan	Cause: DIO cannot be used as output while it is included in scan list. Solution: Use command *RST to reset to factory default, or set the DIO channel to OFF.
Error 440	Not able to achieve requested resolution	Cause: The Instrument cannot achieve the requested measurement resolution. Invalid resolution in the CONFigure or MEASure? Command could have been set. Solution: Check the parameter value and try again.
Error 441	Cannot monitor math channel	Cause: The user tried to monitor a math channel. Math channels cannot be monitored. Solution: See the math channel data in the scan data screen.
Error 501	Invalid keyword or choice	Cause: Invalid keyword is found in the command. Solution: Check the parameter value and try again.

Error Code	Error Message	Causes and Solutions
Error 502	Temperature unit	Cause: UNIT:TEMPerature command is received while the temperature unit is locked to °C.
		Solution: Contact Fluke Calibration. See Chapter 1.
Error 527	Operations not allowed while busy	Cause: Operation cannot be performed while system is busy. Solution: Use *RST command to reset the Instrument to the factory default state.
F 500	Channel in use for 3-wire or 4-wire	Cause: The channel is unavailable or reserved for 3-wire or 4-wire use.
Error 528		Solution: Reconfigure the channel that reserved this sense channel for use. See Chapter 3.
Error 530	Configuration file corrupt	Cause: The test setup is found corrupted while loading. Solution: Cycle the power and try to reload the setup file. If the error occurs again, load a different file to see if the the single file is corrupted or if the Instrument is malfunctioning. If the error happens with a different file, contact Fluke Calibration (see Chapter 1).
Error 580	(STA) begin not called	Cause: Invalid accessing to state. Solution: Cycle the power. If the error occurs again, contact Fluke Calibration (see Chapter 1).
Error 590	Cannot get DHCP IP address	Cause: Get an IP address from DHCP server failed. Solution: Make sure a DHCP server is running in your network.
Error 600	(DB) begin not called	Cause: Invalid accessing to database. Solution: Cycle the power. If the error occurs again, contact Fluke Calibration (see Chapter 1).
Error 601	(DB) Error initializing data buffer	Cause: Database is not initialized. Solution: Cycle the power. If the error occurs again, contact Fluke Calibration (see Chapter 1).
Error 602	(DB) Data buffer overflow	Cause: Database buffer overflow. Solution: Cycle the power. If the error occurs again, contact Fluke Calibration (see Chapter 1).
Error 603	(DB) Data not available	Cause: Database empty. Solution: Cycle the power. If the error occurs again, contact Fluke Calibration (see Chapter 1).

Table 7-1. Error Messages (cont.)

Error Code	Error Message	Causes and Solutions
Error 651	USB memory not ready	Cause: USB memory is not ready for data record. Solution: You may have configured the record destination to USB, but the memory is not ready when recording is started.
Error 652	Data file limit exceeded	Cause: Too many data files were created for a scan. Solution: Start a new scan.
Error 653	Error creating record file	Cause: Failed to create file for data record. Solution: Make sure that the destination memory is not full.
Error 654	Error writing record file	Cause: Failed to write file for data record. Solution: Make sure that the destination memory is not full.
Error 655	Error resuming data record	Cause: Failed to resume the data record. Solution: Make sure that the destination memory is not full.
Error 656	Data record limit exceeded	Cause: Too many data records in internal memory (Max.1000). Solution: Remove some data records.
Error 657	Incorrect timestamp	Cause: RTC clock is reset. Solution: Set the instrument's date time setting.
Error 658	Record state damaged	Cause: The battery could have failed. Solution: Replace the battery.
Error 700	NV memory invalid	 Cause: The flash memory contains invalid Instrument setup, LAN setup, MAC setup or calibrate constants. Solution: Default settings will be loaded, if the MAC setup or calibrate constants show failed, Contact Fluke Calibration. See Chapter 1.
Error 701	NV invalid so default loaded	Cause: Default settings have been loaded. Solution: Cycle the power. If the error occurs again, contact Fluke Calibration (see Chapter 1).
Error 702	Error reading instrument setup	Cause: Internal flash is damaged. Solution: Cycle the power. If the error occurs again, contact Fluke Calibration (see Chapter 1).
Error 703	Error writing instrument setup	Cause: Internal flash is damaged. Solution: Cycle the power. If the error occurs again, contact Fluke Calibration (see Chapter 1).

Error Code	Error Message	Causes and Solutions
Error 704	Error reading calibration folder	Cause: Internal flash is damaged. Solution: Cycle the power. If the error occurs again, contact Fluke Calibration (see Chapter 1).
Error 705	Error reading calibration history	Cause: Internal flash is damaged. Solution: Cycle the power. If the error occurs again, contact Fluke Calibration (see Chapter 1).
Error 707	Error reading calibration constants	Cause: Internal flash is damaged. Solution: Cycle the power. If the error occurs again, contact Fluke Calibration (see Chapter 1).
Error 708	Error writing calibration constants	Cause: Internal flash is damaged. Solution: Cycle the power. If the error occurs again, contact Fluke Calibration (see Chapter 1).
Error 709	Error restoring LAN settings	Cause: Internal flash is damaged. Solution: Cycle the power. If the error occurs again, contact Fluke Calibration (see Chapter 1).
Error 710	Error writing LAN settings	Cause: Internal flash is damaged. Solution: Cycle the power. If the error occurs again, contact Fluke Calibration (see Chapter 1).
Error 711	Error setting MAC address	Cause: Internal flash is damaged. Solution: Cycle the power. If the error occurs again, contact Fluke Calibration (see Chapter 1).
Error 712	Error storing MAC address	Cause: Internal flash is damaged. Solution: Cycle the power. If the error occurs again, contact Fluke Calibration (see Chapter 1).
Error 800	Serial framing error	Cause: RS232 framing error Solution: Make sure that the PC and Instrument settings are the same.
Error 821	LAN port out of range	Cause: The LAN port < 1024 or > 65535. Solution: Check the port address and try again.
Error 822	Error opening LAN port	Cause: Error while opening LAN port. Solution: Cycle the power. If the error occurs again, contact Fluke Calibration (see Chapter 1).
Error 824	LAN port receive error	Cause: Error while reading LAN port. Solution: Check the LAN connection.

Error Code	Error Message	Causes and Solutions
Error 825	LAN address invalid	Cause: Invalid IP, mask or gateway address was found. Solution: Check the address and try again.
Error 826	LAN hostname invalid	Cause: The hostname contains invalid character. The Instrument only allows 'A' to 'Z', '0' to '9' and '-'. Solution: Check the parameter and try again.
Error 827	LAN hostname too long	Cause: More than 20 characters were found when configuring hostname. Solution: Check the parameter and try again.
Error 828	LAN connection timeout	Cause: The LAN connection has been disconnected. Solution: Check the LAN equipment and try to connect again.
Error 901	File not found	Cause: File not found for memory operation. Solution: Check to make sure the file is in the memory.
Error 903	Error exporting file	Cause: Failed while exporting file to USB memory. Solution: Make sure that the USB memory is not write protected and that the USB memory has enough free space.
Error 904	Error deleting file	Cause: Failed while deleting file. Solution: If you are delete file from USB memory, make sure that the USB memory is not write-protected.
Error 905	Error reading file	Cause: The file has been damaged. Solution: Cycle the power. If the error occurs again, contact Fluke Calibration (see Chapter 1).
Error 906	Error defining setup file name	Cause: Duplicate filename was found. Solution: Try another name or remove the file with the conflict.
Error 907	Error reading folder	Cause: Folder not exist. Solution: Make sure that the folder is in the memory.
Error 908	Error writing file	Cause: Failed while writing file. Solution: Make sure that the USB memory is not write protected and that the USB memory has enough free space.
Error 909	File already exists	Cause: The destination already exists while a file with the same name.Solution: Try another name or remove the file with the conflict.

Error Code	Error Message	Causes and Solutions
Error 910	File locations full	Cause: The number of setup file reaches the limit (99). Solution: Remove some setup files.
Error 1302	Bad parameter count	Cause: The number of parameter does not match the command. Solution: Check the parameter and try again.
Error 1305	Illegal parameter unit	Cause: Illegal parameter unit was specified in the command. The valid parameter unit is UV, MV, V, KV, UA, MA, A, OHM, KOHM, MOHM, GOHM, TOHM, HZ, KHZ, MHZ, GHZ, CEL, FAR. Solution: Check the parameter and try again.
Error 1313	Operation only allowed for service	Cause: The service only command was received while service mode is not activated. Solution: Enter service mode and try the operation again.
Error 1315	Invalid device trigger	Cause: An invalid bus trigger *TRG was received. Solution: Input Ctrl+T when input buffer is not empty.
Error 1317	Communication input buffer overrun	Cause: Input buffer overrun for communication. Solution: Cycle the power. If the error occurs again, contact Fluke Calibration (see Chapter 1).
Error 1320	Invalid binary data	Cause: An invalid binary data parameter was found in the command. Solution: Check the parameter and try again.
Error 1323	Invalid decimal data	Cause: An invalid decimal data parameter was found in the command. Solution: Check the parameter and try again.
Error 1326	Invalid hexadecimal data	Cause: An invalid hexadecimal data parameter was found in the command. Solution: Check the parameter and try again.
Error 1328	Invalid octal data	Cause: An invalid octal data parameter was found in the command. Solution: Check the parameter and try again.

Table 7-1. Error Messages (cont.)

Error Code	Error Message	Causes and Solutions
Error 1331	Command incomplete	Cause: An incomplete command line was received. Solution: Make sure that correct command was sent.
Error 1333	Invalid channel number	Cause: Invalid channel number was found by command parser. This could be caused by a wrong format. Solution: Check the parameter and try again.
Error 1334	Illegal channel count	Cause: The number of channels exceeds the limit when parse the channel list. Solution: Check the parameter and try again.
Error 1337	Operation not allowed	Cause: Operation is not allowed for current configuration, and the channel is not in scan list. Make sure that you have input the command with correct parameters and channel ID. Solution: Check the parameter and try again.
Error 1338	Operation not allowed in DMM mode	Cause: Operation is not allowed in DMM mode. Solution: Use command *RST to reset to factory default.
Error 1339	Memory is empty	 Cause: Command DATA:LAST? or DATA:READ? was received, but data is not available. Solution: Check the trigger settings, and make sure that the Instrument is properly triggered for scan.
Error 1340	File name too long	Cause: More than 30 characters were found in filename which specified in command MEM:LOG:READ? or MMEM:LOG:READ? Solution: Check the parameter and try again.
Error 1341	Scan sweep in process	Cause: Operation not allowed while scan is in progress. Solution: Send command ABORt to stop the scan.
Error 1601	Error copying file	Cause: File coping failed while running SYSTem:DFU command because source is missing. Solution: Check to see if the file is in the memory.
Error 1602	Error modifying file property	 Cause: Failed to change file property while running SYSTem:DFU command. Solution: Cycle the power. If the error occurs again, contact Fluke Calibration (see Chapter 1).

Troubleshooting

In the event that the Product functions abnormally, Table 7-2 can help find and solve the problem. Several possible problem conditions are described with likely causes and solutions. If a problem occurs, please read this section carefully and attempt to understand and solve the problem. If the Product seems faulty or the problem cannot otherwise be solved, contact an Authorized Service Center for assistance, see Chapter 1. Be sure to have the instrument model number, serial number, and regional voltage available to tell the Service Technician.

Problem	Causes and Solutions
The Product does not	Cause 1: Fuses.
power on.	Solution 1: If a fuse blows, it could be because of a power surge or a component failure. Replace the fuse once. DO NOT replace the fuse with one of a higher current rating. Always replace the fuse with one of the same rating, voltage, and type. If the fuse blows a second time, it is likely caused by failure of a component part.
	Cause 1: Power Cord.
	Solution 1: Check that the power cord is plugged in and connected to the Product.
	Cause 2: AC mains power.
	Solution 2: Make sure the circuit that supplies power to the Product is on.
	Cause 3: Power entry is not properly set.
	Solution 3: Make sure the power entry setting is matching with the AC mains power supply rate.
LED lights are	Cause 1: The unit is standby mode (the power LED should be amber).
illuminated but the display is blank.	Solution 1: Press the Standby key on the front panel to exit the standby mode.
	Cause 2: Screen saver activated.
	Solution 2: Press any front panel key to exit the screen saver.
	Cause 3: Screen or unit is malfunctioning.
	Solution 3: Contact Fluke Calibration. See Chapter 1.
Input Module is not	Cause 1: Input Module not fully seated.
recognized.	Solution 1: Reinstall the Input Module and make sure it is fully seated in the slot.
	Cause 2: Relay card not installed.
	Solution 2: Make sure the relay card is installed.
	Cause 3: Input Module has failed.
	Solution 3: Contact an Authorized Customer Service Center.

Problem	Causes and Solutions
Cannot read USB drive.	Cause 1: USB drive not installed properly.
	Solution 1: Make sure the USB drive is fully inserted. The LED light will illuminate in less than 30 seconds.
	Cause 2: USB driver locked by application (LED lights always illuminated even if USB drive is not installed.)
	Solution 2: Cycle the power with the main power switch and insert the USB drive again.
	Cause 3: USB drive not recognized.
	Solution 3: Replace the USB drive.
	Cause 4: USB drive inoperative or damaged.
	Solution 4: Replace USB drive.
Product does not start	Cause 1: The Product is waiting to be triggered.
to scan after the scan is started.	Solution 1: Check the trigger type in the test setup and make sure the trigger is properly configured.
Product does not record	Cause 1: The Auto Recording feature is not turned on.
when I start a scan.	Solution: Manually push record to start recording or turn on Auto Recording in the test setup.
The Product starts with	Cause: The SRAM battery is dead.
default settings.	Solution: Contact Fluke Calibration. See Chapter 1.
Product is out of	Cause: The internal memory or USB drive is out of space.
memory.	Solution: Delete or transfer some files to free up memory.

Table 7-2. Troubleshooting Chart (cont.)